

# TRAILERABLE COVER KIT



P/N 2889107; 2890305

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.


## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## KIT CONTENTS

### NOTICE

Kit PN 2890305 for crew model is shown; Kit PN 2889107 is for three seat model.

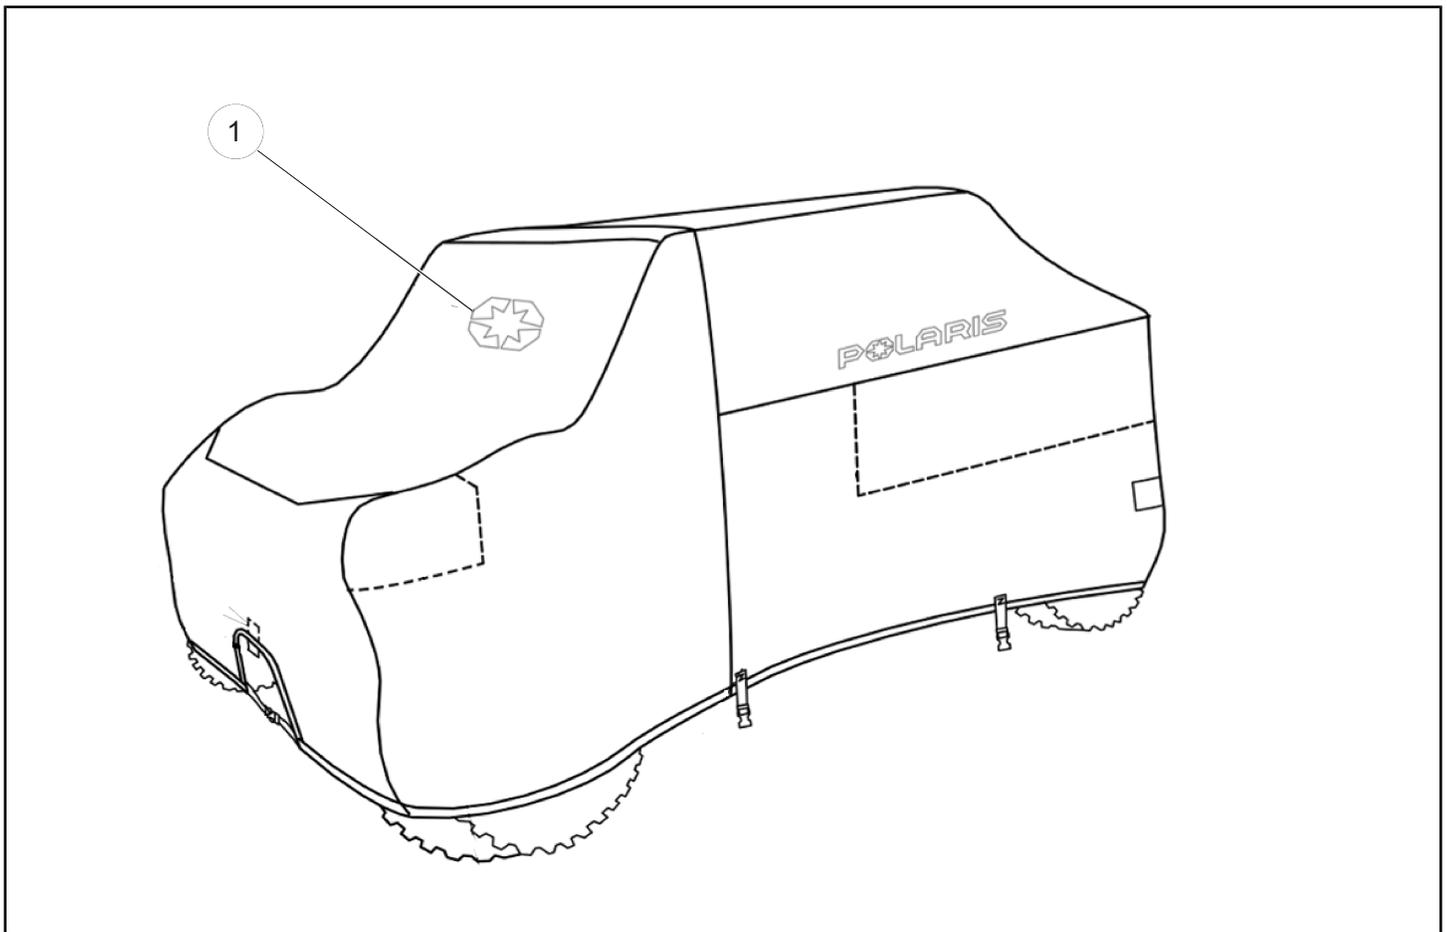

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Vehicle Cover	2889107

## IMPORTANT

Your Trailerable Cover Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

# INSTALLATION INSTRUCTIONS


## VEHICLE PREPARATION

### GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

### CHECK VEHICLE/COVER

1. Examine vehicle for any accessories that extend outside of ROPS or vehicle body to ensure proper fit of cover and prevent damage. Remove or stow accessories and/or install padding as necessary.
2. Make sure exterior of vehicle is clean. Transporting a dirty vehicle with cover installed may damage vehicle finish.
3. If not already done, temporarily stow ratchet **A** at left rear corner of cover by folding over and securing flaps with hook and loop strips.

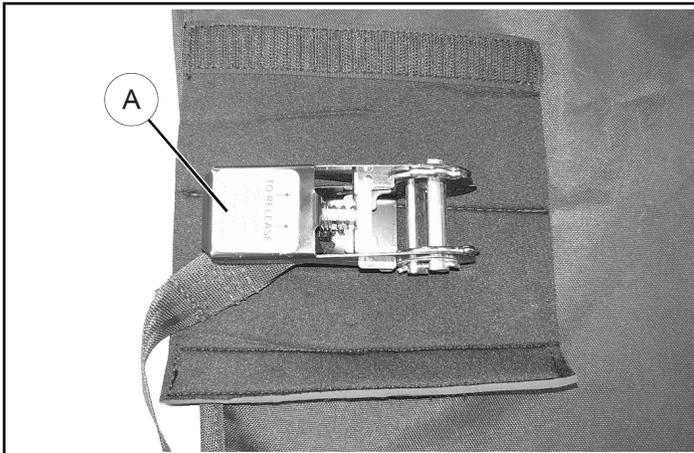

### ACCESSORY INSTALLATION

#### **⚠ WARNING**

Do not install cover immediately after operating vehicle. Let vehicle sit until exhaust components are no longer hot. Hot exhaust can melt fabric on cover.

#### **⚠ WARNING**

If transporting vehicle in non-enclosed trailer then vehicle must **FACE FORWARD**, or cover must be removed.

Failure to comply may allow airflow, vibration, or other factors to separate cover from vehicle and cause an accident, resulting in serious personal injury or death.



1. Carefully put cover **1** over vehicle, pulling cover as far down over tires as possible.

#### IMPORTANT

Cover **MUST** be pulled down below lower surface of tires, and straps located **BELOW** lower tire lugs, to make sure cover stays in place during transport.

#### NOTICE


Exterior of cover has "FRONT" label; ratchet is located at left rear corner.  
*RANGER®* cover shown; *RANGER CREW®* similar.

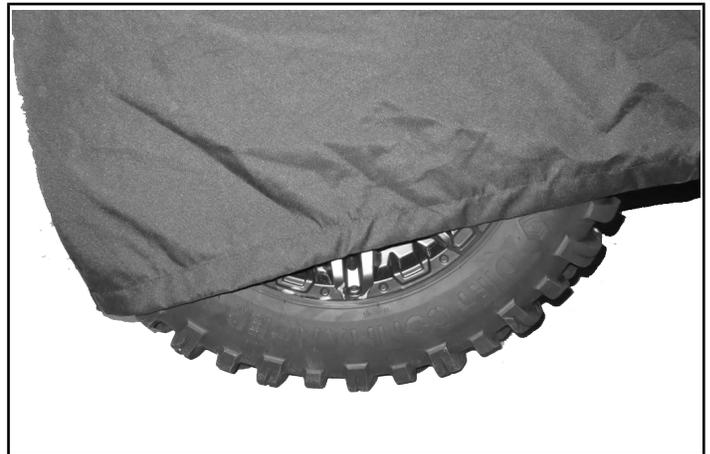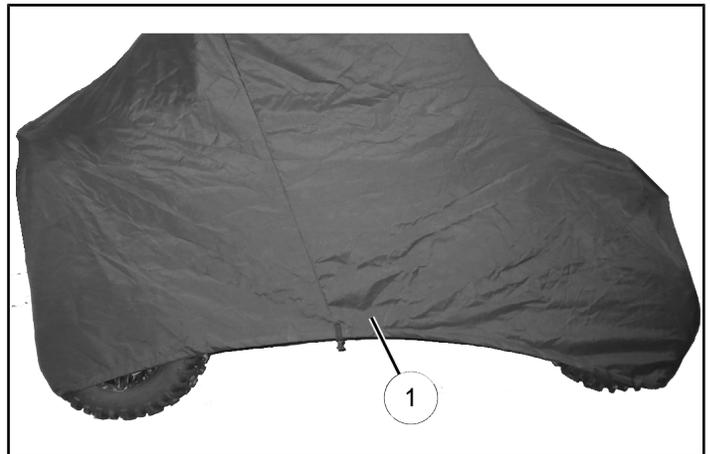


2. Attach front of cover by connecting buckles (B).

**NOTICE**


Left strap is sewn to edge of cover opening. Right strap is free to slide in cover pocket. Cover opening accommodates accessory winch or plow installation (sold separately).

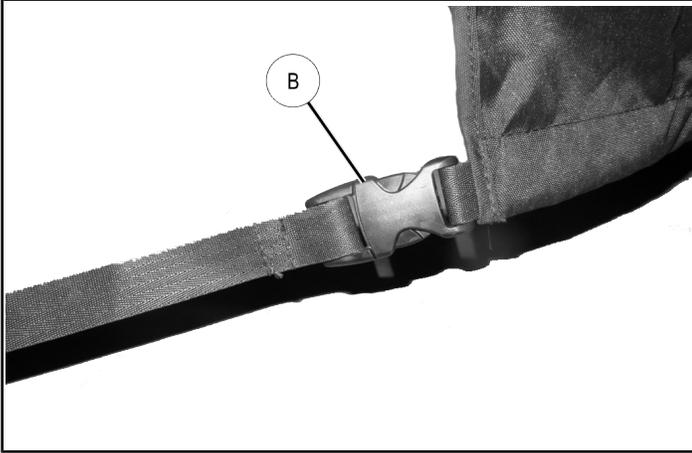


5. Pull right strap tight, then fold strap and put into ratchet (A) spool.

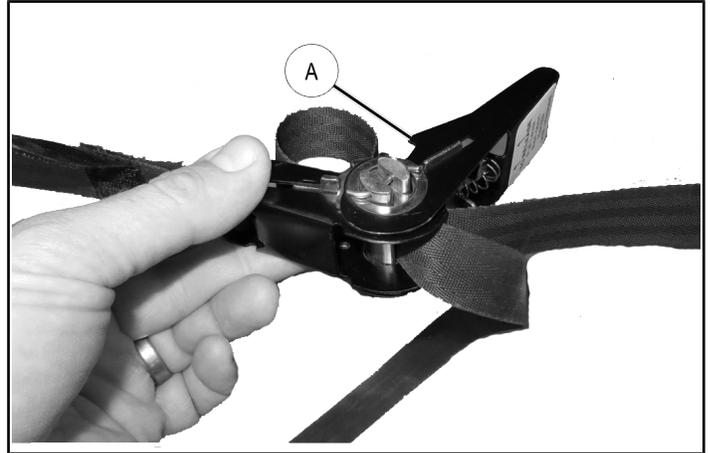


6. Operate ratchet mechanism until slack is removed, then EXAMINE ALL FOUR TIRES to make sure strap is positioned BELOW lower tire lugs as shown. Adjust as necessary.

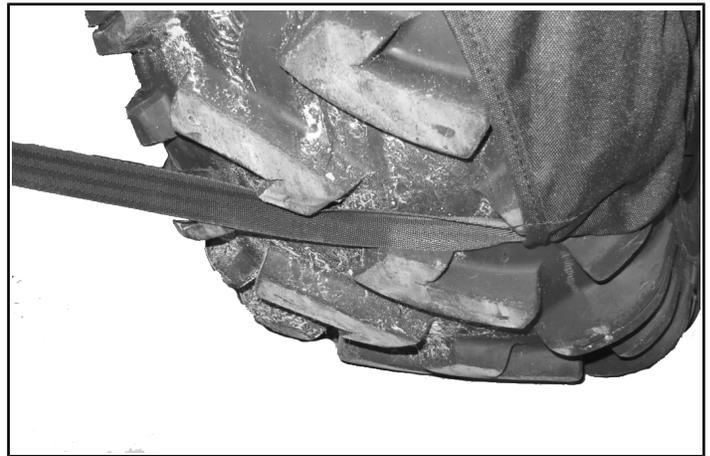



3. Partially close ratchet (A).

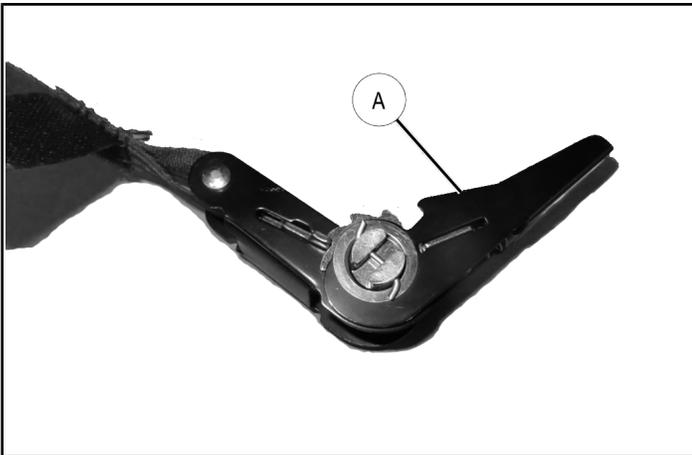

4. Put right strap through loop on end of center strap.

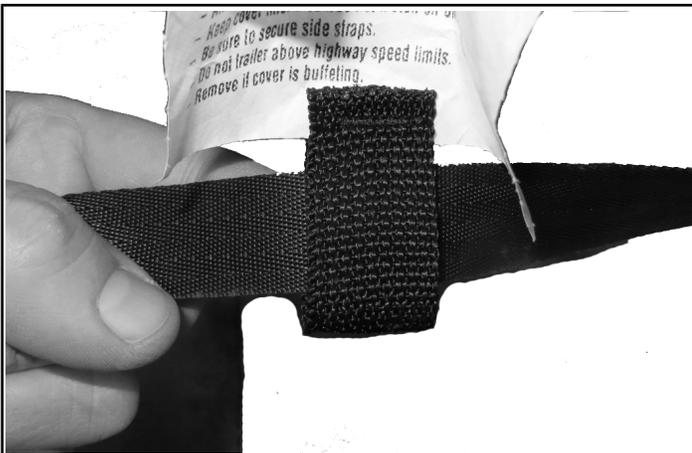


7. Make sure strap is tight enough to prevent it from slipping above tire lugs during transport, then fully close ratchet lever (A).

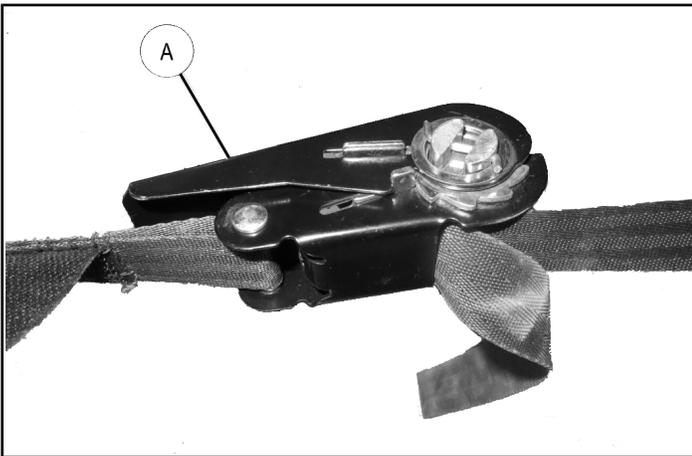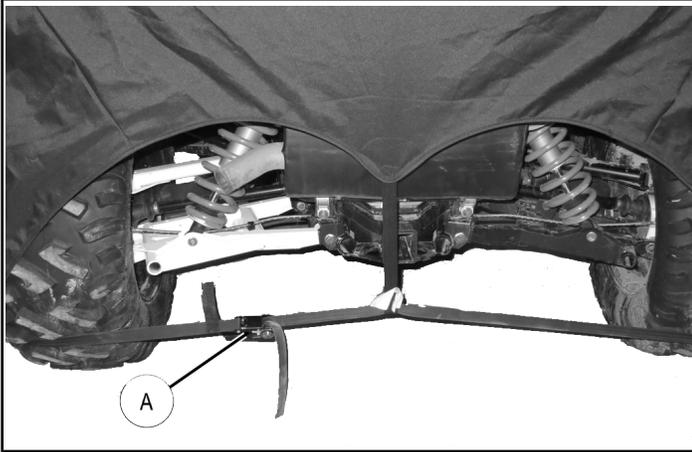

8. Make sure middle of cover by connecting male buckles (D) on each end of center strap to female buckles (C) sewn into cover. Tighten strap as required, then make sure strap is not in contact with sharp vehicle structure.

**NOTICE**

*RANGER CREW*<sup>®</sup> cover has two center straps, center front and center rear. Do the same for both center straps

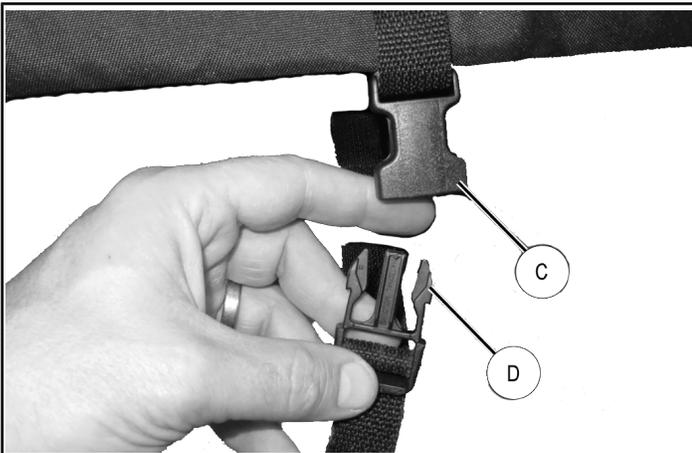

9. Make sure fuel filler zipper is fully closed.

**NOTICE**

If the cover is moving a lot during transportation, then remove or adjust cover.

**NOTICE**

When removing cover, stow ratchet.