RANGER RZR Air Filter Kit

PN: 1240482

Before you begin, read the instructions and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

This kit includes:

QTY	Description	Part Number
1	Filter-Air, 760	7081566
1	Foam-Filter, End	5813299
1	Ring-Filter	5437936
1	Instructions	9922274

You will need to supply:

Clean shop towel / rag

Polaris Premium All Season Grease or equivalent

Air Filter Installation

1. Open the air box located just above the rear LH wheel. Inspect the cover seal. It should adhere tightly to the cover and seal all the way around.

2. Remove the filter/pre-filter assembly. Discard the filter ring and pre-filter if installed. Discard the main air filter element.

3. Thoroughly clean the inside of the air box with a clean shop towel/rag.

CAUTION: DO NOT USE COMPRESSED AIR TO CLEAN THE AIR BOX.

4. Verify the filter-end foam piece is installed on the new filter.

5. Apply a thin coat of Polaris Premium Grease to the seal surfaces of the filter and the air box cap seal.

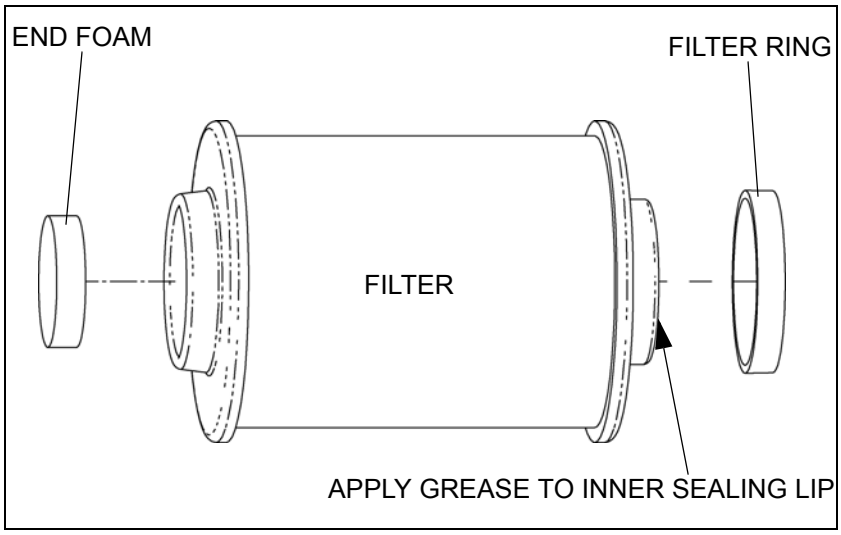

6. Place the filter ring over the end of the new filter, and then install new filter into the air box. Verify the filter fits tightly into the air box.

7. Install air box cap and secure clips.