

LOW PROFILE ROCK SLIDER KIT



P/N 2879498-XXX, 2881587-XXX

APPLICATION

All RZR XP® two-passenger models


Verify accessory fitment at [Polaris.com](https://www.polaris.com).

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

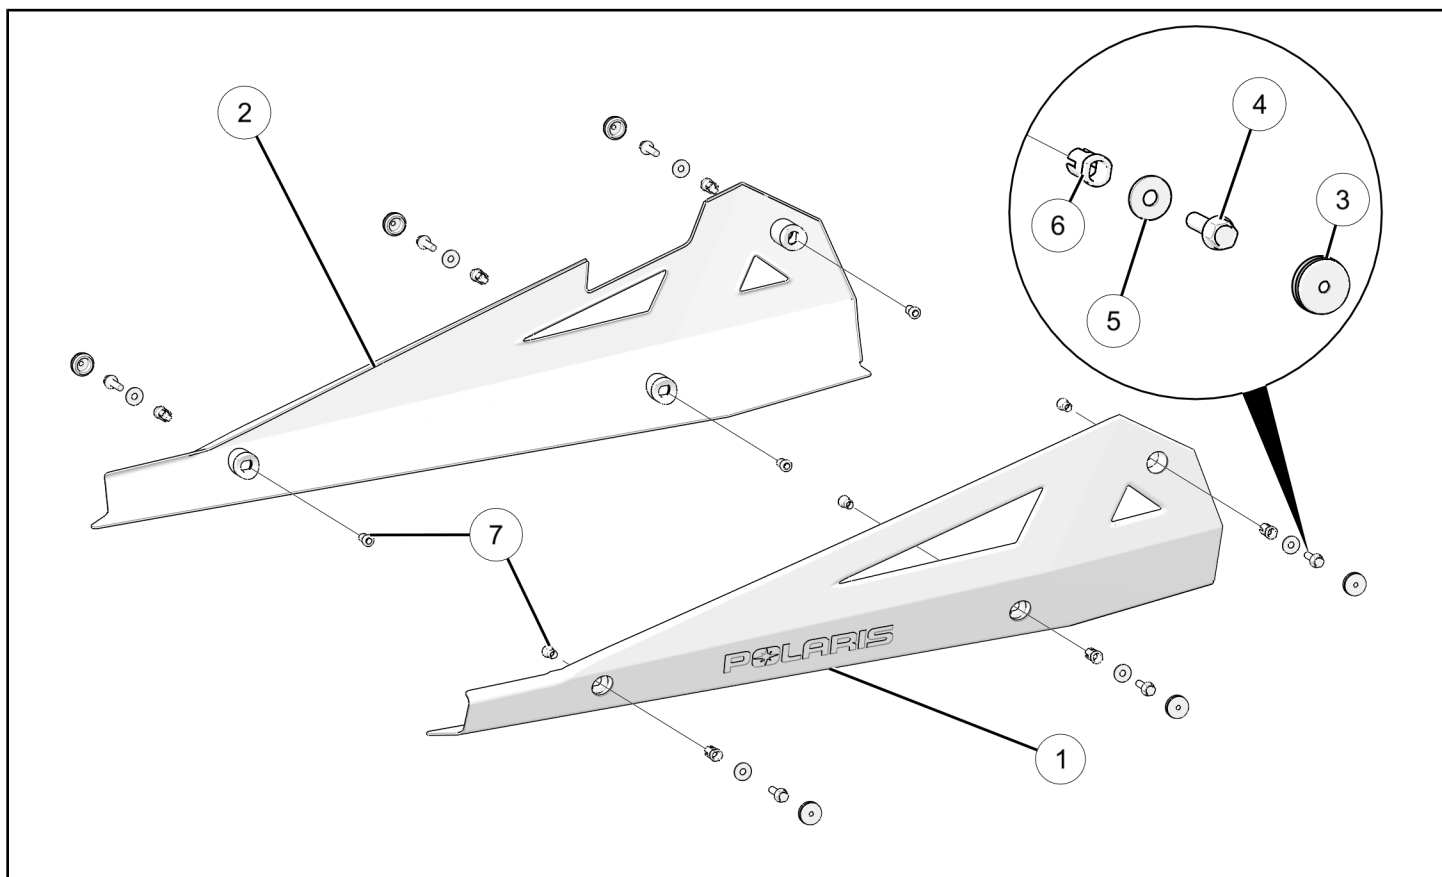

REF	QTY	PART DESCRIPTION	PART NUMBER	INCLUDED IN HARDWARE KIT
1	1	Low Profile Rock Slider, LH	-	-
2	1	Low Profile Rock Slider, RH	-	-
3	6	End Cap	-	2205116
4	6	Screw, Hex Flange, M8 X 1.25 X 30	-	2205116
5	6	Washer, 0.327 X . 875 X 0.090	-	2205116
6	6	Anchor, Expansion Tube	-	2205116

REF	QTY	PART DESCRIPTION	PART NUMBER	INCLUDED IN HARDWARE KIT
7	6	Wedge Anchor, Threaded	-	2205116
	1	Instructions	9924467	-

TOOLS REQUIRED

- Safety Glasses
- Pliers, Locking
- Socket Set, Metric
- Torque Wrench
- Wrench Set, Metric

IMPORTANT

Your Low Profile Rock Slider Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS



1. Shift vehicle transmission into **PARK**. Turn key to **OFF** position and remove from vehicle.
2. Ensure vehicle is parked on flat surface and is stable prior to installation.

INSTALLING ROCK SLIDERS

1. Align three expansion anchors ⑥ within rock slider mounts ①. Secure three expansion anchors ⑥ by aligning with flat faces of three wedge anchors ⑦, placed on opposite side of rock slider mount ①.

NOTE


Ensure flat faces of anchors and mounts align with each other.

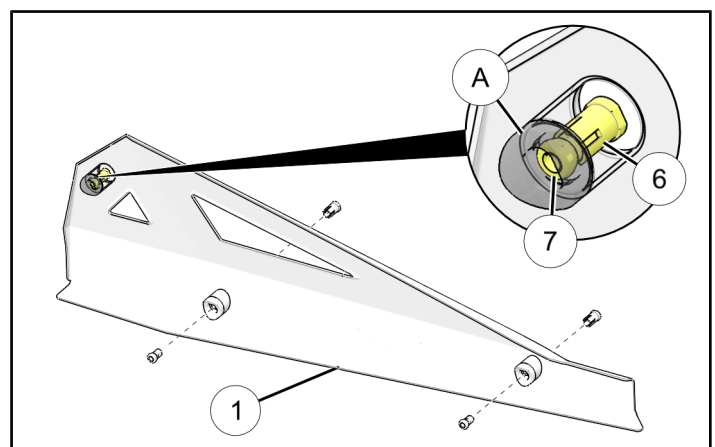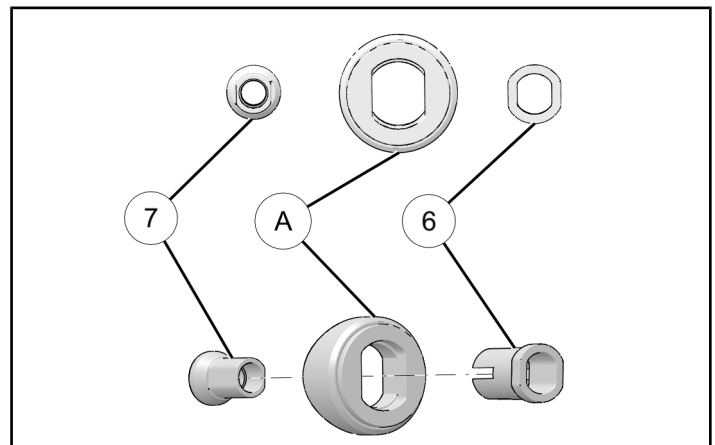

2. Guide LH rock slider ① into three mounting holes and hold flush against rocker panel.

NOTE

Ensure rock slider mounts are fully seated and aligned into frame holes.

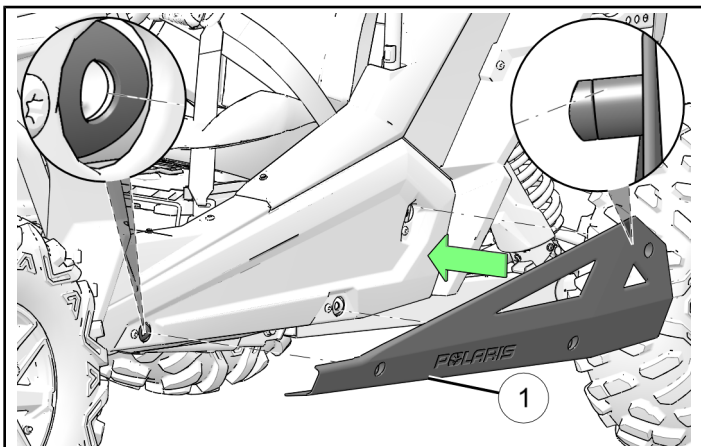

3. Secure LH rock slider ① to vehicle frame with three fasteners ④ and three washers ⑤.


NOTE

While tightening fasteners, ensure expansion tubes ⑥ are seated.


Torque three fasteners ④ to specification.

TORQUE

20 ft. lbs. (27 Nm)

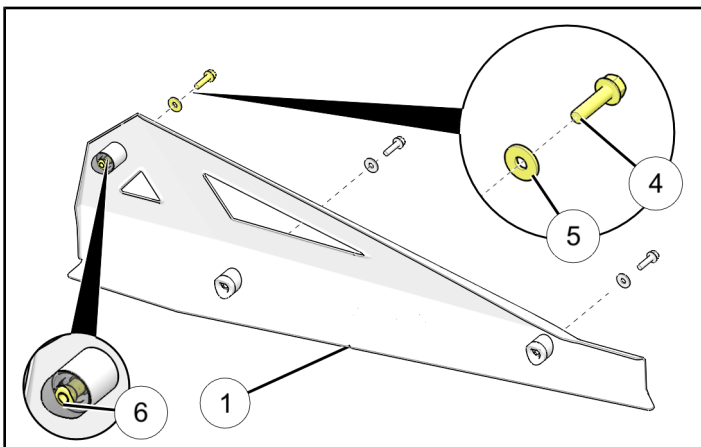

4. Firmly press three end caps ③ into fastener holes of rock slider ①.

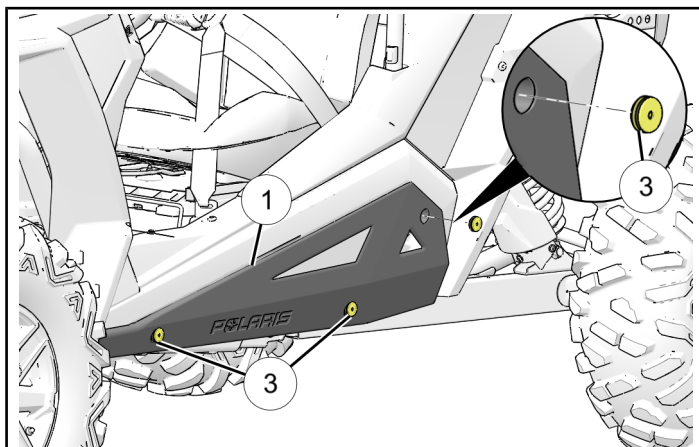


5. Repeat this section to install RH rock slider ②.

REMOVING ROCK SLIDERS


IMPORTANT

Hardware Kit (PN 2205116) is required to reinstall *Low Profile Rock Slider Kit*.

1. Remove and discard three end caps ③ from LH rock slider ①.

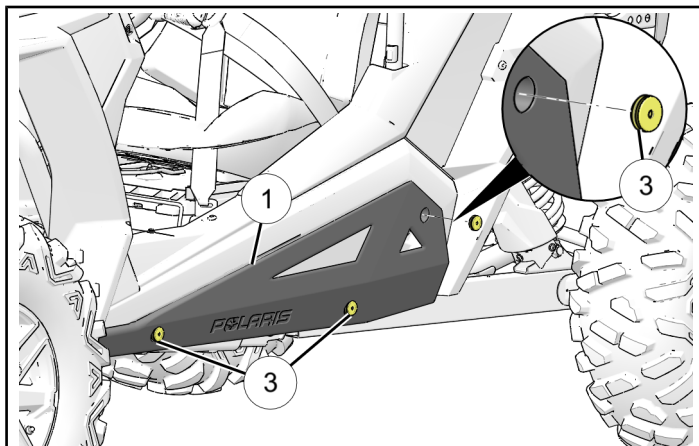

2. Remove and discard three fasteners ④ and three washers ⑤ to remove LH rock slider ①.

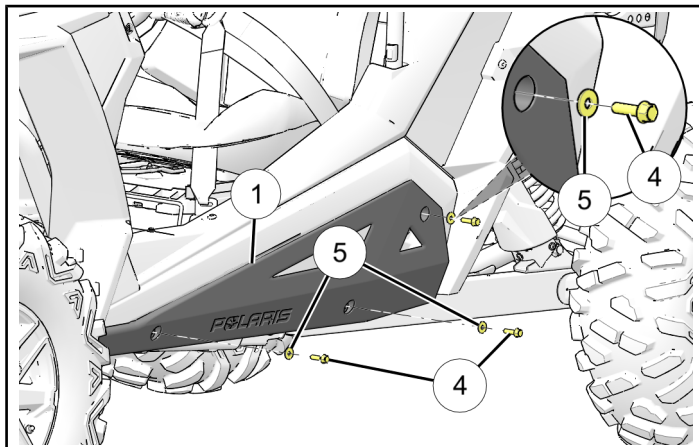

3. Remove expansion anchors ⑥ with pliers.

4. Repeat this section to remove RH rock slider ②.

NOTE

Expansion anchors ⑥ become distorted during installation and must be removed prior to reinstallation of ***Low Profile Rock Slider Kit***.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

