

# REAR PANEL KIT



**P/N 2879696; 2881774**

## APPLICATION

2879696 for use on MY14-16 ACE ETX and 570


2881774 for use on MY16 ACE 900 Models

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

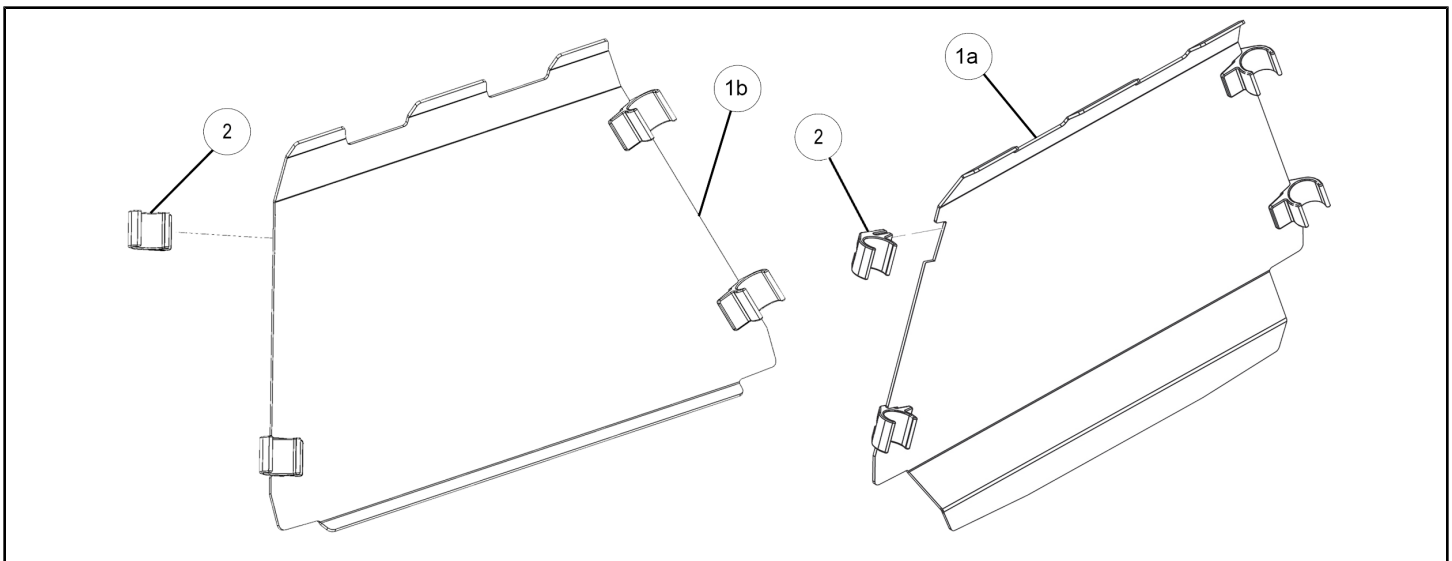

REF	QTY	PART DESCRIPTION	PART NUMBER
1a	1	Rear Panel (Kit PN 2879696)	-
1b	1	Rear Panel (Kit PN 2881774)	-
2	4	Retainer Clip	5450772
	1	Instructions	9924918

## TOOLS REQUIRED

- Safety Goggles

## IMPORTANT

Your REAR PANEL KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME

Approximately 10 minutes

## INSTALLATION INSTRUCTIONS

1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Push fit the rear panel assembly (1a) onto ROPS (A). Push on retainer clips (2) to make sure they are fully seated on ROPS tubes.

### NOTE

For ACE 900 models, the rear panel assembly (1b) does not extend as far into the cargo bed as shown because the cargo bed shape is slightly different.

