


FRONT UPPER AND LOWER DOOR LINER KIT

P/N 2879996; 2879432

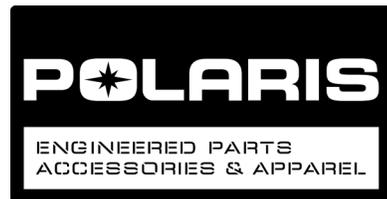


APPLICATION

RZR 900

BEFORE YOU BEGIN


Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

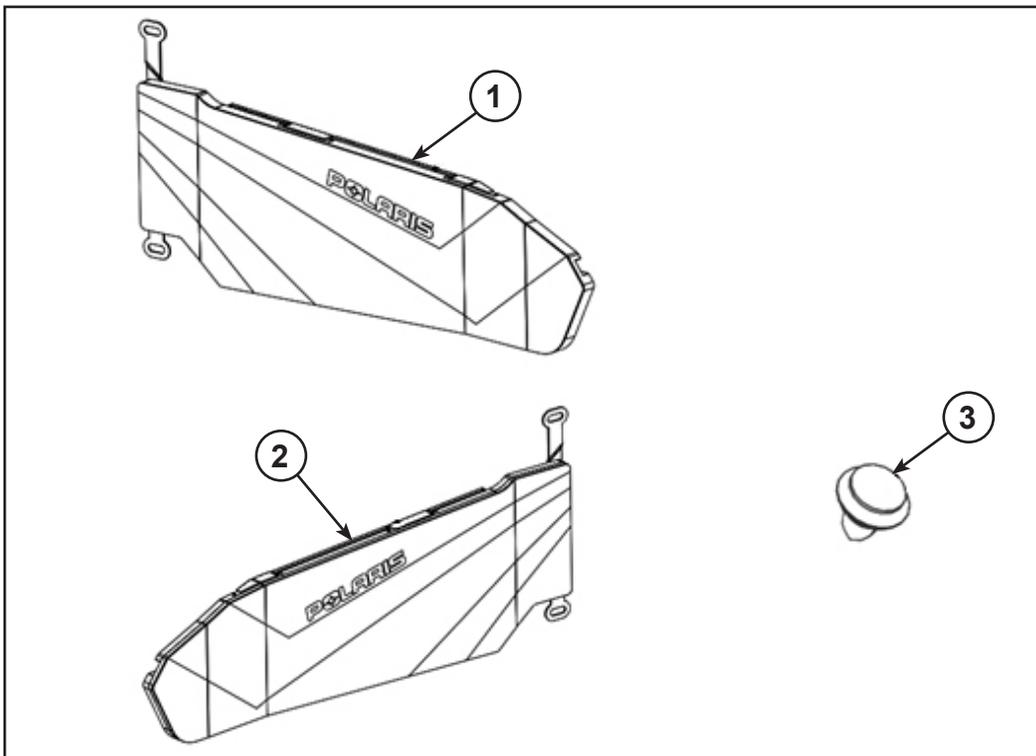

KIT CONTENTS (PN 2879996)

Ref	Qty	Part Description	Part Number
1	1	Upper Door Liner, LH, 50"	2686419
2	1	Upper Door Liner, RH, 50"	2686420
3*	10	Plastic Dart	-
	1	Door Liner, Template, LH	-
	1	Door Liner, Template, RH	-
	1	Instructions	9925316

ITEM MARKED (*) IS INCLUDED IN HARDWARE KIT PN 2205717.

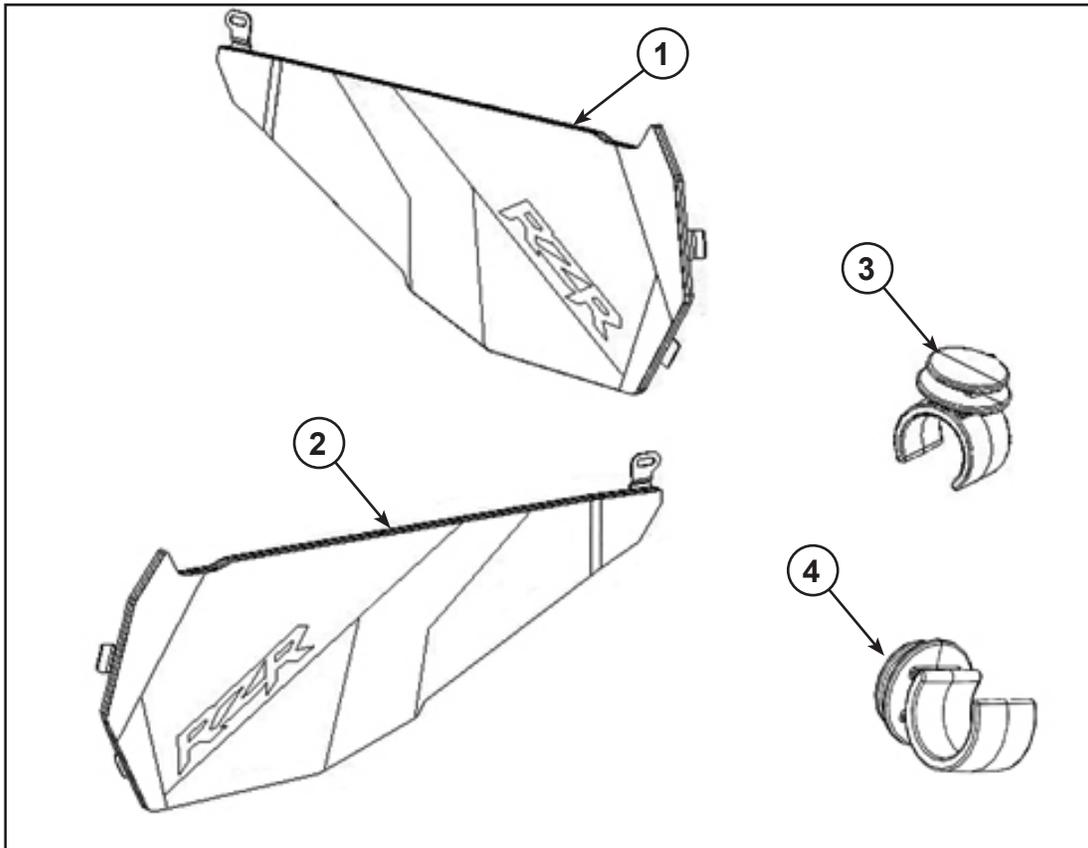

KIT CONTENTS (PN 2879432)

Ref	Qty	Part Description	Part Number
1	1	Lower Door Liner, LH, 50"	2686205
2	1	Lower Door Liner, RH, 50"	2686206
3*	10	Plastic Clamp	-
4*	2	Plastic Clamp, 90°	-
	1	Instructions	9925316

ITEM MARKED (*) IS INCLUDED IN HARDWARE KIT PN 2205715.

TOOLS NEEDED

Drill 11/32" Drill Bit Torx Wrench Set

APPROXIMATE ASSEMBLY TIME

15 min

IMPORTANT


Your Polaris FRONT UPPER AND LOWER DOOR LINER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS (PN 2879996)

1. Place the vehicle in “**PARK**”. Turn the key to “**OFF**” position and remove key from the vehicle.


2. Secure the driver’s side door liner template provided in the kit in three locations using existing screws on door. Drill the holes on the door stamping at five locations (See page 5 for template reference). **Wear safety glasses when drilling.** Figure 1.

IMPORTANT: Make sure to only drill through the stamping and not the plastic outer panel.

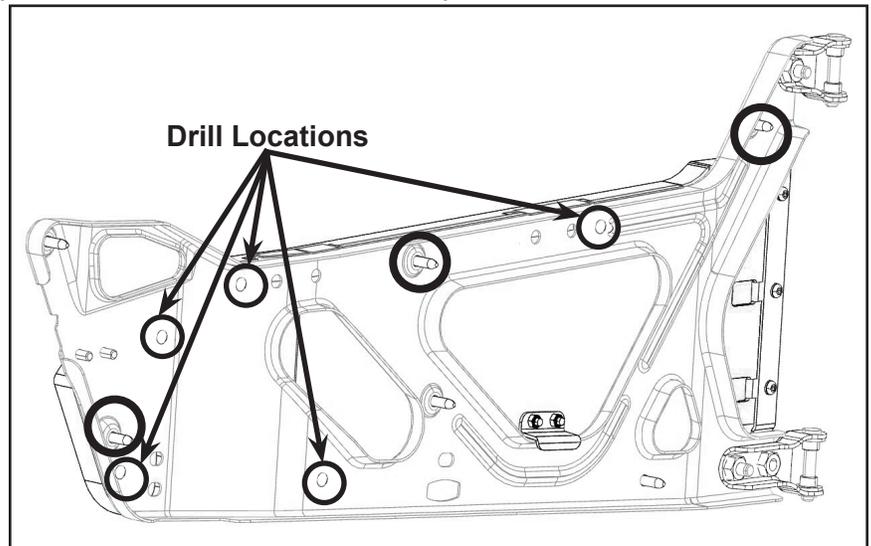


3. On the driver’s (LH) side, remove two screws (A) (one at the top and one at the bottom side) from the upper door hinge brackets as shown in figure. Retain the screws for reassembly.


NOTE: Support the door frame before removing top screw.

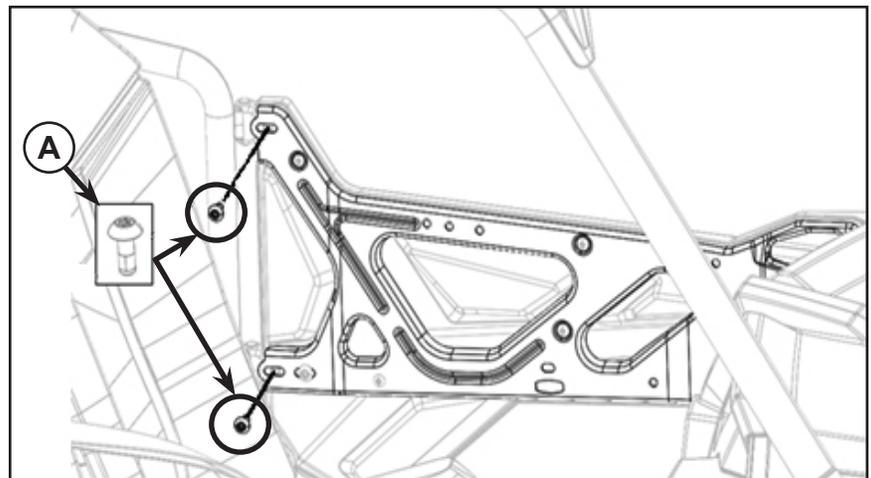

4. Align the LH door liner (1) to the upper door (B) assembly. See figure.


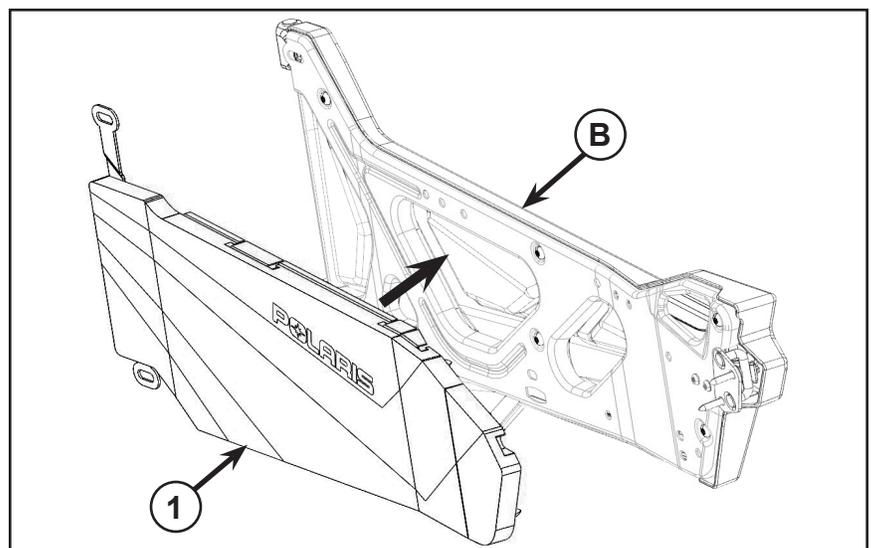


- Hook and fit the door liner into the door frame at the bottom until the liner bracket (C) fits snug inside the frame.
- Press the five plastic darts (3) into the holes of the door frame. Ensure that all darts are securely attached to the door frame. See figure.

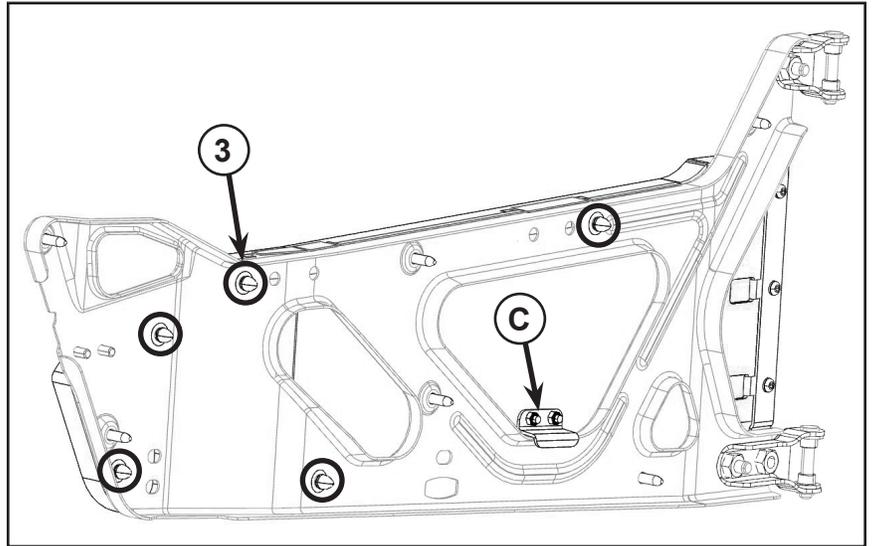

- Reinstall the two M8 screws (A) removed in Step 2 and attach the door liner on to the door hinge brackets as shown in figure. Tighten screws to torque of 16 ft. lbs. (21.8 Nm).



NOTE: Ensure latch keep in center on front of door frame while tightening the M8 screw. See Figure.

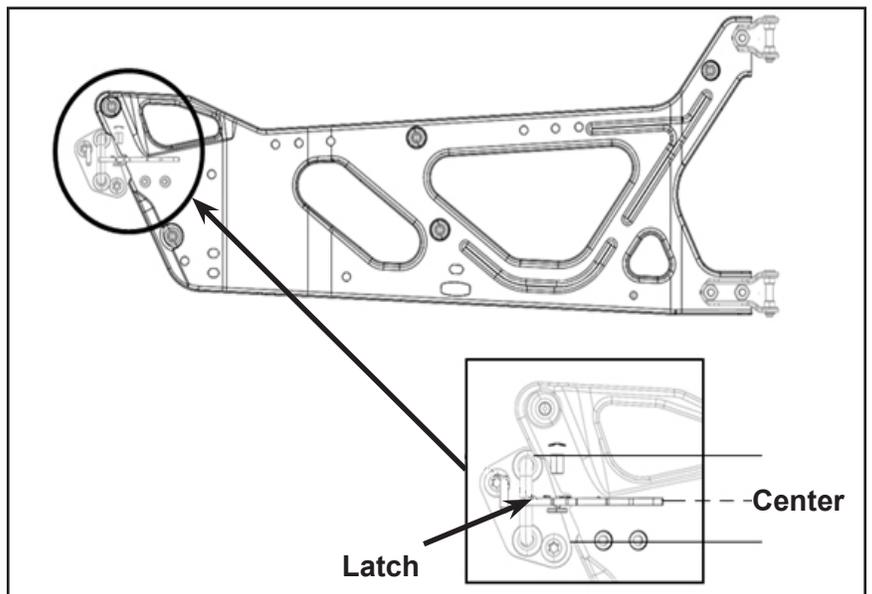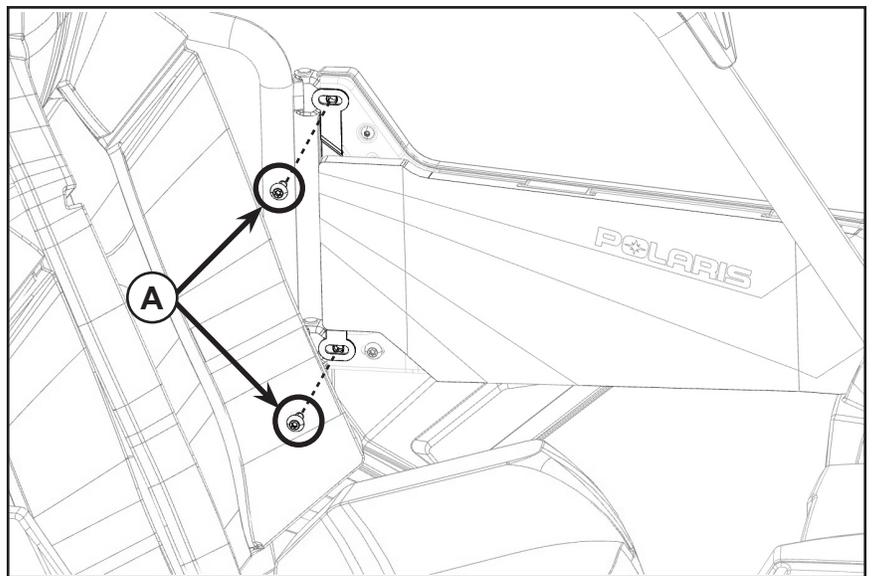

- Repeat Steps 2-6 on the passenger side to install RH upper door liner (2).

UPPER DOOR LINER TEMPLATE:


NOTE: Below figure are only for reference and they are not as per the actual size of template.

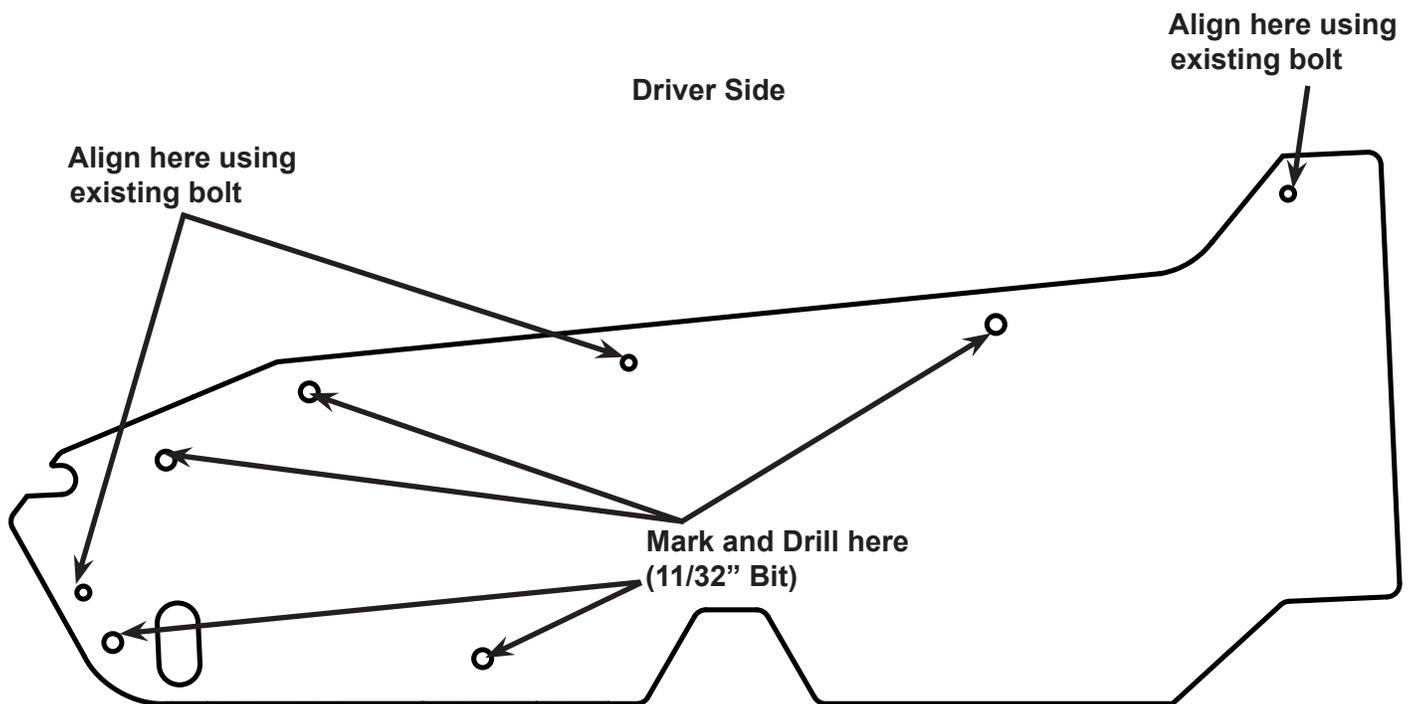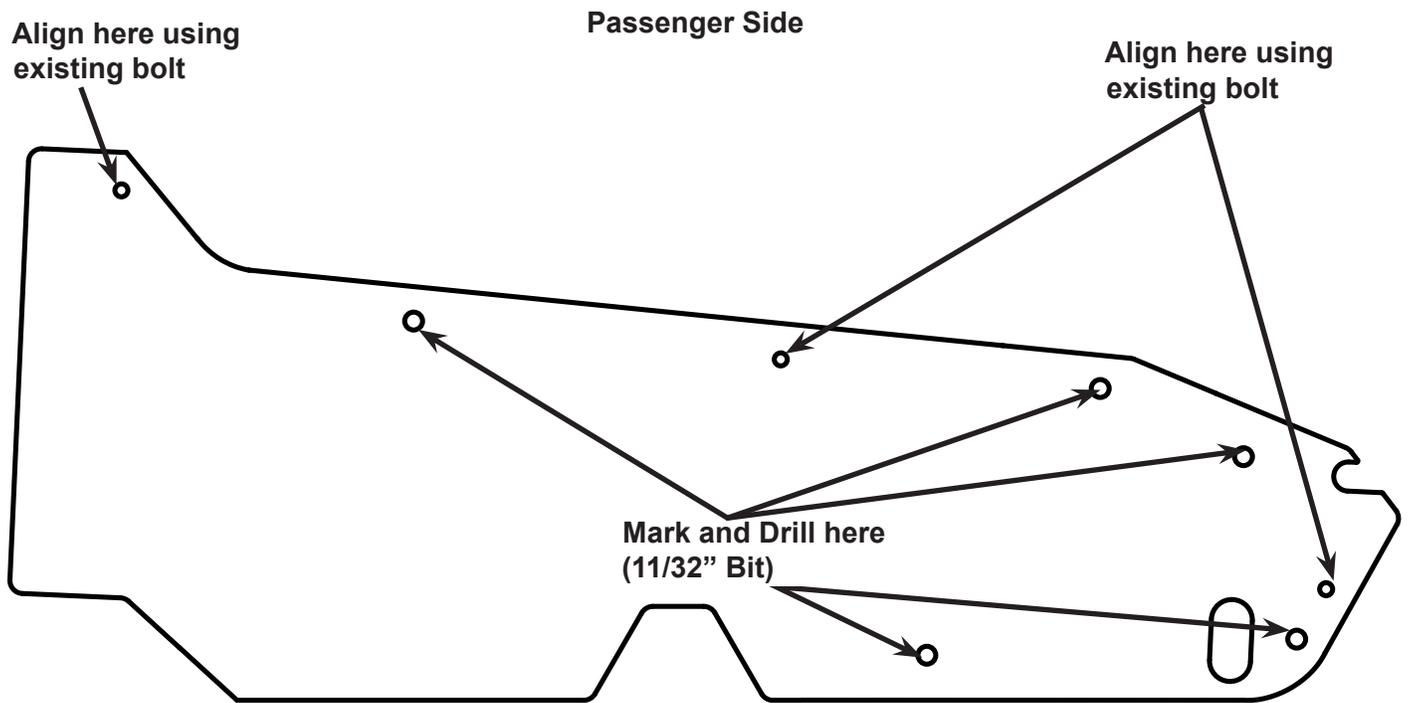


INSTALLATION INSTRUCTIONS (PN 2879432)

IMPORTANT: Prior to install **Lower Door Liner Kit (PN 2879432)**, you need to purchase and install **Lower Door Kit (PN 2879509)** on your vehicle.


8. On the driver's side, remove M8 screw (A) from front lower door (D) as shown in figure. Retain the screw for reassembly.

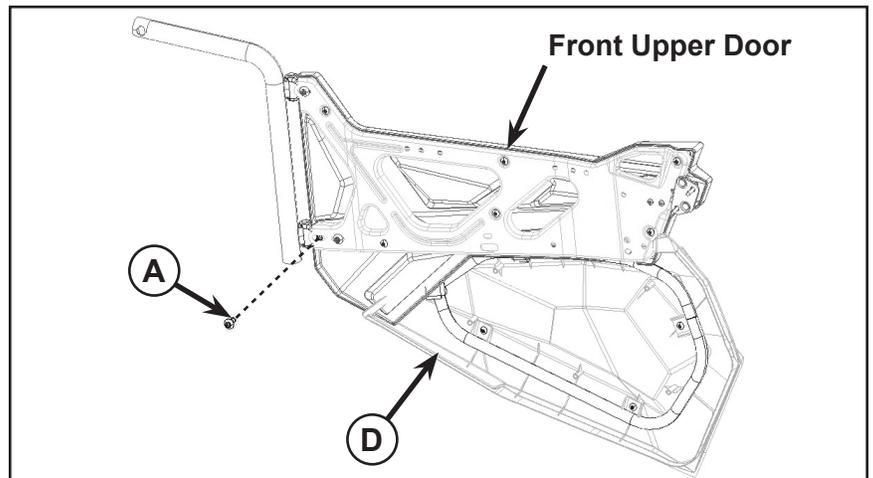


9. Align the LH door liner (1) to the front lower door assembly. See figure.

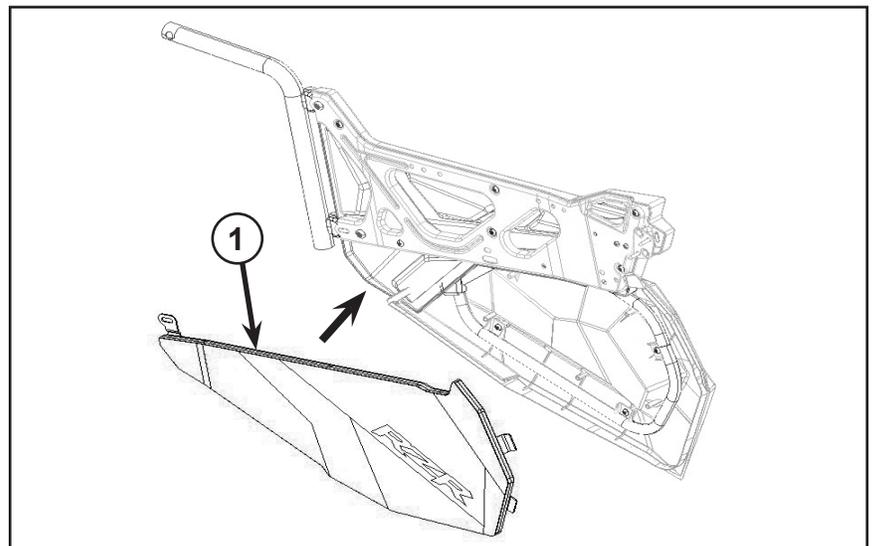


10. Slide the two rear clamps onto the frame rearwards. Ensure the rear upper 90 degree clamp must be snap to the frame by pivoting the liner, once the two rear clamps are in place. See figure.

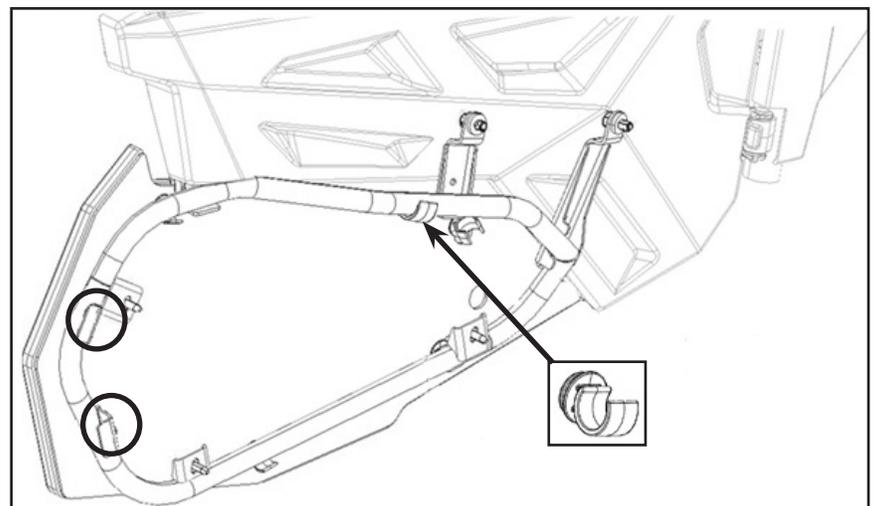

11. Press the liner to the door frame until the four plastic clamps (3) fits snug inside the frame. See figure.

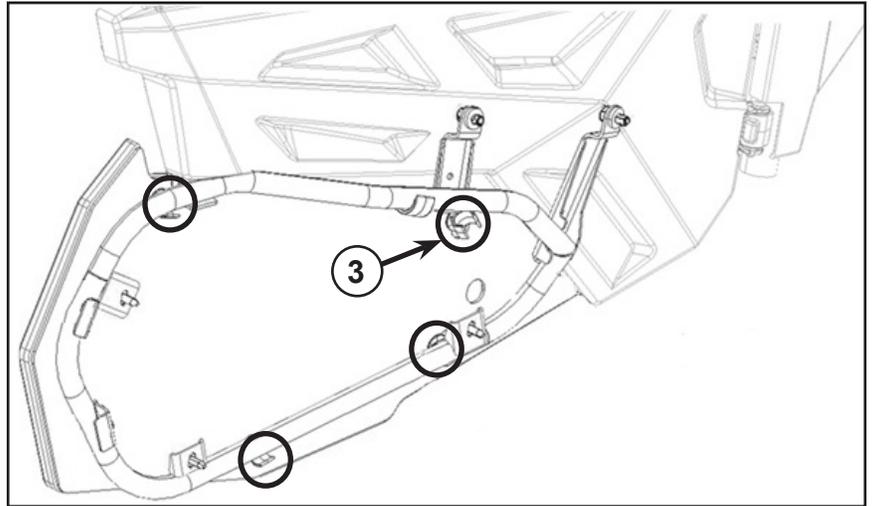

12. Reinstall the screw (A) removed in Step 8 and attach door liner (1) to hinge bracket. Tighten screw to torque of 16 ft. lbs. (21.8 Nm). See figure.

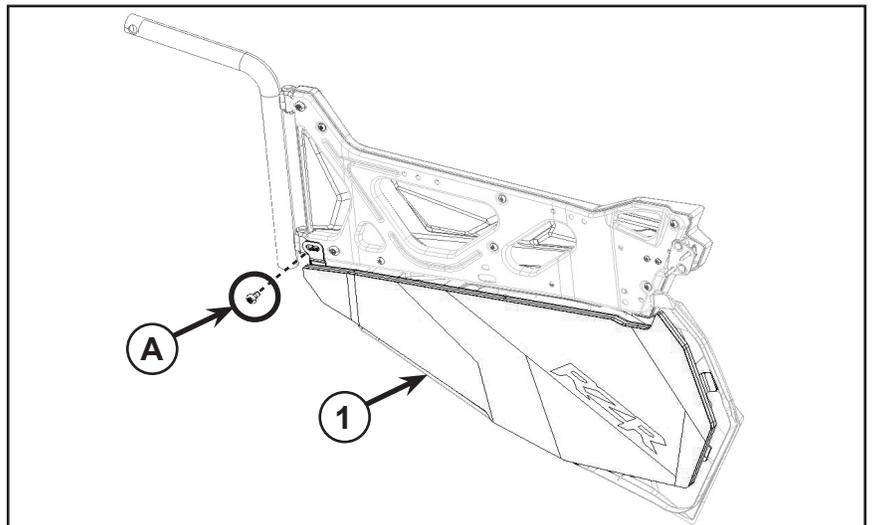

13. Repeat Steps 8-12 on the passenger side to install RH lower door liner (2).