

DOOR BAG KIT

P/N 2880612; 2880613

POLARIS

ENGINEERED PARTS
ACCESSORIES & APPAREL

APPLICATION

RZR 900 S

BEFORE YOU BEGIN

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.



KIT CONTENTS (PN 2880612)

Ref	Qty	Part Description	Part Number
1	1	Upper Front Door Bag-60, LH	2635598
2	1	Upper Front Door Bag-60, RH	2635599
	1	Instructions	9925506



KIT CONTENTS (PN 2880613)

Ref	Qty	Part Description	Part Number
1	1	Lower Front Door Bag - 60, LH	2635600
2	1	Lower Front Door Bag - 60, RH	2635601
	1	Instructions	9925506

TOOLS NEEDED

Torx Wrench

APPROXIMATE ASSEMBLY TIME

15 mins


IMPORTANT

Your Polaris DOOR BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.



INSTALLATION INSTRUCTIONS

For Kit PN 2880612


1. Place the vehicle in **"PARK"** and turn the key to **"OFF"** position. Remove the key from the vehicle.
2. On the passenger side, remove the plastic door by removing screws (A) at six locations as shown in figure.

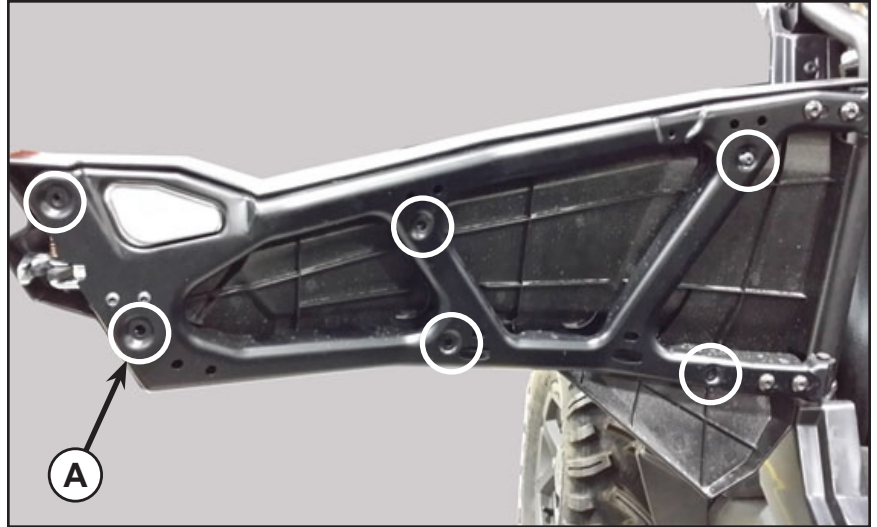

3. Place the RH side upper front door bag (PN 2635599) on the door stamping and hook the four plastic hooks (B) on top and one hook (C) on the side as shown in figures.

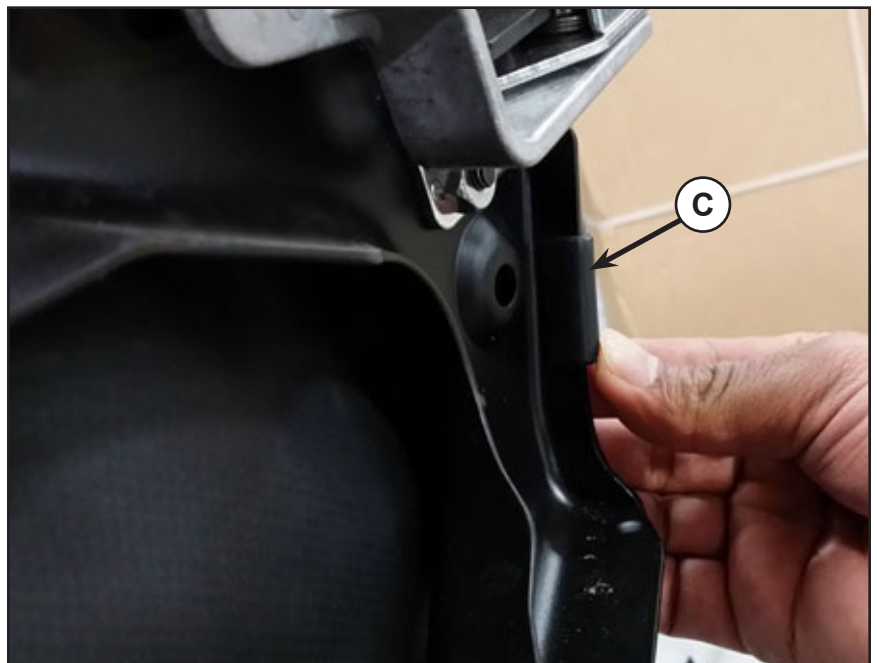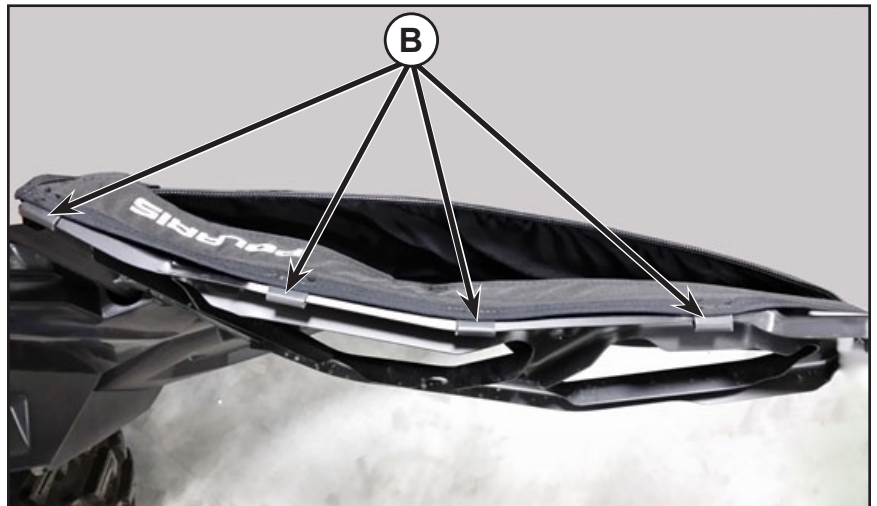

4. Wrap and tie the Velcro (D) to the door stamping at three places as shown in figure.

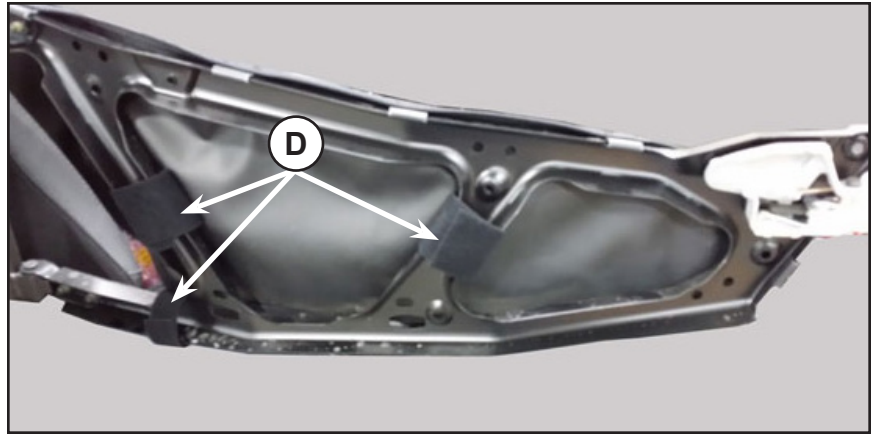

5. Reinstall the plastic door and attach six screws removed in the Step 1.


NOTE: The four screws (E) need to be installed inside the upper door bag through the provided holes as shown in figure.



6. Repeat the Steps 1-4 to install the LH side upper front door bag (PN 2635598).

For Kit PN 2880613

1. On the passenger side lower door, place the RH side lower front door bag (PN 2635601) on the door stamping and hook the three plastic hooks (F) on top as shown figure.

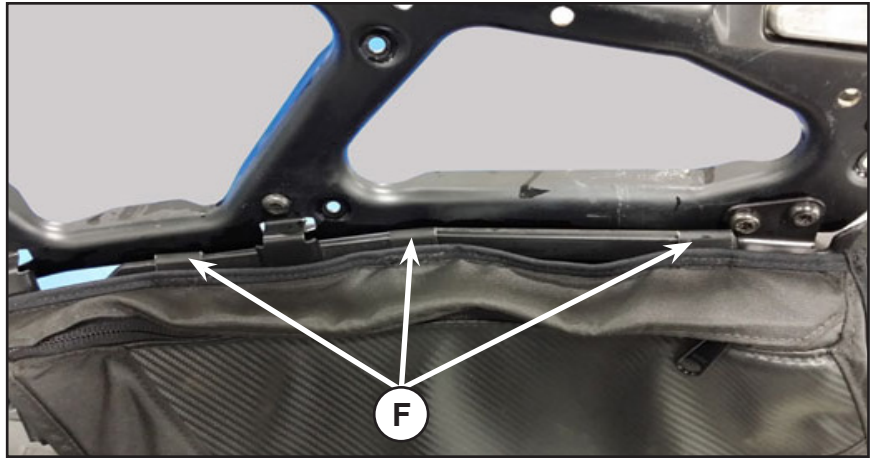

2. Wrap and tie the Velcro (G) to the door stamping at three places as shown in figure.



3. Repeat the Steps 1-2 to install the LH side lower front door bag (PN 2635600).