

LOW HEATED GOGGLE BAG KIT




P/N 2880481

APPLICATION

PRO FIT

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

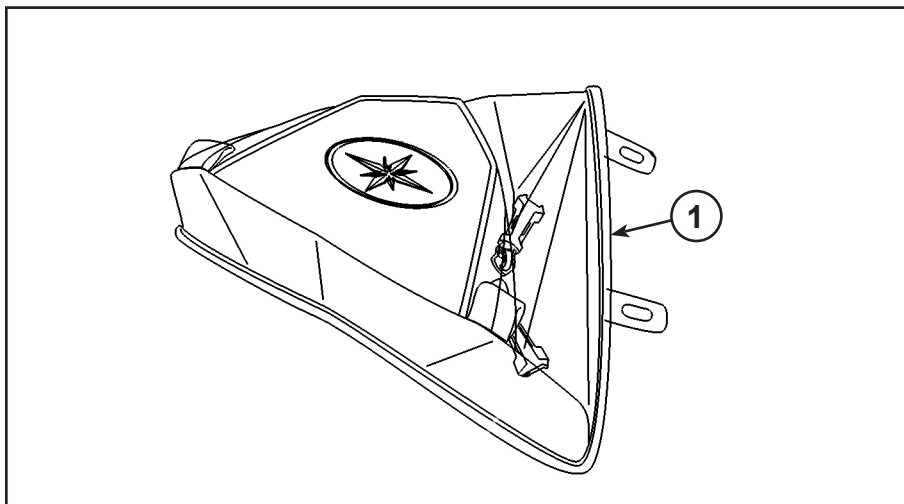

KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Windshield Bag	2880481
	1	Instructions	9925555

TOOLS NEEDED

Side Cutter or other Suitable Tool

APPROXIMATE ASSEMBLY TIME

2 mins


IMPORTANT

Your Polaris LOW HEATED GOGGLE BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


NOTE: Do not carry sharp or pointed objects. Maximum carrying capacity 2 lbs. (8.9 N).

INSTALLATION INSTRUCTIONS


1. With a side cutter or other suitable tool carefully pry out each of the four center pins from the windshield fasteners. Remove fastener ((A), quantity 4) from windshield trim and windshield. Remove windshield from vehicle as shown in figure. Save fasteners for reassembly.

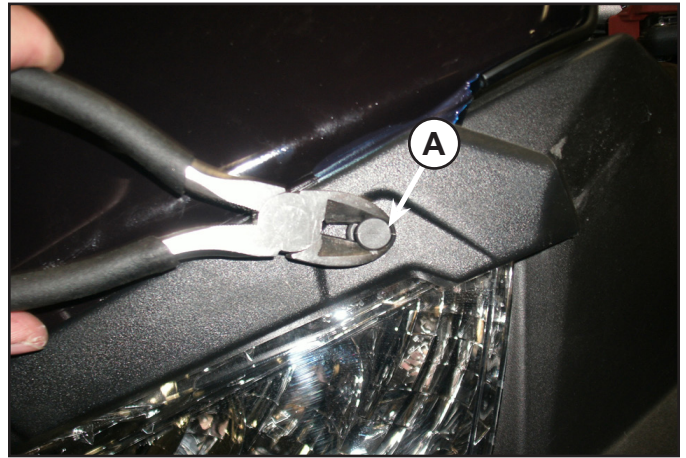

2. Remove hood storage compartment cover (B) from hood as shown in figure. Safely store cover for future use.

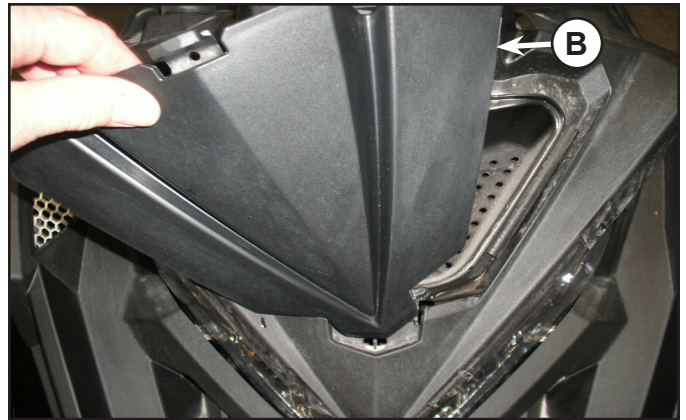

3. Place bag (1) on hood with pouch (C) inserted into storage compartment as shown in figure.

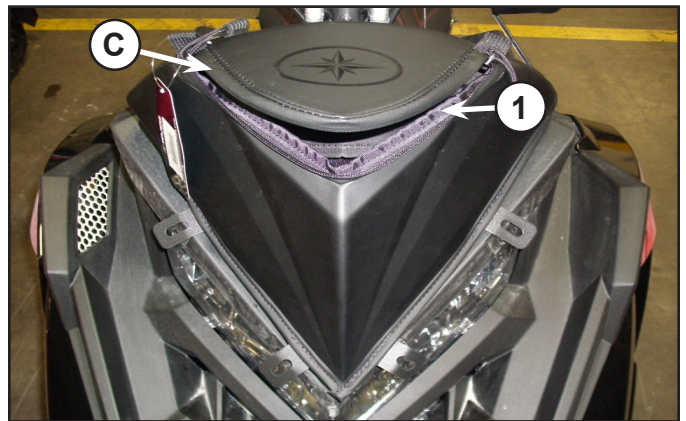

4. Align tabs on bag with the mounting holes in the windshield and windshield trim. Install windshield fasteners (A) through windshield trim, windshield, tabs on bag and through the mounting holes in the hood. Push locking pins into windshield fasteners to lock in place as shown in figure.

