

HANDGUARD MOUNT KIT



P/N 2881241

APPLICATION


MY16 and Newer PRO RMK, Assault and SKS

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

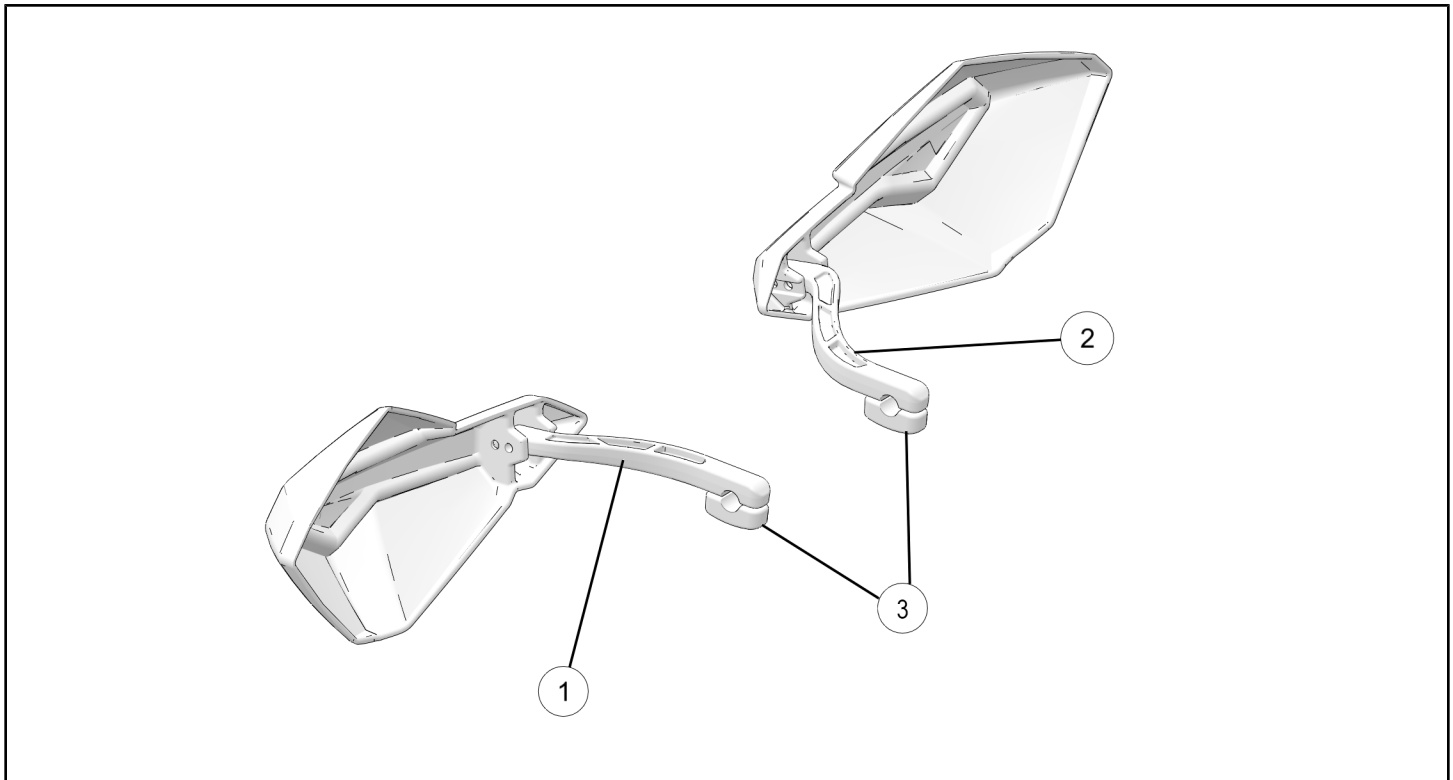

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Top Handguard Mount, LH	5139930
2	1	Top Handguard Mount, RH	5139931
3	2	Bottom Handguard Mount	5140682
	1	Instructions	9926326

TOOLS REQUIRED

- 4 mm Hex Wrench

IMPORTANT


Your HANDGUARD MOUNT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 10 minutes

INSTALLATION INSTRUCTIONS


1. Match up the correct LH top mount ① with the LH guard (A). The mount is designed so that the clamp goes on the underside of the mountain hoop crossbar.
2. Install the top mount ① to handguard (A) by inserting the mount at an angle so that the peg can install in the hole closest to the face of the guard.
3. Pivot the mount so that it falls naturally into the slot of the handguards.
4. Rotate the mount so that rearward holes line up with the second set of holes in the handguards. Line up nut plate to the slot of the inboard mount and install the 35 mm long screw (B) and star washer (C) from the outboard side. Tighten the nut plate.
5. Mount assembly to the mountain hoop crossbar in desired position and secure bottom mount with two 15mm long screws. Torque screws to specification.

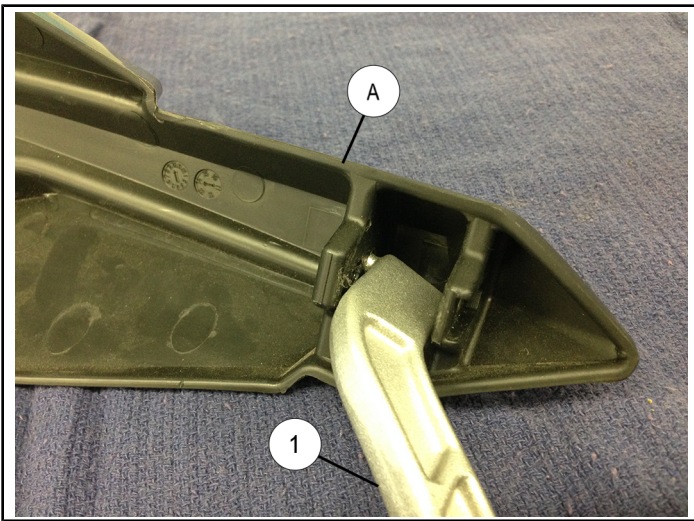

3. Pivot the mount so that it falls naturally into the slot of the handguards.



TORQUE
4 ft. lbs. (5.4 Nm)

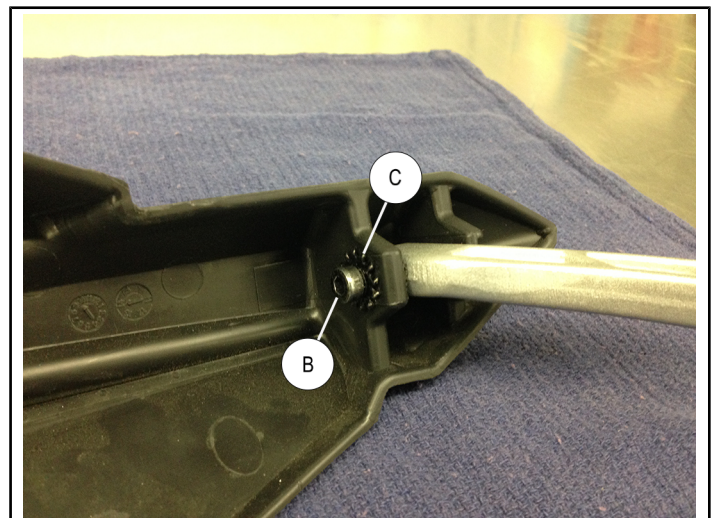

6. Repeat Step 1-5 to install RH top mount ② with the RH guard.