

# ACCESSORY CABLE KIT



**P/N 2881684**

## APPLICATION


All MY *RANGER* 400, *RANGER* 570 Midsize Models, MY11 and Newer *RANGER* 500 EXCEPT CREW

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

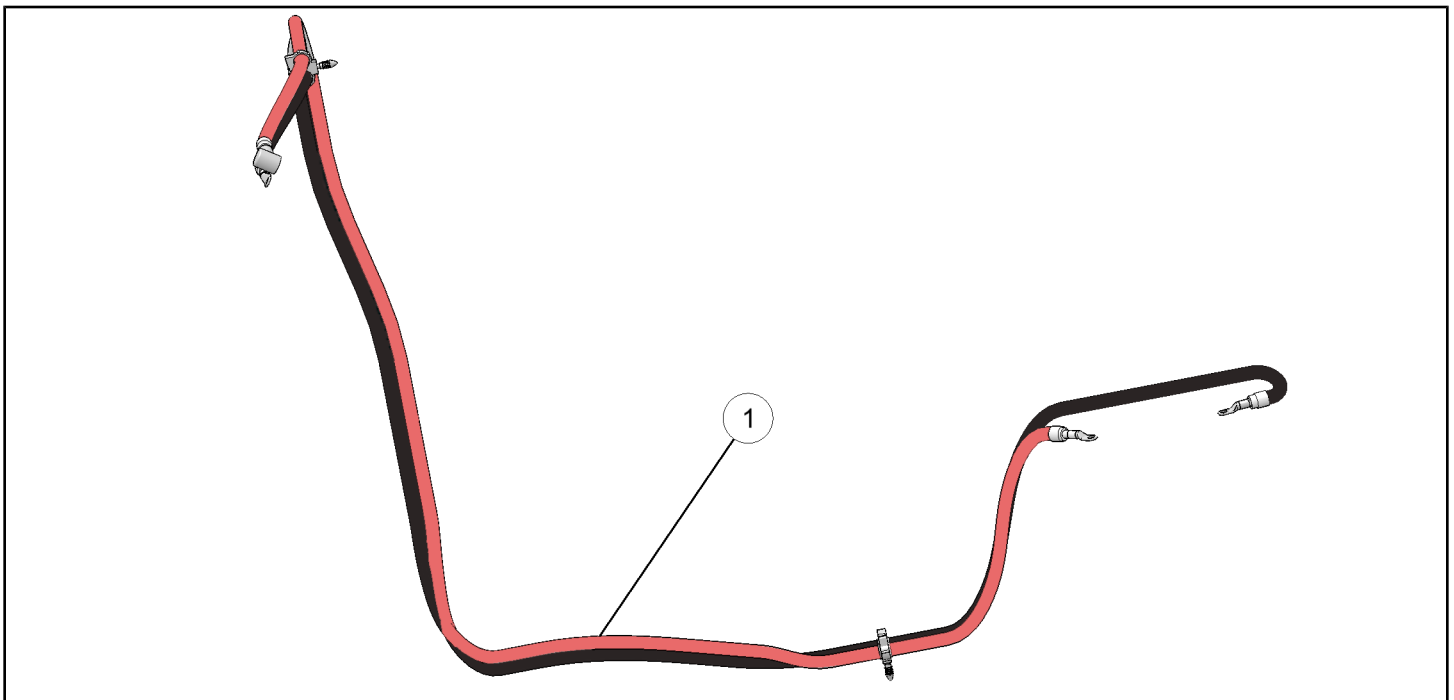

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Battery - Terminal, Cable	4015881
	1	Instructions	9926841

## TOOLS REQUIRED

- Standard and Metric Socket Set
- Standard and Metric Wrench Set

## IMPORTANT


Your ACCESSORY CABLE KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME


Approximately 60 minutes

## INSTALLATION INSTRUCTIONS

1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle. Remove hood. Lift up and remove seat. Disconnect battery power cables (red and black).
2. Remove center floor section by removing seven screws (A).

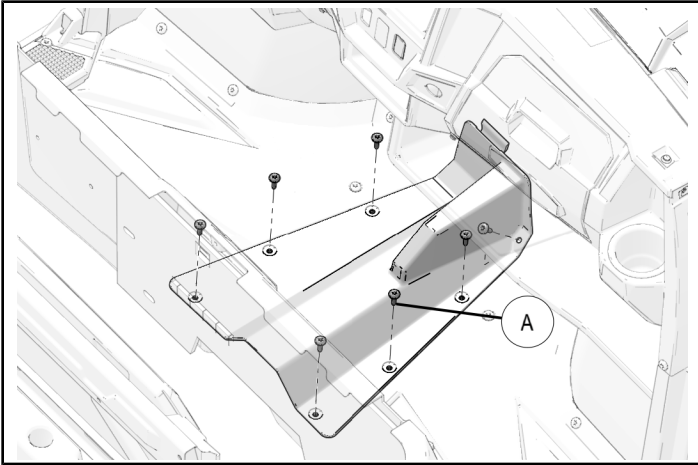

3. Route red and black cables along main wire harness from contactor to battery, attaching the red and black cables to main wire harness in several places with plastic ties. Route cables up to battery, but do not connect at this time.

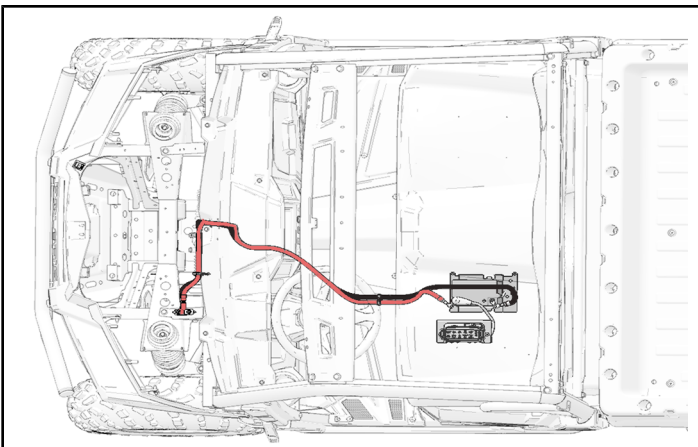


4. Double-check wire routing to make sure red and black cables are secured away from any moving or potentially hot parts. Reinstall center floor.

5. Secure red and black wires to bus bar.

### NOTE

If connecting a winch or making other connections to the bus bar, do so at this time. Do not connect cables to the battery until all other installation steps are complete for this and other kits being installed at this time.

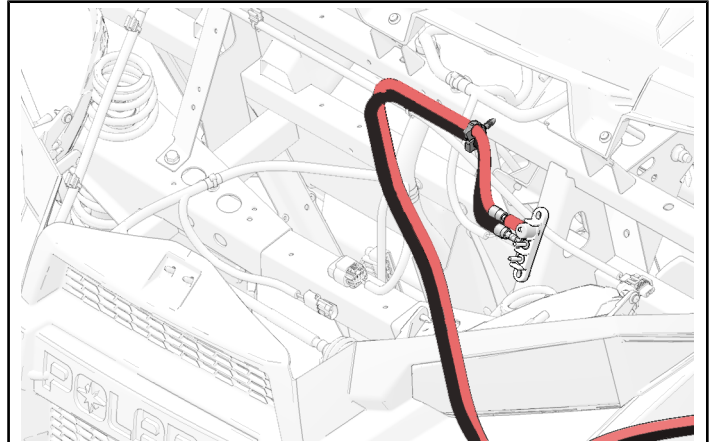

6. Re-check wire routing and secure black and red wires away from any hot or moving parts.
7. Attach new accessory cables ① and reconnect main red and black cables to battery.