

COOLER PAD KIT



P/N 2882179, 2882507

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

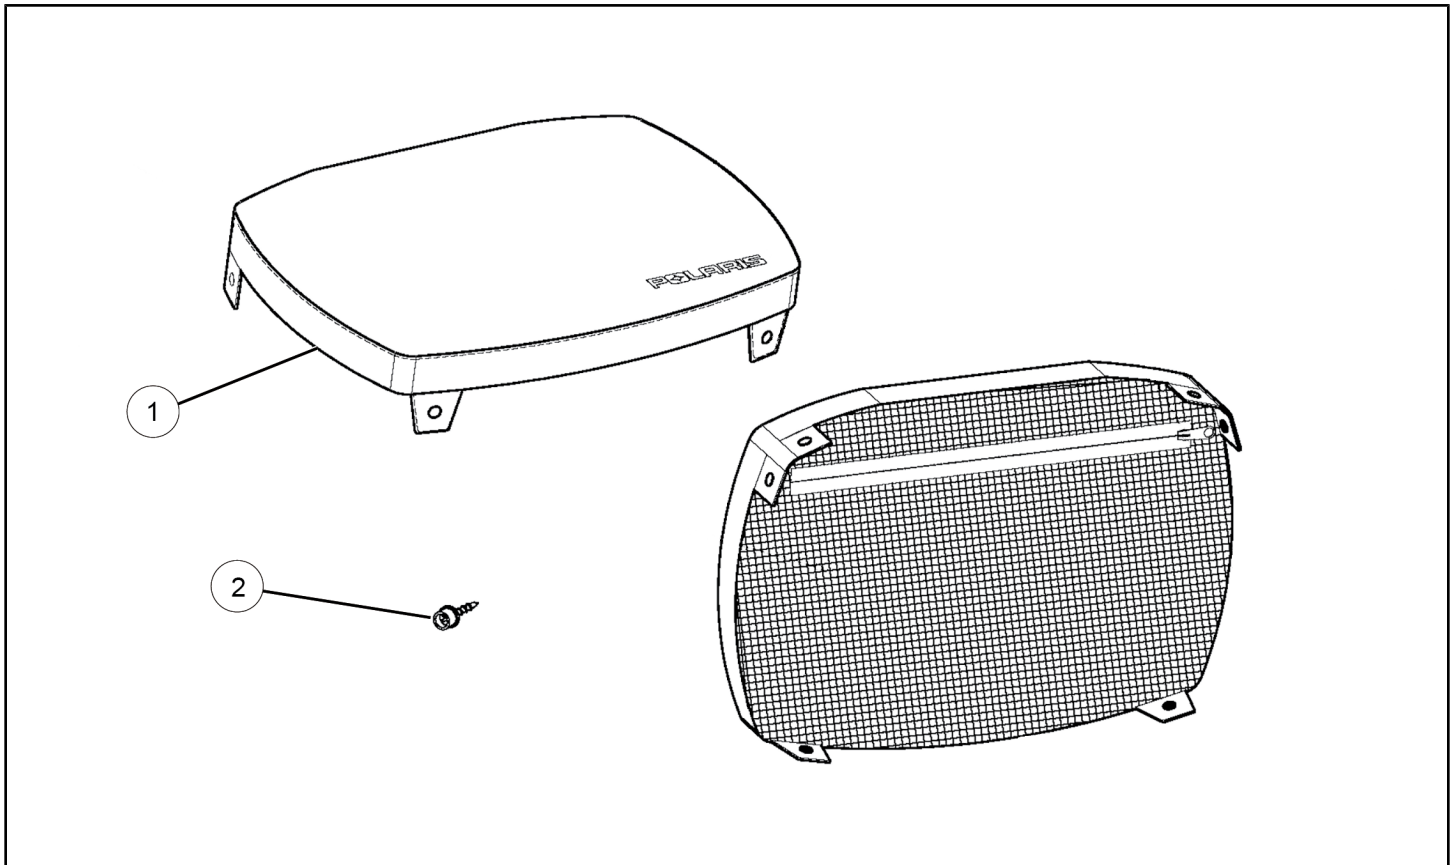

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Cooler Pad	-
2	6	Screw/Snaps	-
	1	Instructions	9927759

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Phillips

IMPORTANT

Your Cooler Pad Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 5 minutes

INSTALLATION INSTRUCTIONS

1. Orient pad ① with two attach snaps at front, and four snaps at rear (hinge side).
2. With pad firmly seated on cooler lid, and using snaps as a guide, mark locations for six mating screw/snaps ②.
3. Remove cooler pad, then install six screw/snaps ② at marked locations. Do not over-tighten screws.
4. Install pad onto cooler and secure with six screw/snaps ②.
5. If desired, pad can be cleaned with warm water, mild soap and soft cloth. Let air dry.