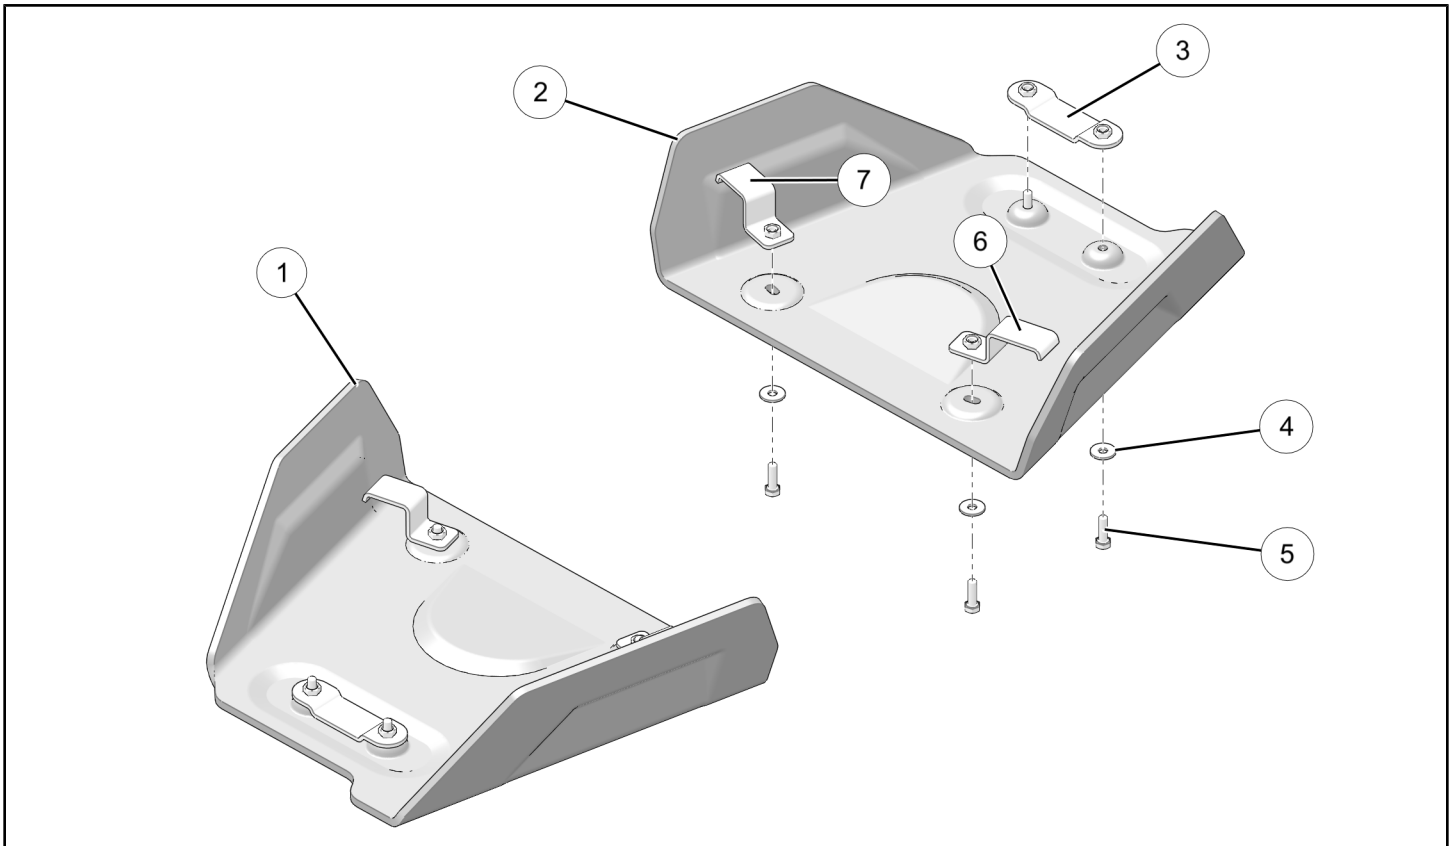# REAR A-ARM GUARD KIT

P/N 2882787

APPLICATION

Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Guard, A-Arm, LH	5454168
2	1	Guard, A-Arm, RH	5454169
3*	2	Clamp, Outboard	5261709
4*	8	Washer - 6.4 X 18 X 1.6	-
5*	8	Screw, Hex Head - M6 X 1.0 X 20	-
6*	2	Clamp, Inboard Rear	-
7*	2	Clamp, Inboard Front	5261708
	1	Instructions	9927941

Items marked (*) are included in Hardware Kit PN 2207090 (1 of each clamp, 4 washers, 4 screws)

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric

IMPORTANT

Your Rear A-Arm Guard Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.
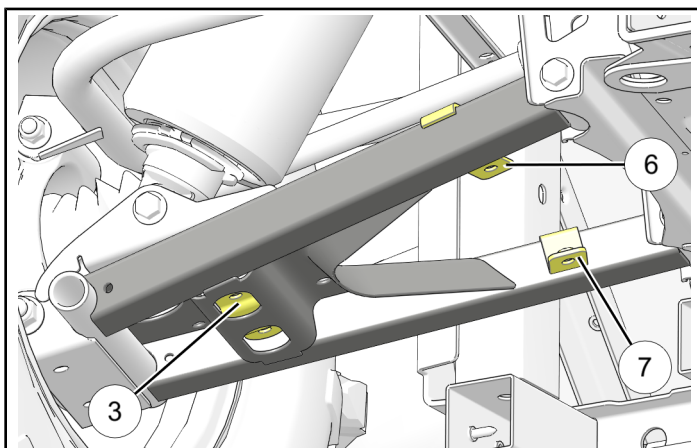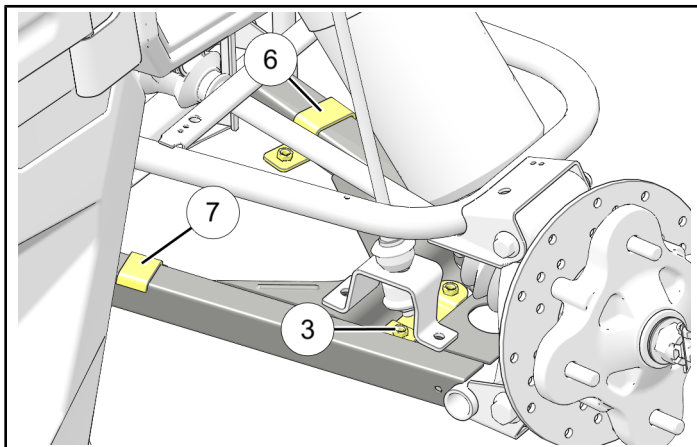
ASSEMBLY TIME

Approximately 15 minutes

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

2. Position inboard clamps ⑥ and ⑦, and outboard clamp ③, on LH a-arms as shown.
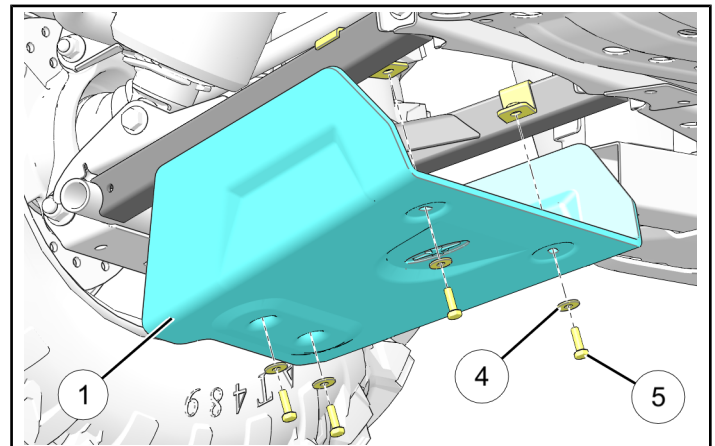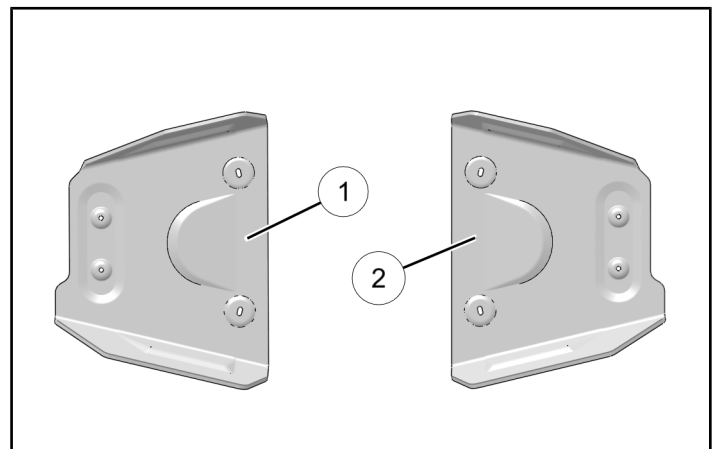
NOTE
FRONT inboard clamp ⑦ is smaller than REAR inboard clamp ⑥. Wheel hidden for clarity.

3. Install LH a-arm guard ① to previously installed clamps using four each screws ⑤ and washers ④.

NOTE
LH a-arm guard ① differs from RH a-arm guard ② at outboard edges as shown below.

4. Repeat Steps 2–3 for RH side using RH a-arm guard ②.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

FEEDBACK FORM