

ROCK SLIDERS KIT



P/N 2883987-XXX, 2883988-XXX

APPLICATION


Verify accessory fitment at [Polaris.com](https://www.polaris.com).

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

LOW PROFILE ROCK SLIDERS, P/N 2883987-XXX

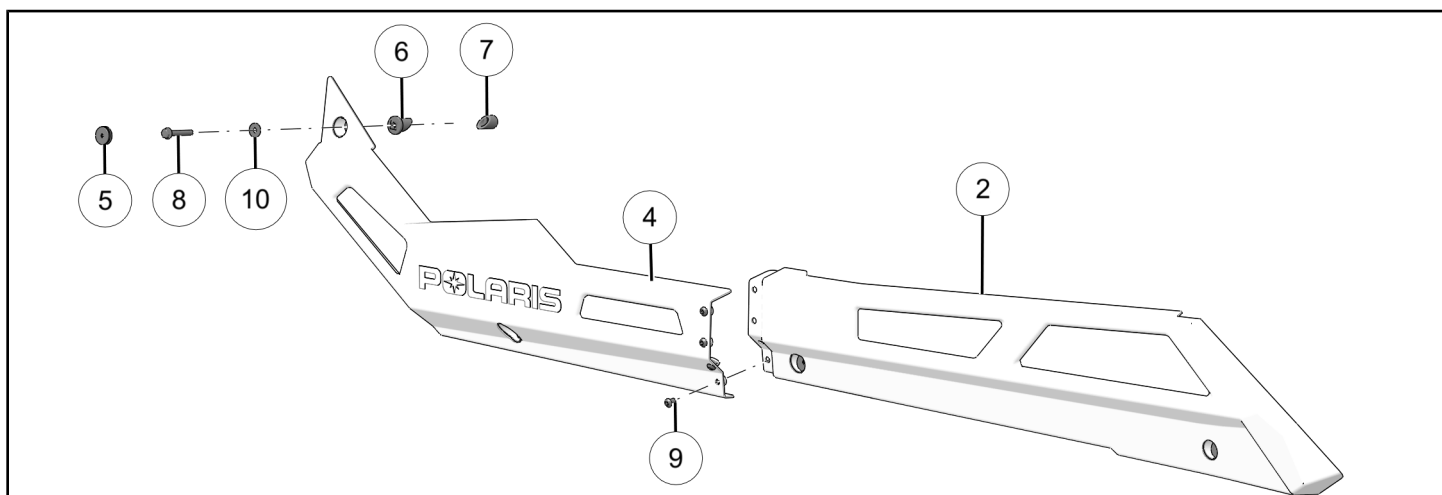


NOTE

Right-hand rock slider shown; left-hand similar.

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE HARDWARE KIT
1	1	Weld-Rock Slider, Lo-Pro, Front, Left-Hand	n/a	n/a
2	1	Weld-Rock Slider, Lo-Pro, Front, Right-Hand	n/a	n/a
3	1	Weld-Rock Slider, Lo-Pro, Rear, Left-Hand	n/a	n/a
4	1	Weld-Rock Slider, Lo-Pro, Rear, Right-Hand	n/a	n/a
5	8	Plug-End Cap, 1.125 in. Diameter, Ribbed	n/a	2207883
6	8	Anchor-Wedge Lock, Unthreaded	n/a	2207883
7	8	Anchor-Wedge Lock, Threaded	n/a	2207883
8	8	Screw-Hex Flange, M8 x 1.25 x 55	n/a	2207883
9	8	Screw-Torx® Button Head, M8 x 1.25 x 12	7521166	n/a
10	8	Washer, 0.327 x 0.875 x 0.090	n/a	2207883

PREMIUM ROCK SLIDERS, P/N 2883988-XXX

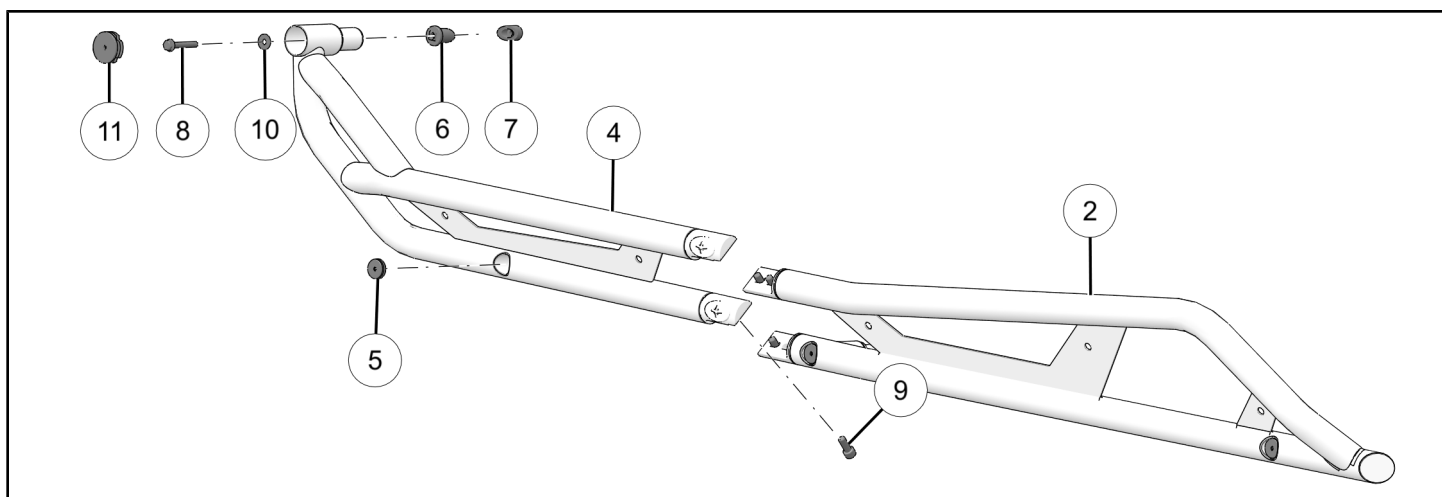

NOTE

Right-hand rock slider shown; left-hand similar.

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE HARDWARE KIT
1	1	Weld-Nerf Bar, Front, Left-Hand	n/a	n/a
2	1	Weld-Nerf Bar, Front, Right-Hand	n/a	n/a
3	1	Weld-Nerf Bar, Rear, Left-Hand	n/a	n/a
4	1	Weld-Nerf Bar, Rear, Right-Hand	n/a	n/a
5	6	Plug-End Cap, 1.125 in. Diameter, Ribbed	n/a	2208112
6	8	Anchor-Wedge Lock, Unthreaded	n/a	2208112
7	8	Anchor-Wedge Lock, Threaded	n/a	2208112
8	8	Screw-Hex Flange, M8 x 1.25 x 55	n/a	2208112
9	8	Screw-Socket Head, M10 1.5 x 25	7517358	n/a
10	8	Washer, 0.327 x 0.875 x 0.090	n/a	2208112
11	2	Plug-End Cap, 1.625 in. Diameter, Ribbed	n/a	2208112

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Rock Sliders Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

NOTE

Low Profile Rock Slider Kit, P/N 2883987-XXX shown; Premium Rock Slider Kit, P/N 2883988-XXX similar, except where specified.

VEHICLE PREPARATION


GENERAL

1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

ACCESSORY INSTALLATION

WEDGE ANCHOR ASSEMBLY

1. Pass one anchor fastener through washer ^⑩, rock slider assembly, wedge anchor ^⑥, and loosely thread into wedge anchor ^⑦. Repeat for each wedge anchor assembly.

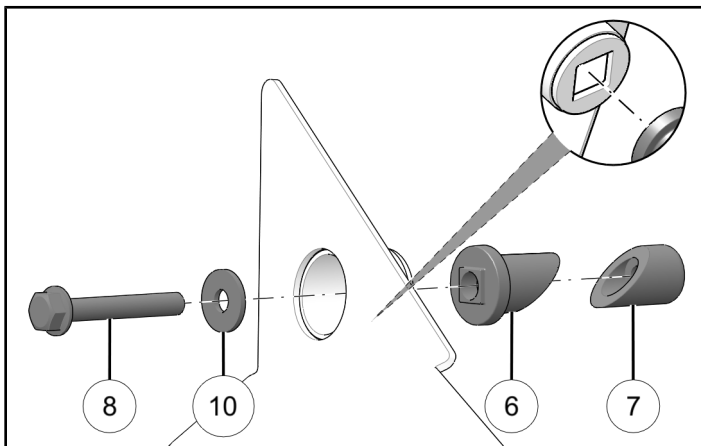


ROCK SLIDER ASSEMBLY (TWO PERSON INSTALLATION ONLY)

LOW PROFILE ROCK SLIDERS, P/N 2883987-XXX

1. Overlap front rock slider with rear and loosely install with all four fasteners ^⑨ before torquing.

TORQUE

Low Profile Rock Sliders
Rock Slider Fasteners ^⑨:
16 ft-lbs (22 N·m)

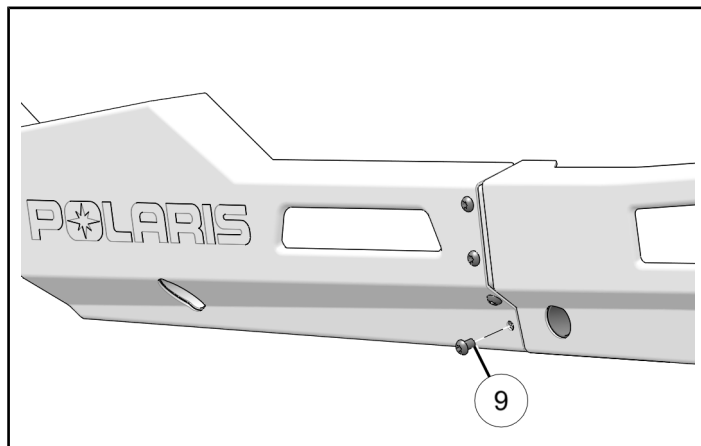


PREMIUM ROCK SLIDERS, P/N 2883988-XXX

1. Overlap front rock slider with rear and loosely install with all four fasteners ^⑨ before torquing.

TORQUE

Premium Rock Sliders
Rock Slider Fasteners ^⑨:
30 ft-lbs (41 N·m)

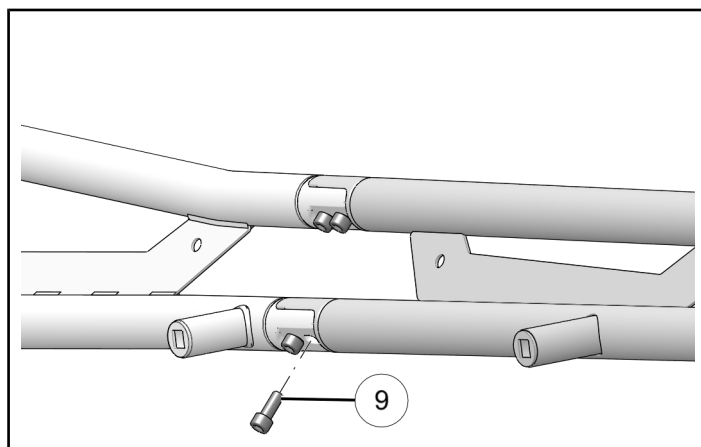

ROCK SLIDER INSTALLATION


TIP

For preassembled rock sliders with two installers:
Combine steps 1 and 2 into a single step and
proceed with step 4.

1. Align two wedge anchor assemblies of front rock slider ② within vehicle chassis.

TIP


Rotate wedge assembly 1/4 turn if wedge does not fit
properly. Fitment should be tight.

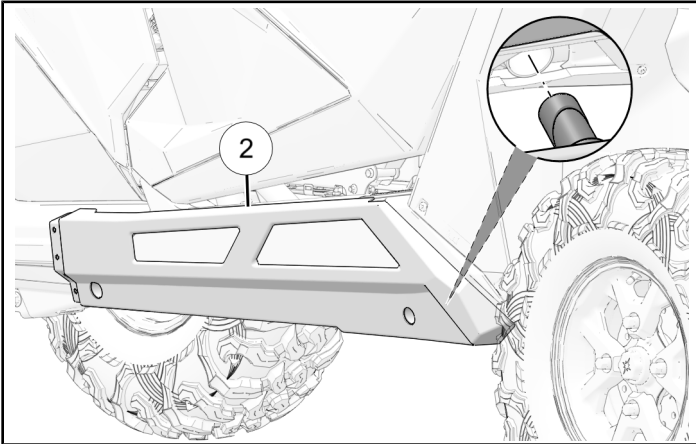

2. Align two wedge anchor assemblies of rear rock slider ④ within vehicle chassis.


TIP

Rotate wedge assembly 1/4 turn if wedge does not fit
properly. Fitment should be tight.

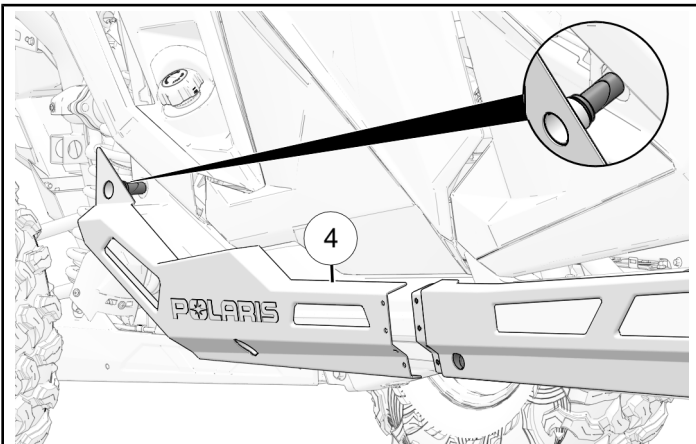


3. Loosely join front and rear rock sliders together
with fasteners ⑨.

- Low Profile Rock Sliders, P/N 2883987-XXX

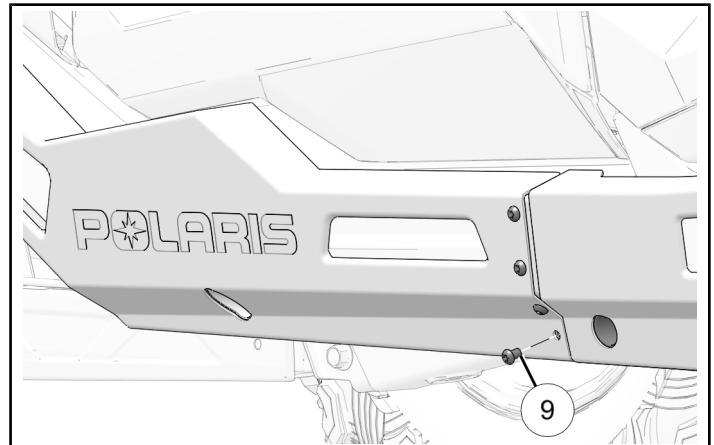


- Premium Rock Sliders, P/N 2883988-XXX

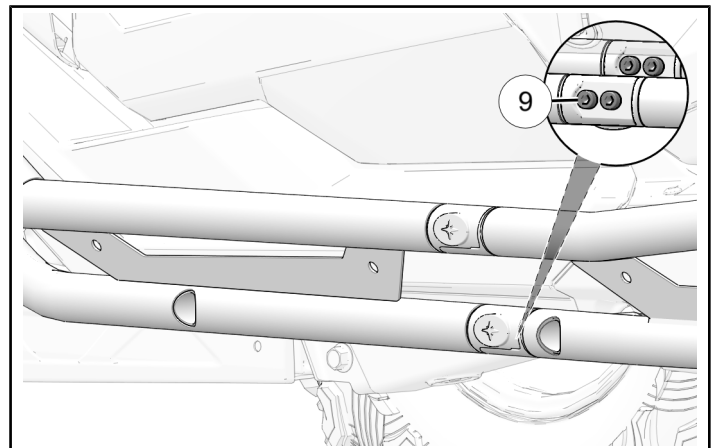

4. Torque each wedge anchor fastener ⑧.

TORQUE

Wedge Anchor Fasteners ⑧:
20 ft-lbs (27 N·m)

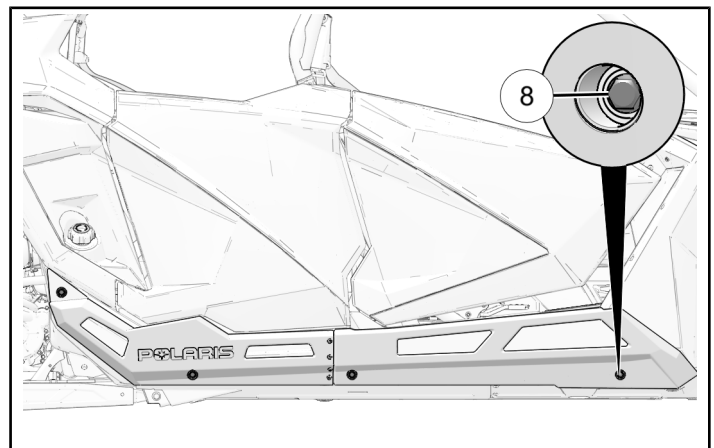

5. Torque each rock slider fastener ⑨.

TORQUE


Low Profile Rock Sliders
Rock Slider Fasteners ⑨:
16 ft-lbs (22 N·m)

TORQUE


Premium Rock Sliders
Rock Slider Fasteners ⑨:
30 ft-lbs (41 N·m)

6. Firmly push end caps ⑤ and ⑥ (*Premium Rock Sliders Kit* only) into each mounting location.

- Low Profile Rock Sliders, P/N 2883987-XXX

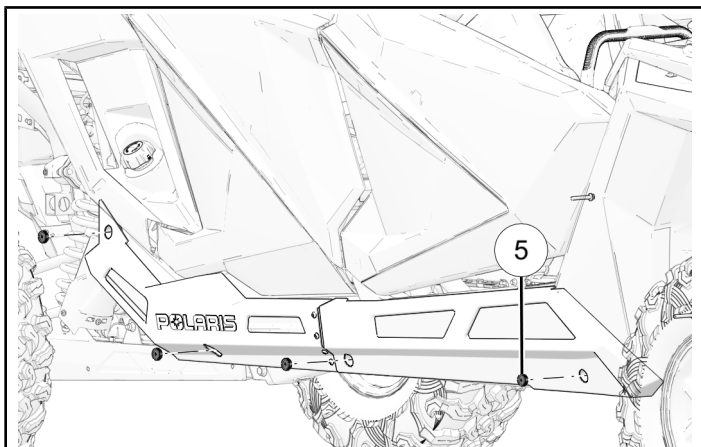

- Premium Rock Sliders, P/N 2883988-XXX

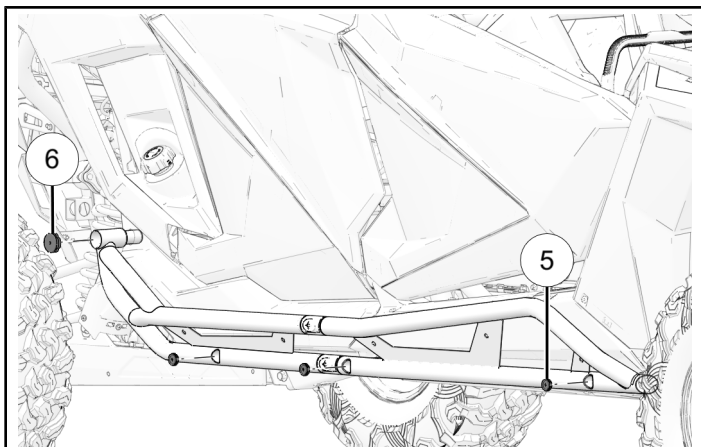

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

