

TANK COVERS KIT



P/N 2884089, 2884143-XXXX, 2884462-XXX

INTERNATIONAL INSTRUCTIONS

DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von www.indianmotorcycle.de herunter.

FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur www.indianmotorcycle.fr.

IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da www.indianmoto.it.

EN ENGLISH

Download the latest PDF instructions from www.indianmotorcycle.com.

ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de www.indianmotorcycle.mx / www.indianmotorcycle.es.

ZH 中文

从www.indianmotorcycle.cn 下载最新的PDF说明。

1




2



3



4

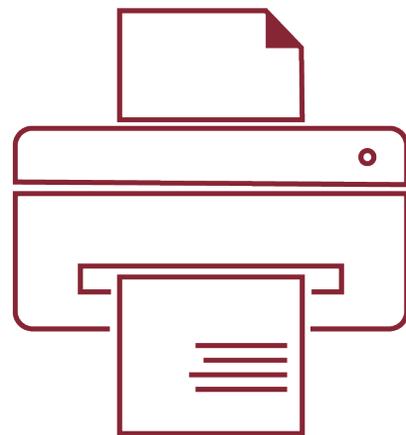

APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS



REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	2	Badge-Tank, Script	5259342
2	1	Cover-Airbox, LH	N/A
3	1	Cover-Airbox, RH	N/A
4	2	Bumper-Tank, Foam (not shown)	5814739
5	4	Dual Lock- 15 mm x 20 mm (not shown)	5814735
	1	Instructions	9929450

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Hex Key Set, Ball End, Metric
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Torx® Bit
- Torque Wrench

CONSUMABLES REQUIRED

- Cleaning Solution (99% water + 1% mild dishwashing detergent)
- Isopropyl Alcohol (IPA)
- Tape, Masking

IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.

SEAT REMOVAL


1. Remove and retain two handle fasteners (A) to remove passenger handle from each side of motorcycle frame.

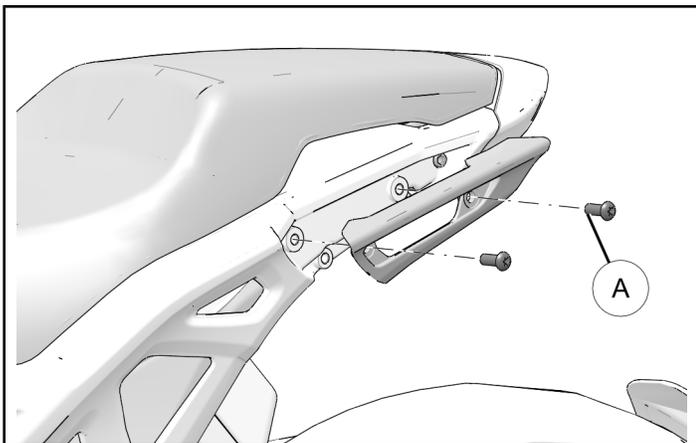

2. Remove and retain one seat fastener (B) from each side of motorcycle frame.

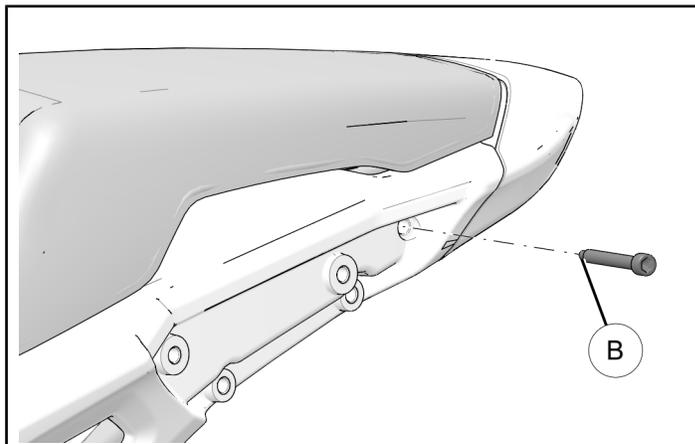


3. Slide seat back-and-up, to ensure seat slides out of mounts, to remove from motorcycle.

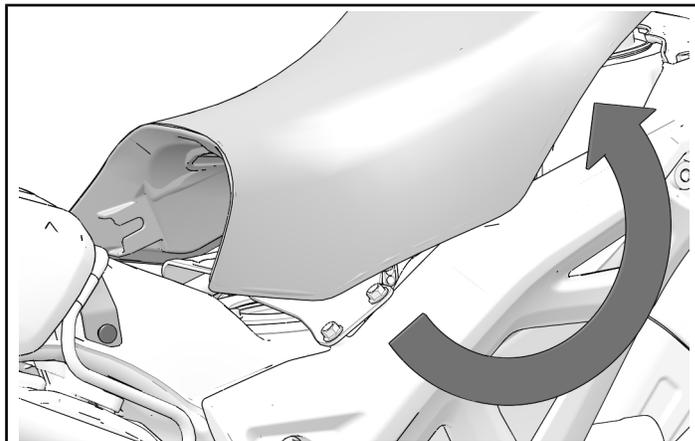

TANK COVER REMOVAL


1. Remove and retain four bezel fasteners (A) and four compression limiters (B) from tank bezel. Set tank bezel aside on soft surface.

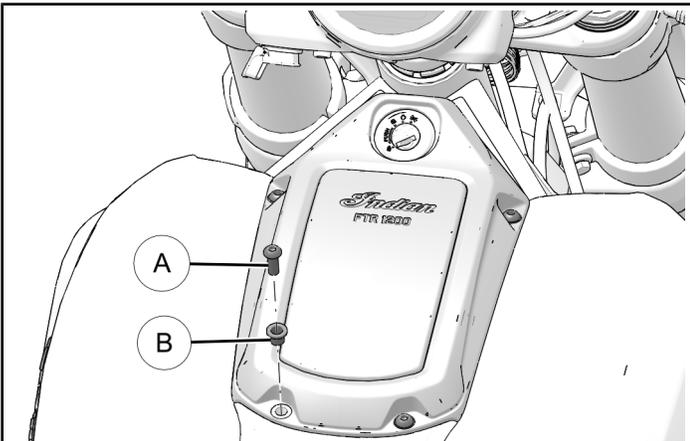


2. Tilt center console up to remove from tank cover.

NOTE


Rear-end of center console slides out of bracket at base of tank cover.

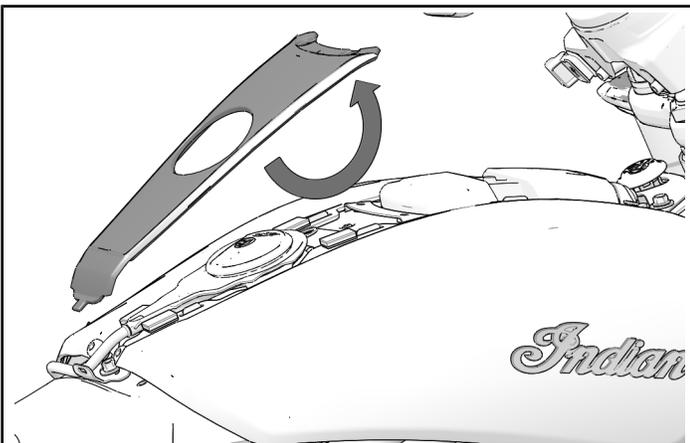


3. Remove and retain two tank cover fasteners (C) from rear-end of tank covers.

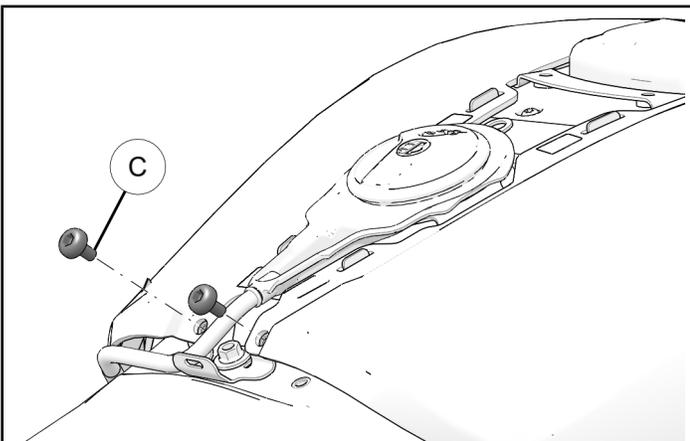

4. Pull bottom of each tank cover outward to disengage plastic rivets at two marked locations.

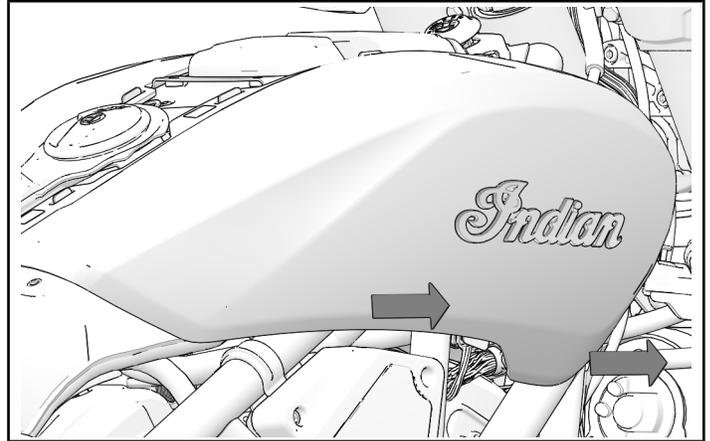

5. Pull each cover directly upward and free of alignment tabs.

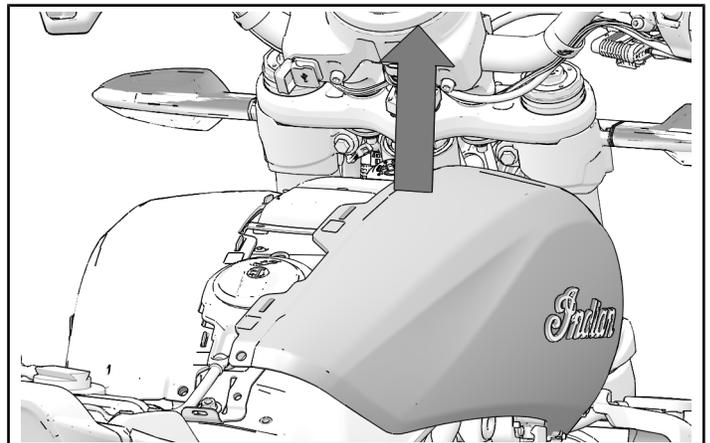

ACCESSORY INSTALLATION

INDIAN® BADGE APPLICATION (IF APPLICABLE)

NOTE

Only apply Indian® badge after tank has been properly painted and paint is fully cured.. Badge will not adhere properly if not applied to painted surface.

Thorough preparation of application area is important to correctly aligning Indian® badge on tank cover. Use masking tape to assist in aligning badge.

1. Use masking tape to mark lower curve of tank. Use second piece of masking tape to mark application line parallel to tank curve.



TANK COVER INSTALLATION


1. Use isopropyl alcohol to clean application surface of any dirt or debris. Allow surface to dry completely before placing foam bumpers ④ on inside of tank cover. Peel backing from foam bumpers ④ and apply one to each tank cover within application indices, as shown.

⚠ WARNING

Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packaging for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

NOTE


Carbon Fiber Tank Cover P/N 2884089 does not have application indices. Approximate application location according to graphic.

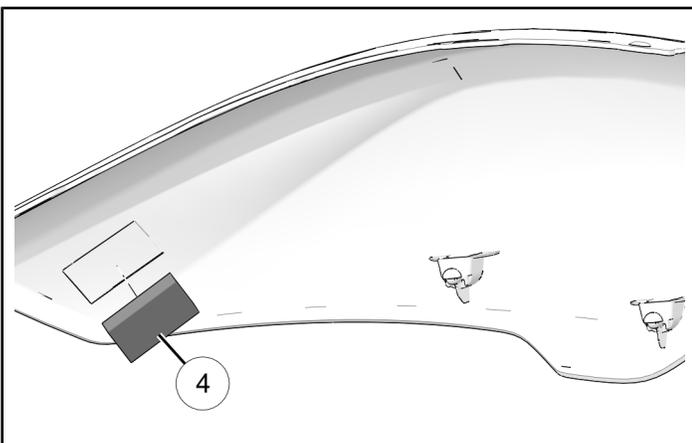


2. Identify two mounting locations on vehicle frame.

TIP

Spray water and soap solution on grommets to decrease friction. Friction between grommet and tank cover rivet may force grommet through metal bracket.

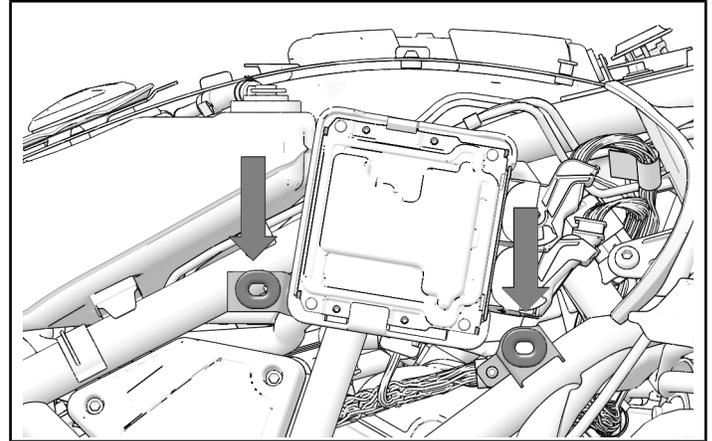

3. Place each tank cover on alignment bracket. Ensure each alignment tab is seated within corresponding tank cover hole.

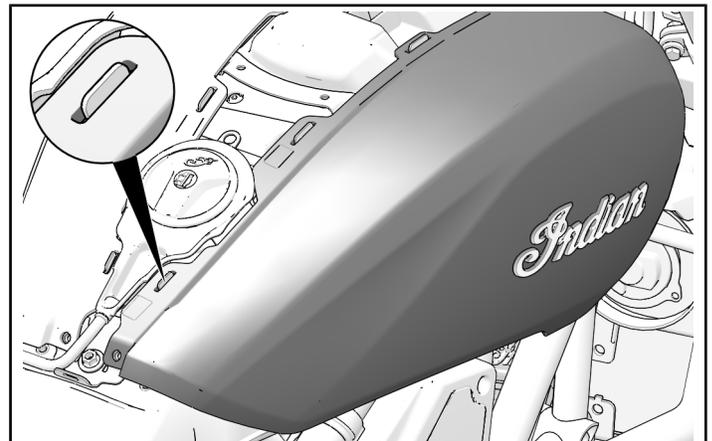


4. Firmly push lower tank cover into grommets. Ensure both tank cover rivets are firmly seated and grommet has not been pushed through bracket.

5. Secure rear-end of tank covers with two retained tank cover fasteners ③.

TORQUE


Tank Cover Fasteners ③:
36 in-lbs (4 N·m)

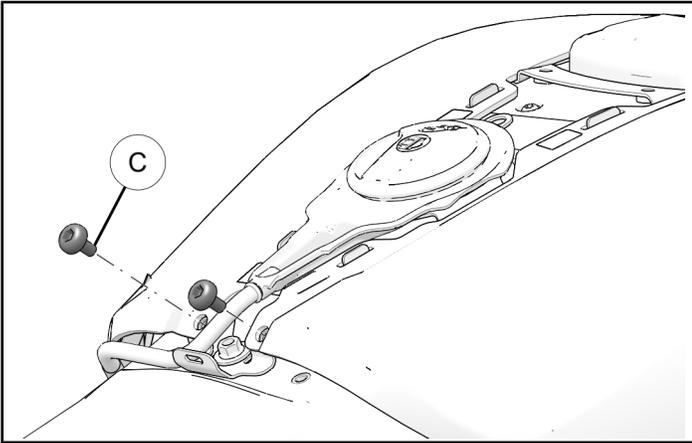


6. Separate hook-and-loop fastener pads ⑤. Place matting-half on tank cover indices, located below alignment tabs. Press and hold for 15 seconds to ensure pad adheres to tank covers.

NOTE

Carbon Fiber Tank Cover P/N 2884089 does not have application indices. Approximate application location according to graphic.

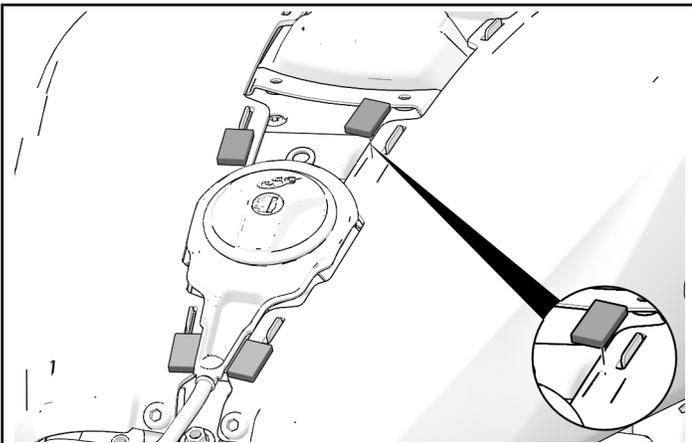


7. Place tab of center console into bottom bracket and flip down into installed position. Press firmly at adhesive pad locations to ensure each pad sticks to tank cover.

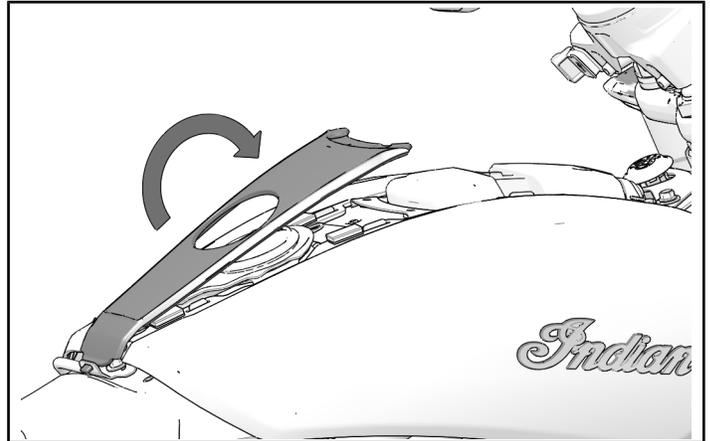

8. Reinstall tank bezel with four retained bezel fasteners ① and four retained compression limiters ②.

TORQUE


Bezel Fasteners ①:
36 in-lbs (4 N·m)

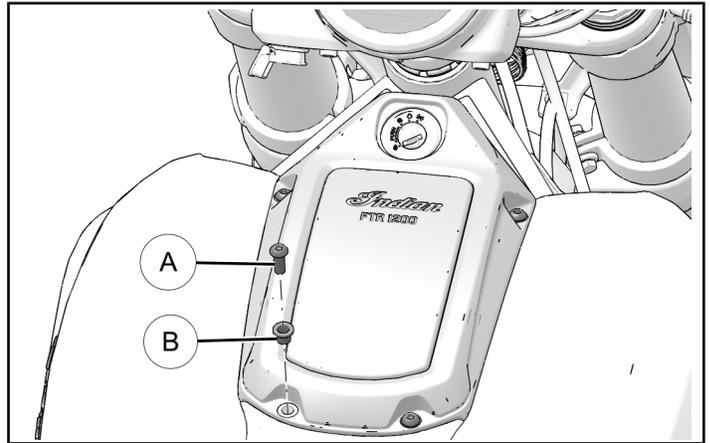


VEHICLE REASSEMBLY

SEAT INSTALLATION


1. Identify two tabs, located on underside of seat.

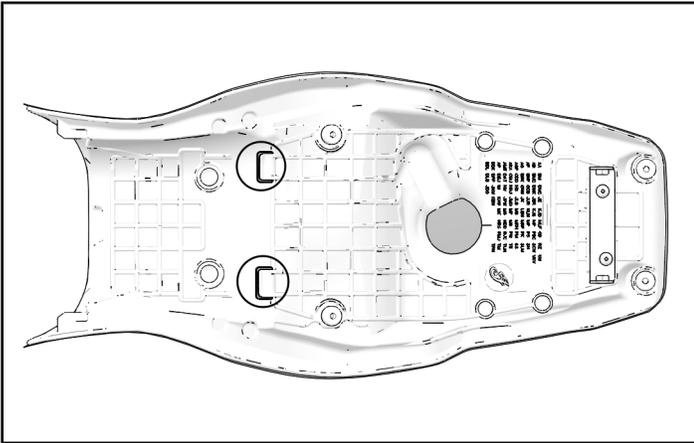

2. Tabs, identified in step 1 of this section, will slide beneath seat support bracket.

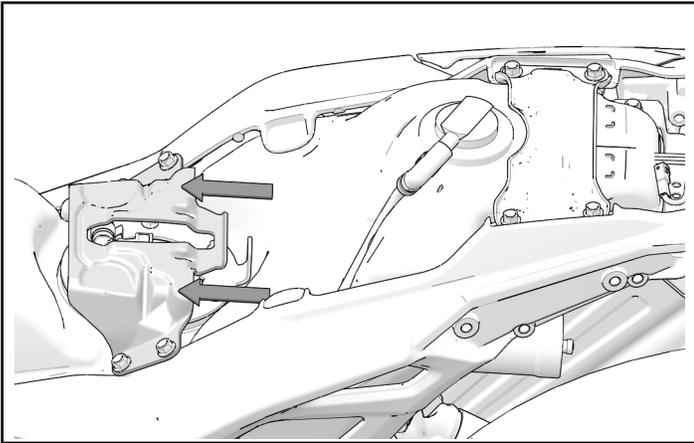


3. Slide seat into seat support bracket and into front mounting bracket.

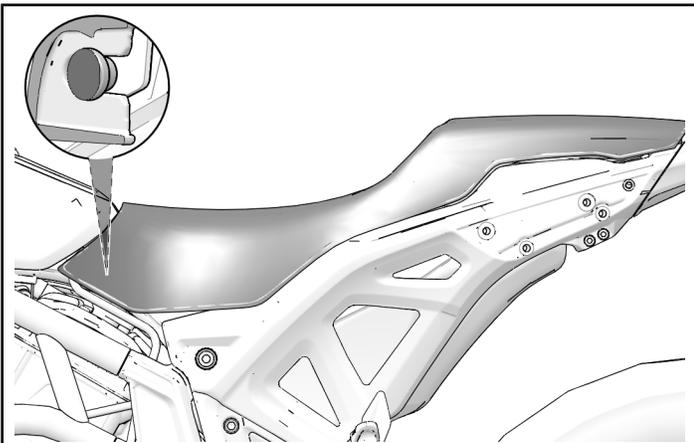

4. Secure rear of seat with two retained seat fasteners (B).

TORQUE


Seat Fasteners (Sub-Frame to Seat Brackets) (B):
84 in-lbs (9.5 N·m)

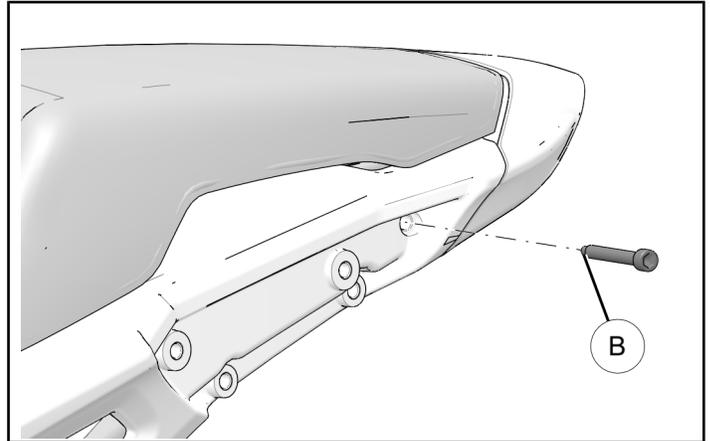

5. Install each passenger handle with two retained handle fasteners (A).

TORQUE

Handle Fasteners (A):
19 ft-lbs (26 N·m)

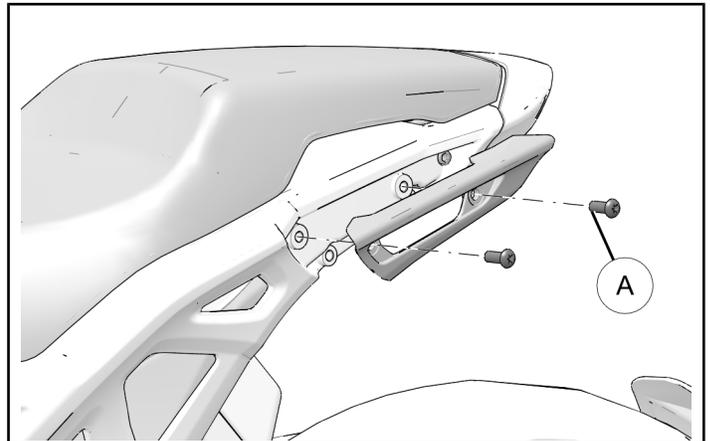

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

