

FULL VEHICLE COVER KIT



P/N MULTIPLE

APPLICATION

Verify accessory fitment at www.polarisslingshot.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

INSTALLATION VIDEO

There are three ways to access the installation video:

- Scan the QR Code with a mobile device.
- Click **HERE** if viewing the instruction as a PDF.
- Go to YouTube and search for SLINGSHOT TRAILER COVER INSTALLATION.



KIT CONTENTS

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Slingshot Full Vehicle Cover	n/a

IMPORTANT

Your Full Vehicle Cover Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle to NEUTRAL.
3. Press START/STOP button to turn vehicle OFF.
4. Apply parking brake.
5. Remove key fob from proximity of vehicle.

ACCESSORY INSTALLATION

1. Drape the cover ① over the vehicle. Note that the Slingshot® logo will be on the hood of the vehicle.
 - a. Carefully fit the cover over the driver and passenger side mirrors.
 - b. Pull the cover over the front of the vehicle hood.
 - c. Pull the cover over the rear of the vehicle. The fuel door access panel on the cover should match up with the fuel door on the vehicle.


TIP

This is intended to allow you to fuel the vehicle while it is on a trailer without having to remove the cover.

2. For the two center straps: Attach the male buckle of each center strap ① and ② to the female buckle sewn to the cover as shown in figure. Feed the webbing underneath the vehicle and connect each of the matching buckles on the opposite side.

TIP

Loosen the buckles on strap ② and toss the webbing under the machine.

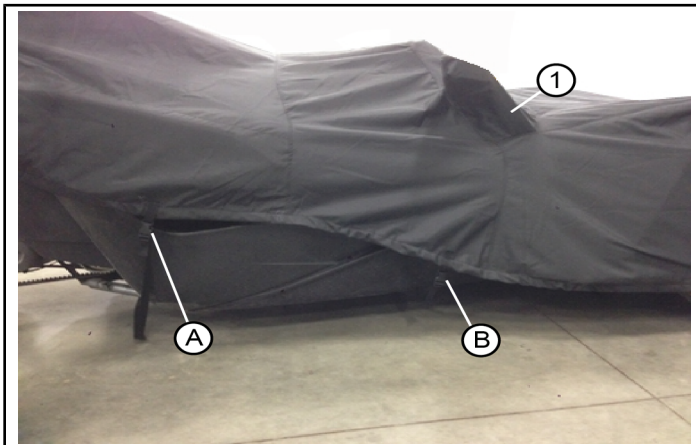

3. Pull the bottom edge of the cover down as far as possible, all the way around the vehicle.

NOTE

Do not try to fit the cover over the license plate.

4. At the rear of the vehicle, open the zippered pocket and attach the buckles together. Pull the webbing on each side, evenly, until the webbing is snug as shown in figure. Do not tighten the new strap at this time.
5. Along the entire perimeter of the cover ①, pull the fabric down to cover the tires ② as much as possible and remove all excess fabric and wrinkles.

6. Tighten the webbing at the rear of the cover ① to take up any excess slack. Pull firmly, alternating sides to keep the buckle on center, pull the buckle out away from the machine to help set the webbing. The webbing should be tight around the base of the vehicle.



7. If necessary, re-tension the center straps.



8. The fuel door cover access panel allows access to the fuel door.

IMPORTANT

- Ensure the cover is adequately tensioned prior to trailering the vehicle.
- Remove any accessories that interfere with the cover and its ability to cinch down around the base of the tires.
- Inspect that there are no sharp objects that will push against the cover.
- Never trailer the covered vehicle while traveling in excess of the speed limit.
- Do not over tension the cover.
- Only trailer the vehicle with the cover installed facing forward.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

