

# DOOR CLOSE-OFF KIT



P/N 2883765


## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

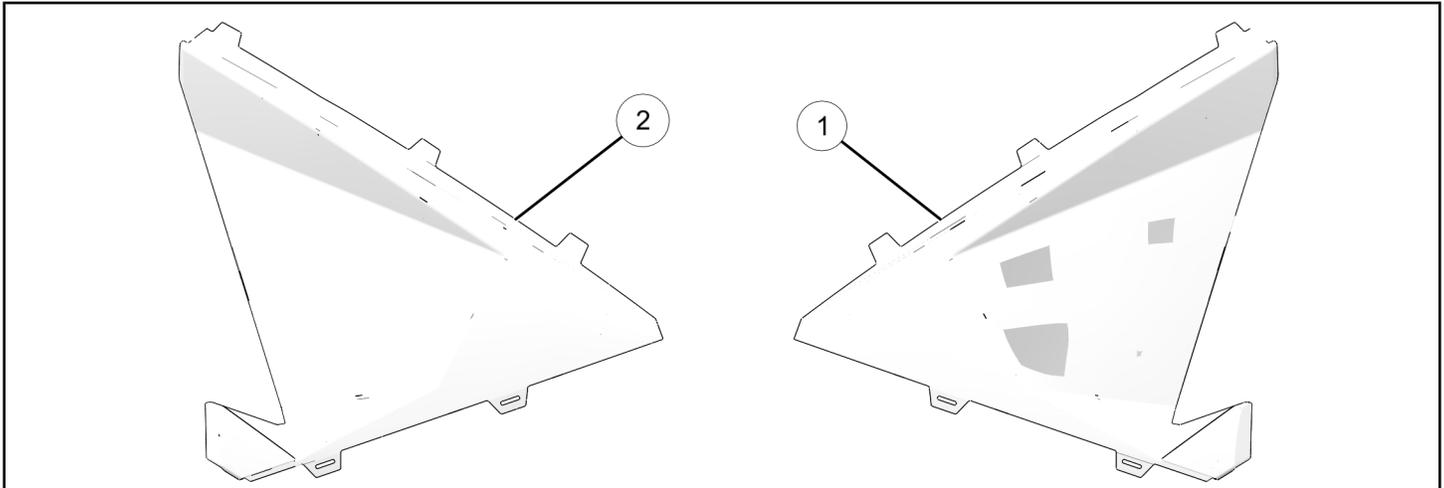

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Panel–Door, Left-Hand	n/a
2	1	Panel–Door, Right-Hand	n/a

## TOOLS REQUIRED

- Safety Glasses
- Screwdriver Set, Torx®
- Socket Set, Torx® Bit
- Torque Wrench

## IMPORTANT

Your Door Close-off Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

### VEHICLE PREPARATION

#### GENERAL


1. Shift vehicle transmission to PARK. Turn key to OFF position and remove from vehicle.

## DOOR PANEL REMOVAL


### NOTE

Left-hand door shown; right-hand door similar.  
Vehicle body hidden for clarity.


1. Remove and retain eleven (11) door panel fasteners.

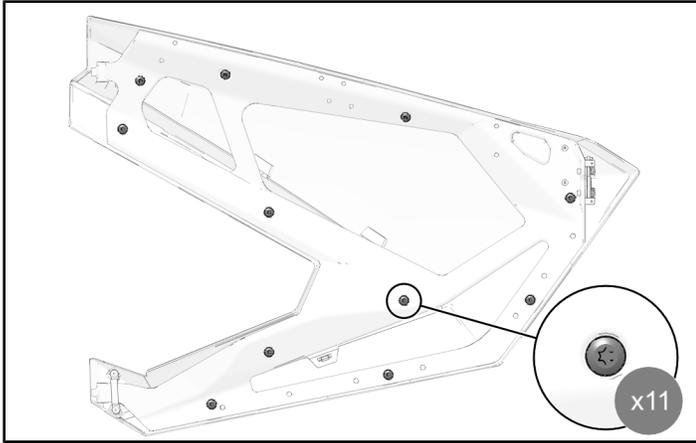

2. Remove and retain two bracket fasteners and trim bracket from door panel.

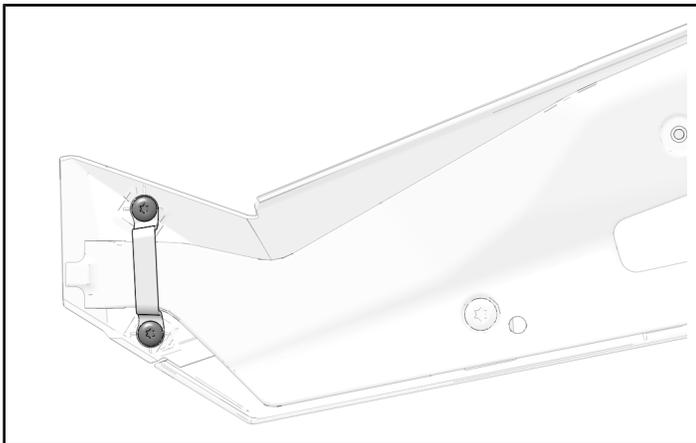

3. Remove door panel from door and carefully set aside.

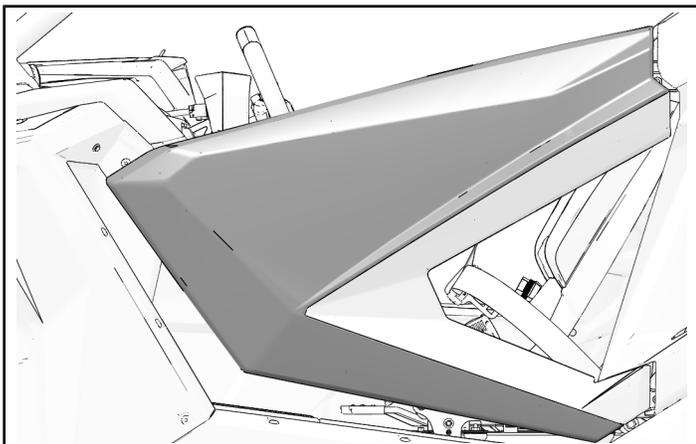


## ACCESSORY INSTALLATION


### NOTE

Left-hand panel shown; right-hand panel similar.  
Vehicle body hidden for clarity.


1. Remove and discard door trim panel.

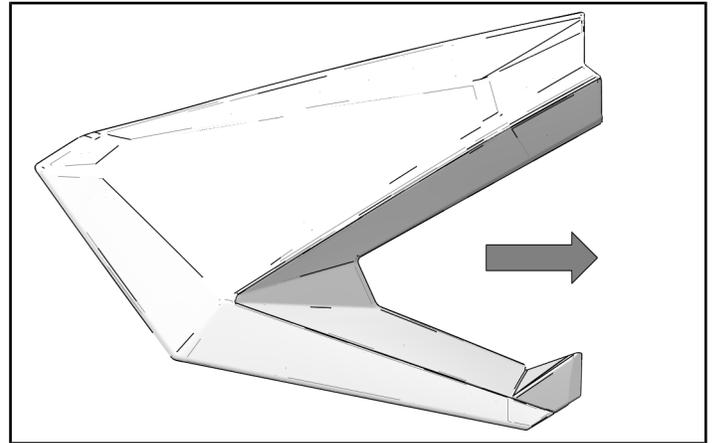


2. Remove and retain four U-nuts.

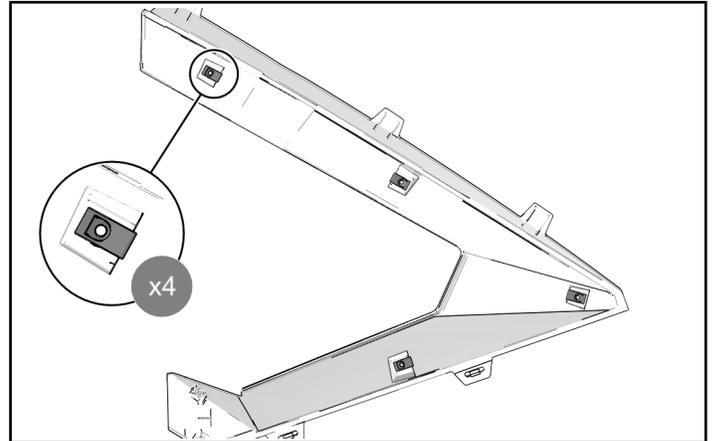


3. Install four retained U-nuts to mounting locations of accessory close-off panel.

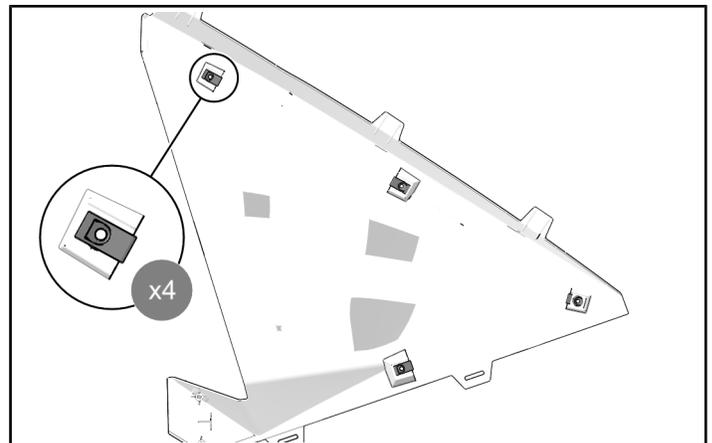


4. Align accessory close-off panel with door panel.

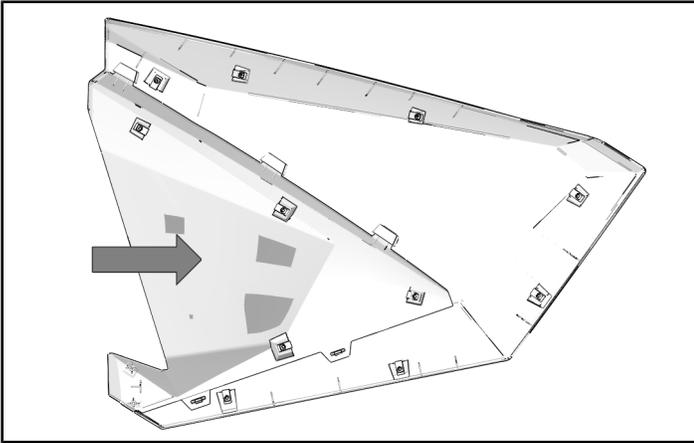

5. Slide top tabs into door panel.

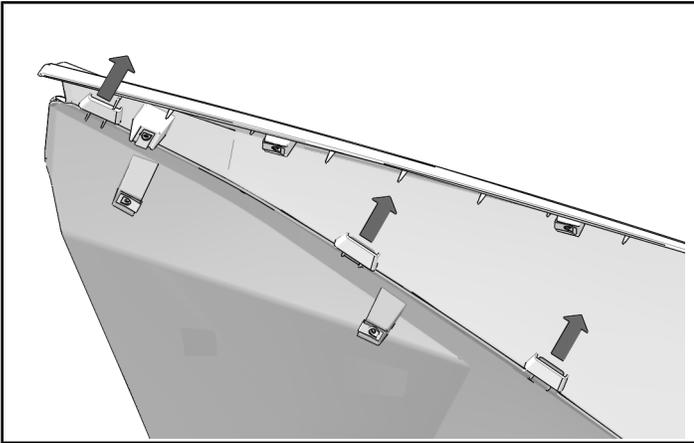


6. Slide close-off panel over bottom tabs protruding from door panel.

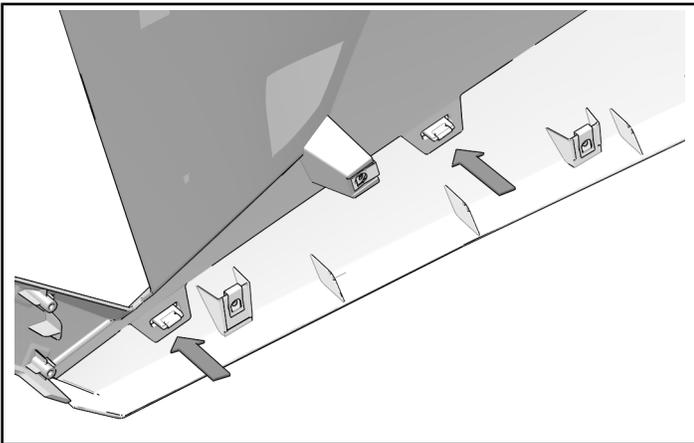

7. Align door panel with door frame and install with eleven (11) retained door panel fasteners.

**TORQUE**


Door Panel Fasteners:  
**35 in-lbs (4 N·m)**

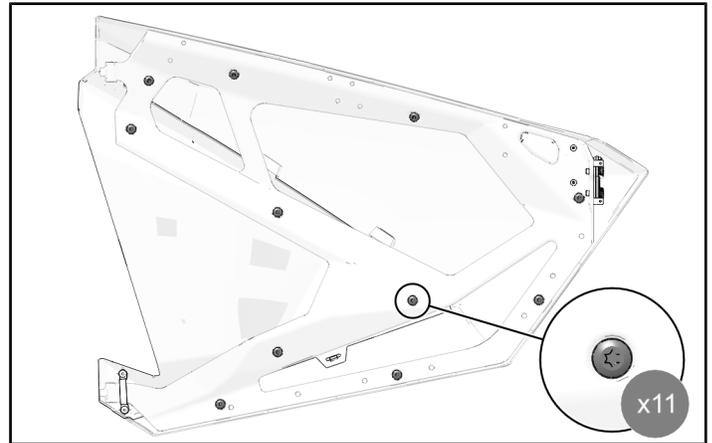

8. Reinstall trim bracket with two trim bracket fasteners.

**TORQUE**

Trim Bracket Fasteners:  
**18 in-lbs (2 N·m)**

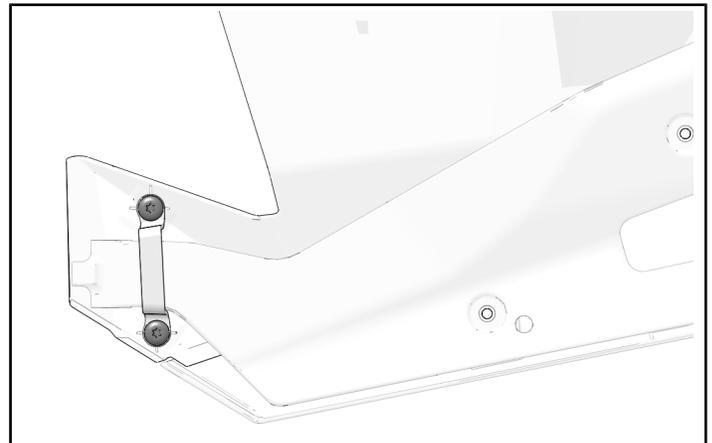

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

