

FULL VENTED WINDSHIELD KIT



P/N 2884540; 2884542


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

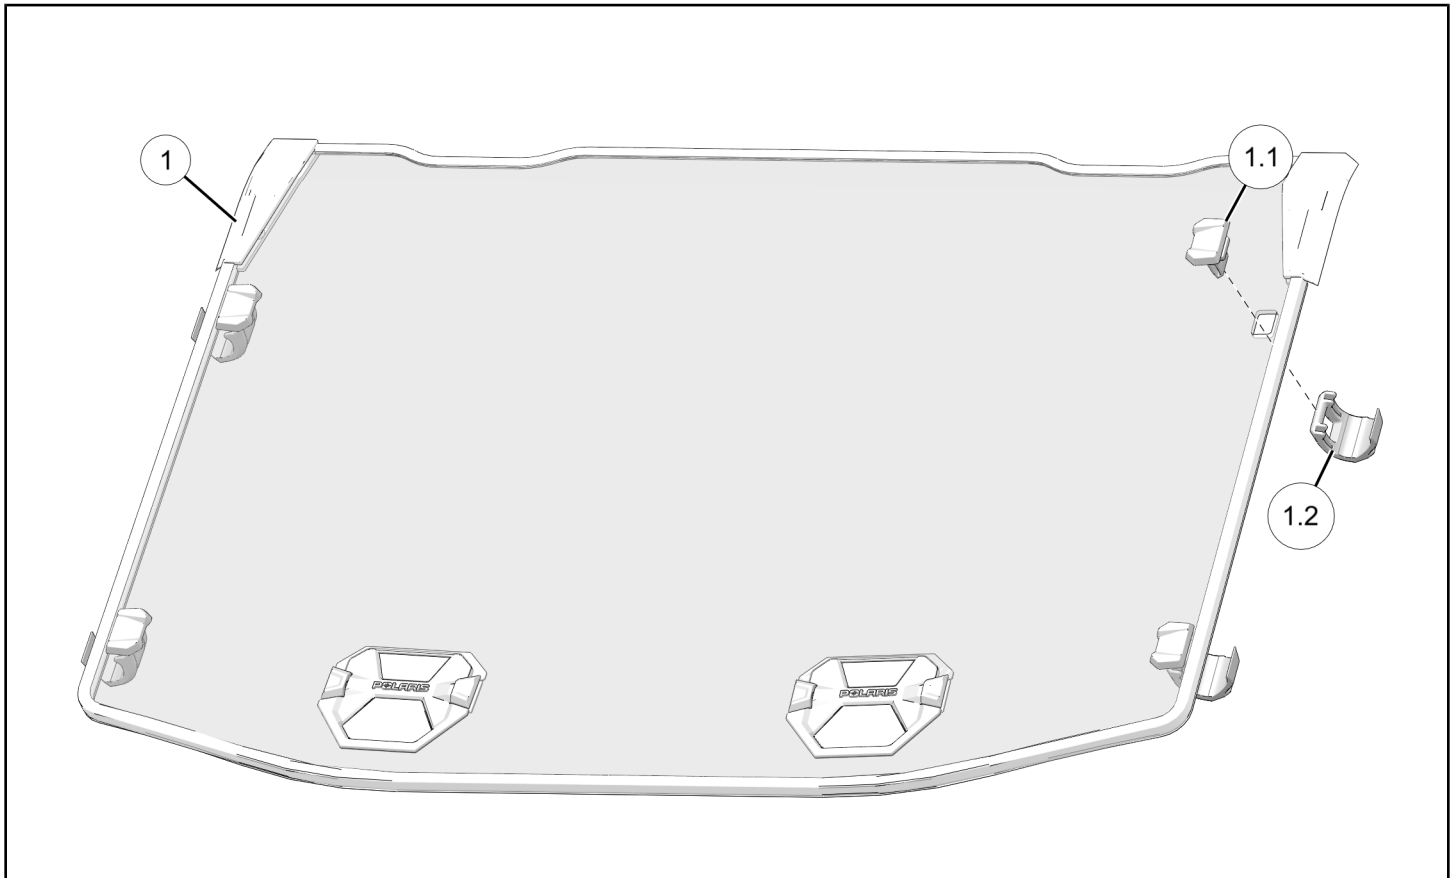

NOTICE

P/N 2884542 shown, P/N 2884540 similar

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly–Windshield	n/a	n/a
1.1	4	Clamp–Base, Lock & Ride®	n/a	2208349
1.2	4	Clamp–Lever, Lock & Ride®	n/a	2208349

TOOLS REQUIRED

None

IMPORTANT

Your Full Vented Windshield Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION

1. Put windshield against both A-pillars of roll cage and position inside windshield channel, between hood and upper dashboard panel.

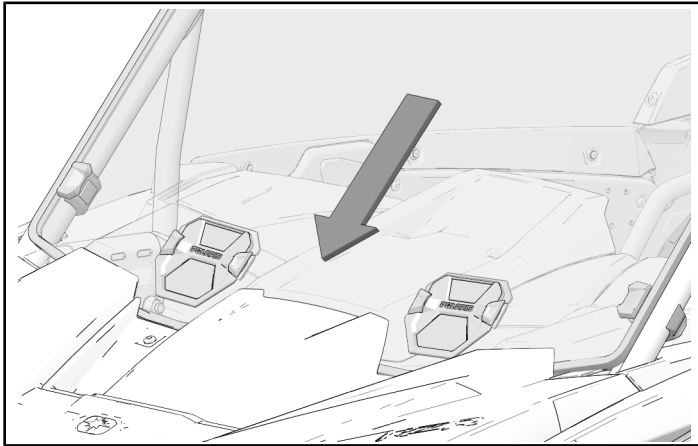


2. Close levers of Lock & Ride® clamps around A-pillars.

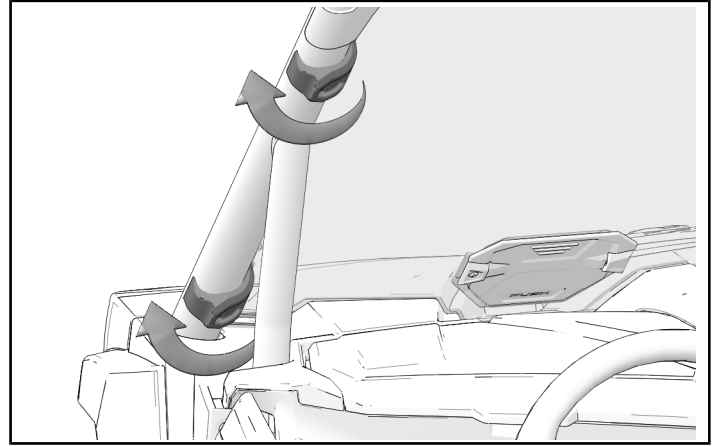

OPERATION


OPENING VENT

Push bottom of vent to open.

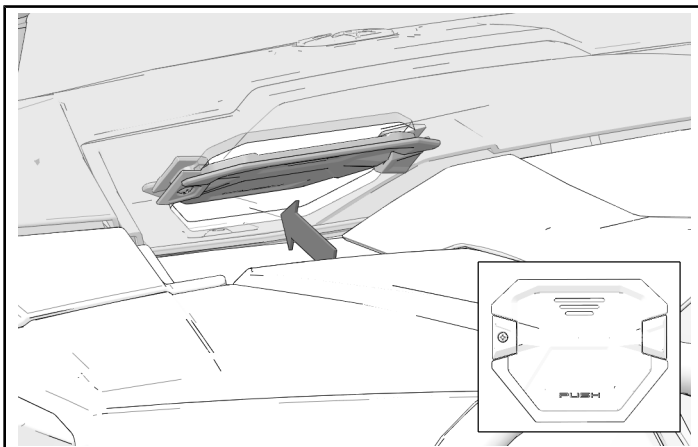

CLOSING VENT

Push top of vent to close.

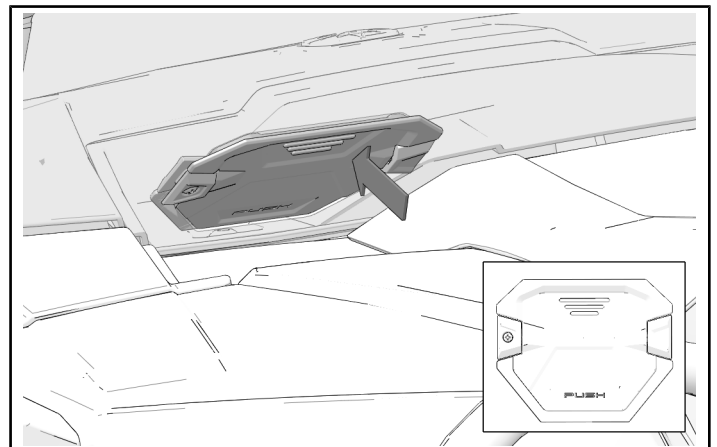

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

