

# PREMIUM PRERUNNER FRONT BUMPER KIT



P/N 2884355

## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.


## ACCESSORY WEIGHT

Accessories, passenger, and other factors may negatively affect ride performance. Refer to your vehicle’s owner’s manual for maximum weight capacity and suspension adjustment procedures.

## REQUIRED SOLD SEPARATELY

Only parts for installation of the Premium PreRunner Front Bumper Kit are included. Prior installation of a winch kit is also required (sold separately).

## KIT CONTENTS

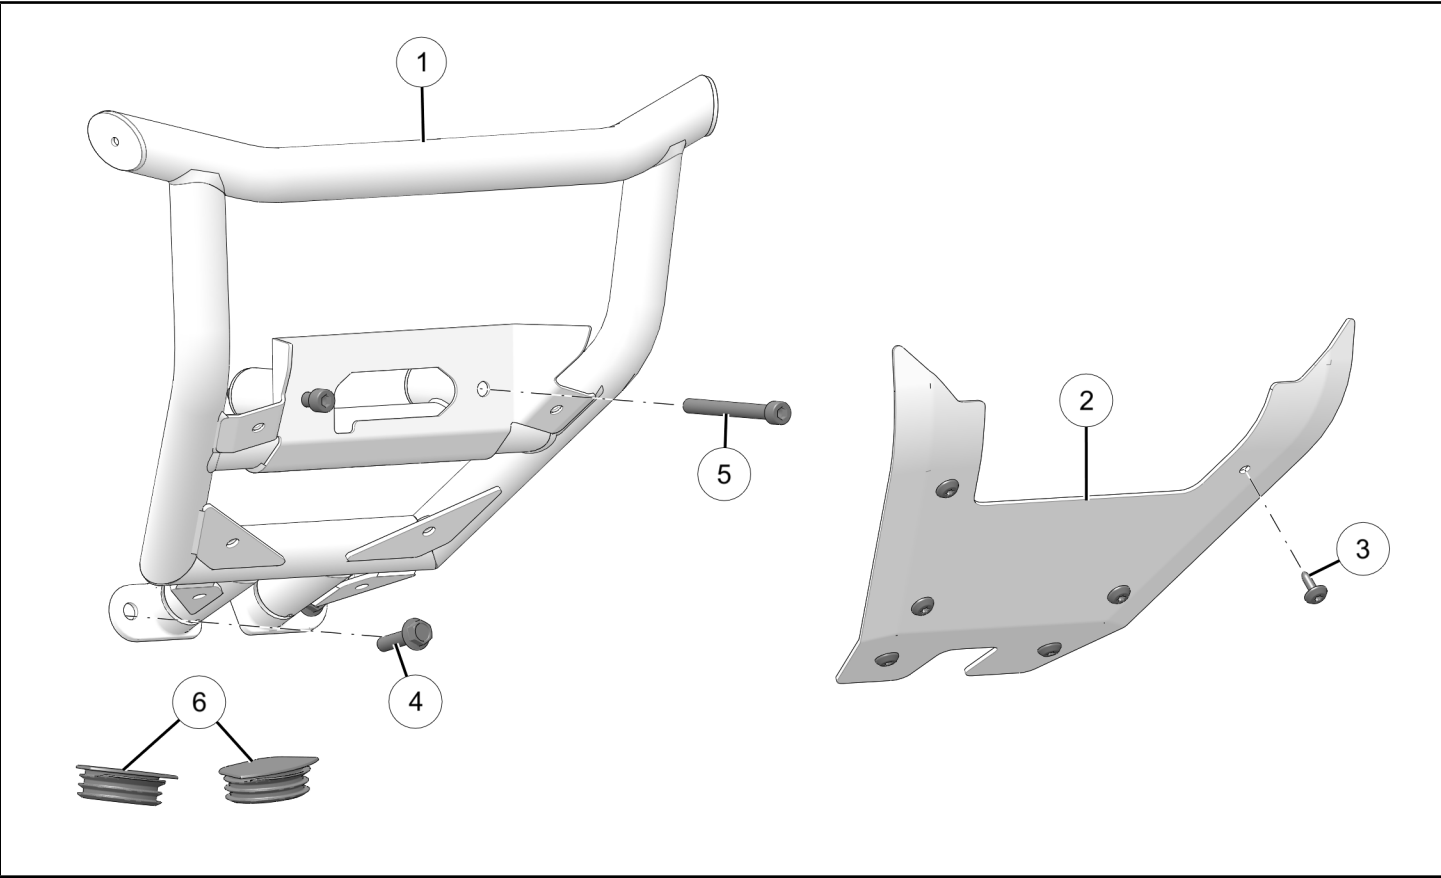

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Weld–Bumper, Front, Premium	n/a	n/a
2	1	Plate–Bumper, Front, Premium	5268917	n/a
3	6	Screw–Torx® Truss Head, M6 x 1.0 mm x 20 mm	n/a	2208312

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
4	2	Screw–Hex Flange, M10 x 1.5 mm x 40 mm	n/a	2208312
5	2	Screw–Socket Head, M10 x 1.5 mm x 100 mm	n/a	2208312
6	2	Plug–Fascia	5457295	n/a

## TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Pliers, Push Pin Rivet
- Socket Set, Hex Bit, Metric
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench

## IMPORTANT

Your Premium PreRunner Front Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS


### VEHICLE PREPARATION

#### GENERAL

1. Shift vehicle transmission into PARK.
2. Turn key to OFF position and remove from vehicle.


#### FRONT FASCIA REMOVAL

1. Remove two top mounting fasteners (longer) and two bottom mounting fasteners (shorter) to remove front fascia from vehicle.

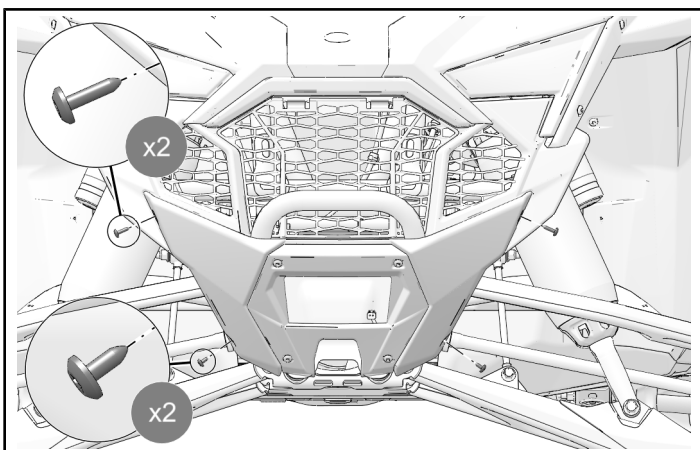


#### BUMPER COVER REMOVAL

1. Remove four cover fasteners to remove bumper cover from front fascia.

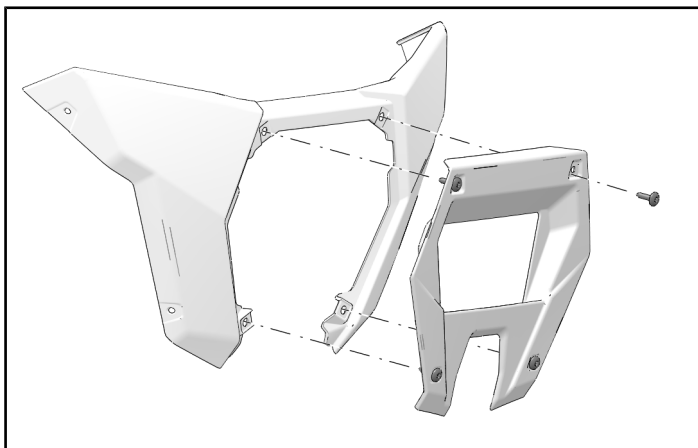


#### BUMPER REMOVAL

1. Remove two push-pin rivets from front fascia.

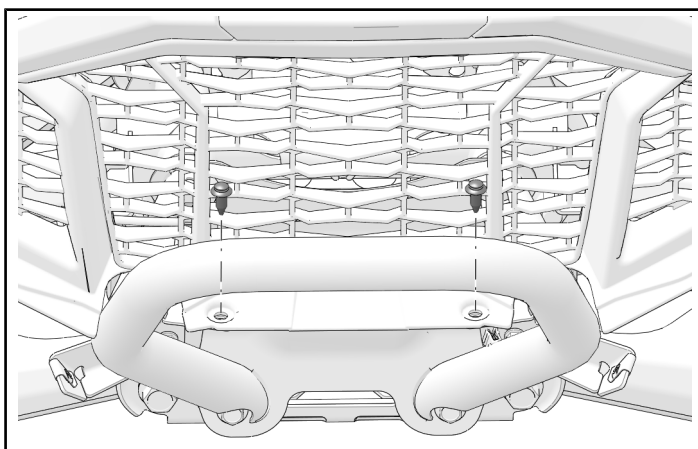


2. Remove four bumper fasteners to remove bumper assembly from chassis.

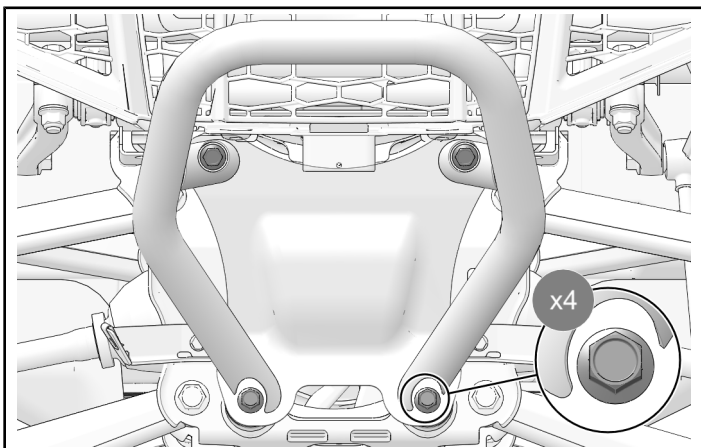


## ACCESSORY INSTALLATION

Only parts for installation of the Premium PreRunner Front Bumper Kit are included. Prior installation of a winch kit is also required (sold separately).

1. Remove and discard two lower winch mount fasteners.

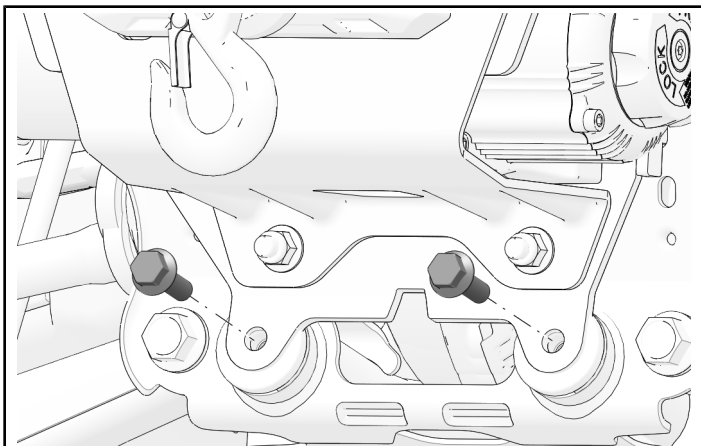


2. Remove and discard two fairlead fasteners.

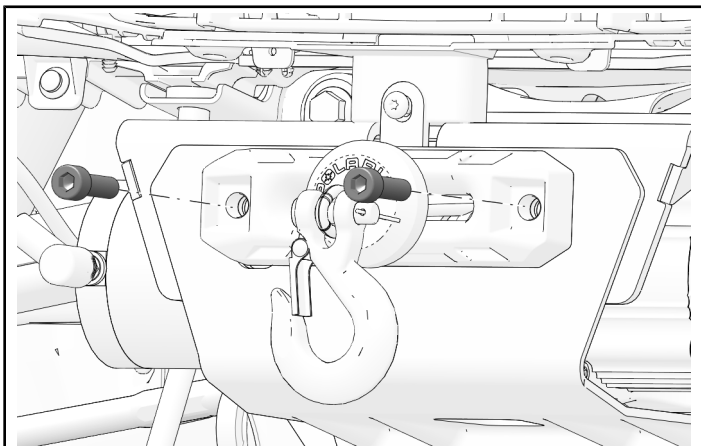


3. Turn winch lock to "FREE" to pull out winch cable. Put winch hook and fairlead through opening in bumper.


4. Align front bumper with winch mount and vehicle chassis.

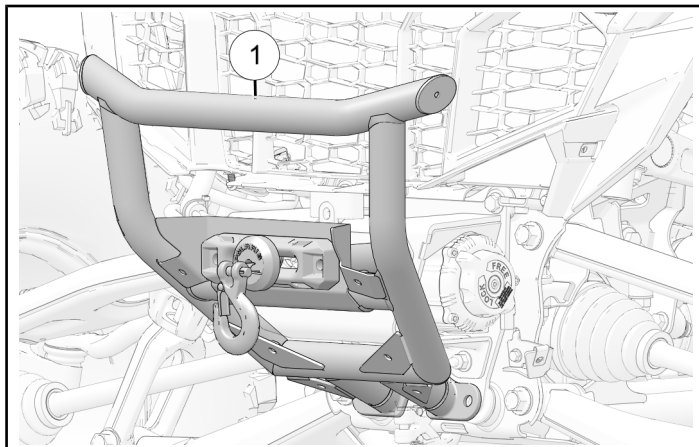

5. Install front bumper and fairlead with two top mounting fasteners ⑤.

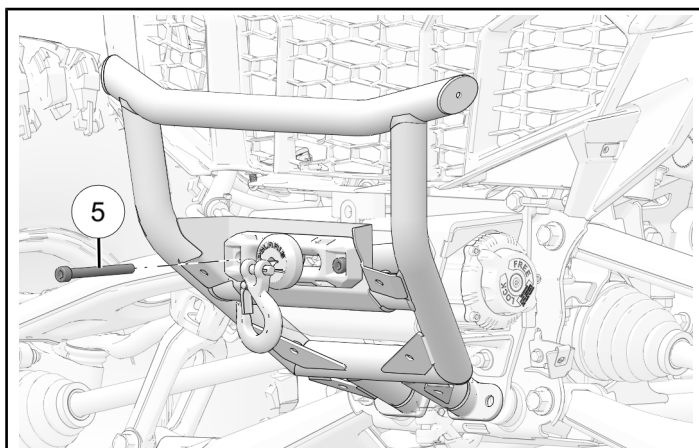

6. Install front bumper with two bottom mounting fasteners ④.

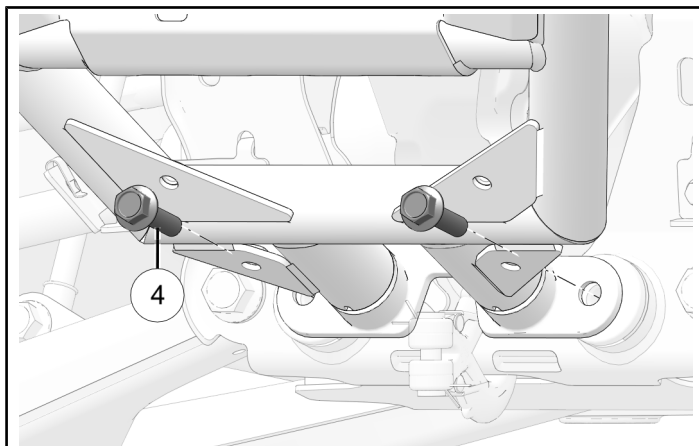


7. Torque bumper fasteners to specification.

**TORQUE**

Top Mounting Fasteners ⑤:  
**37 ft-lbs (50 N·m)**

**TORQUE**


Bottom Mounting Fasteners ④:  
**37 ft-lbs (50 N·m)**

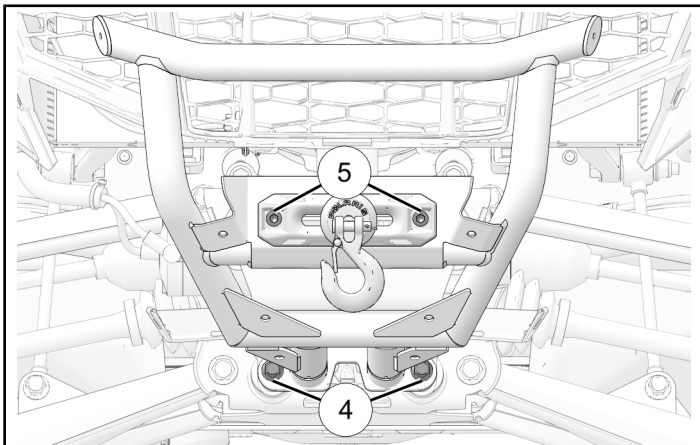

8. Install bumper plate ② with six fasteners ③.

**TORQUE**


Bumper Plate Fasteners ③:  
**7 ft-lbs (10 N·m)**

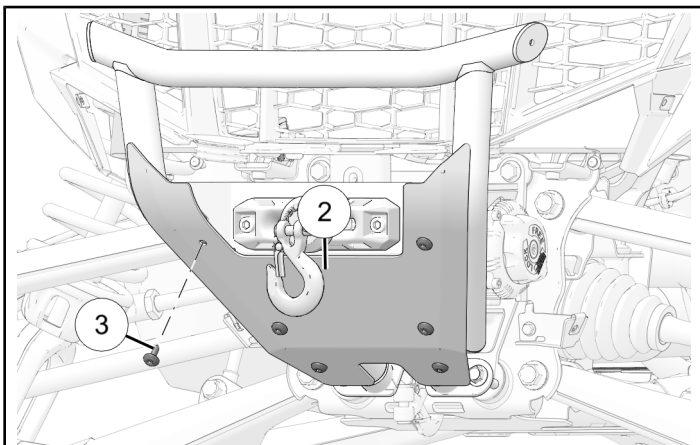

9. Reinstall front fascia panel to installed position.

**TIP**


Fascia is flexible and can be carefully bent when reinstalling over accessory bumper.

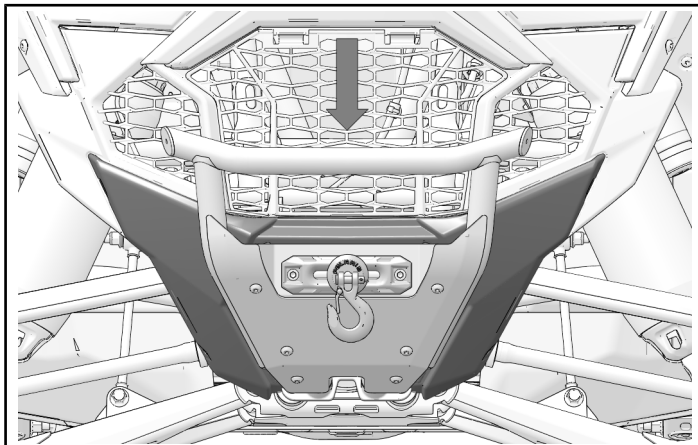

10. Reinstall top front fascia with kept fasteners (longer).

**TORQUE**

Top Fascia Fasteners (longer):  
**7 ft-lbs (10 N·m)**

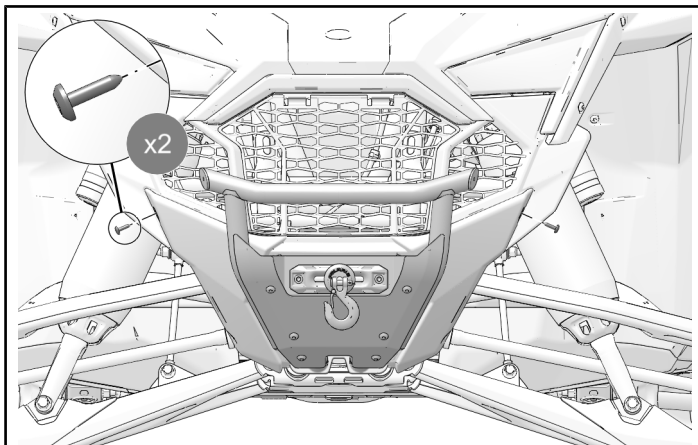





11. Reinstall bottom front fascia with kept fasteners (shorter).

#### TORQUE

Bottom Fascia Fasteners (shorter):  
**7 ft-lbs (10 N·m)**

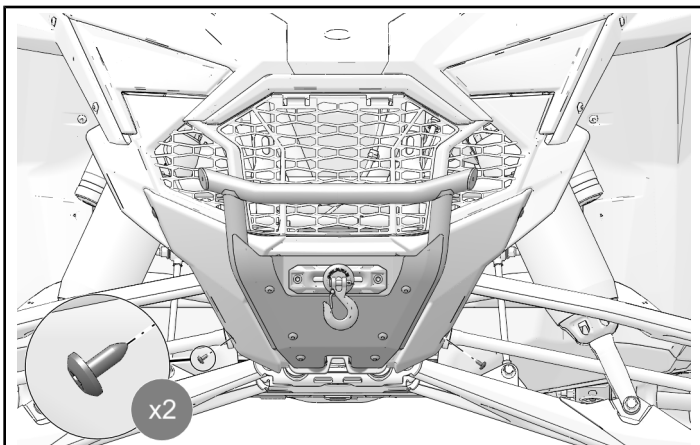

12. Install two fascia plugs ⑥ where original bumper was located.

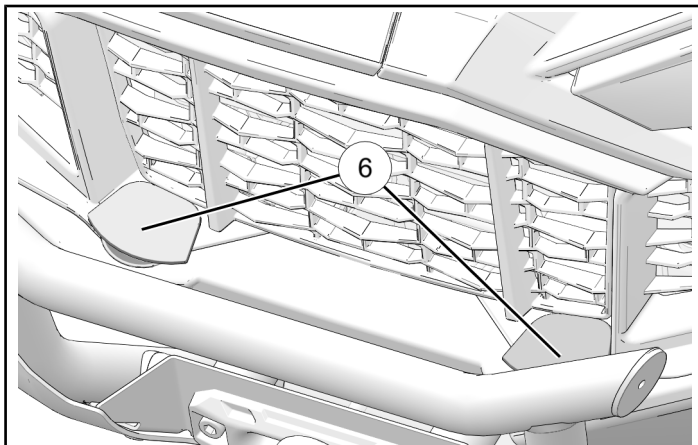

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

