

# PREMIUM FRONT BUMPER KIT



P/N 2884353

## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).


## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## ACCESSORY WEIGHT

Accessories, passenger, and other factors may negatively affect ride performance. Refer to your vehicle's owner's manual for maximum weight capacity and suspension adjustment procedures.

## KIT CONTENTS

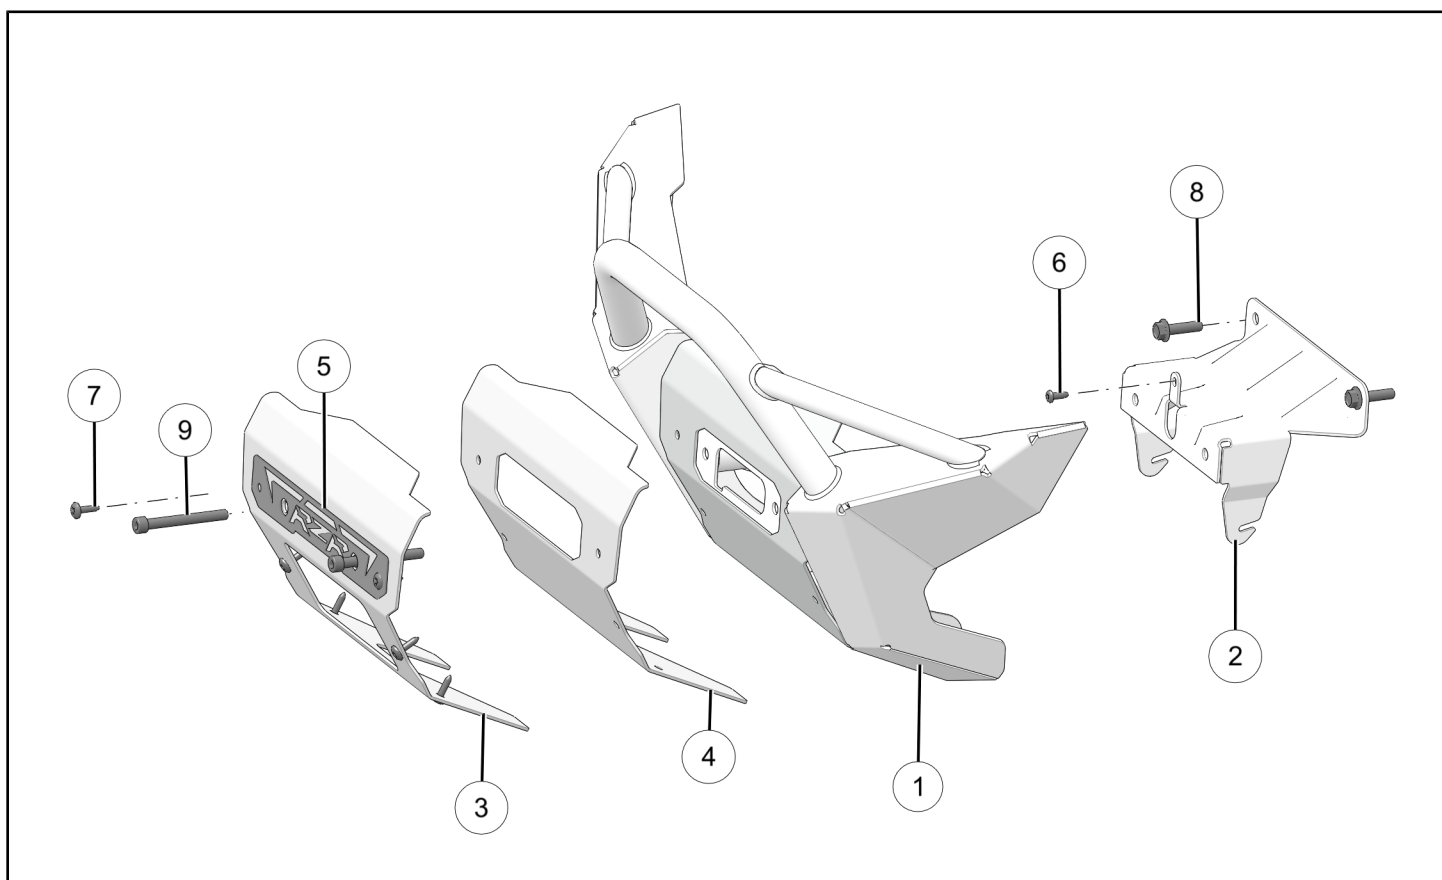

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Weld-Bumper, Front, Premium	n/a	n/a
2	1	Weld-Mount, Bumper, Front, Premium	n/a	n/a
3	1	Plate-Bumper, Light Bar	5269080	n/a
4	1	Plate-Bumper, Winch	5269081	n/a
5	1	Plate-Badge	n/a	n/a

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
6	1	Screw–Torx® Truss Head, #14 x 3/4 in, Hi/Lo	n/a	2208337
7	6	Screw–Torx® Truss Head, M6 x 1.0 mm x 20 mm	n/a	2208337
8	4	Screw–Hex Flange, M10 x 1.5 mm x 40 mm	n/a	2208337
9	2	Screw–Socket Head, M10 x 1.5 mm x 90 mm	n/a	2208337

## TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Pliers, Push Pin Rivet
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench

## IMPORTANT

Your Premium Front Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

Two different sets of installation procedures are provided: Base Configuration and Winch Configuration. Refer to the procedures that best fit your vehicle's equipment.


### VEHICLE PREPARATION

#### GENERAL

1. Shift vehicle transmission into PARK.
2. Turn key to OFF position and remove from vehicle.


#### FRONT FASCIA REMOVAL

1. Remove two top mounting fasteners (longer) and two bottom mounting fasteners (shorter) to remove front fascia from vehicle.

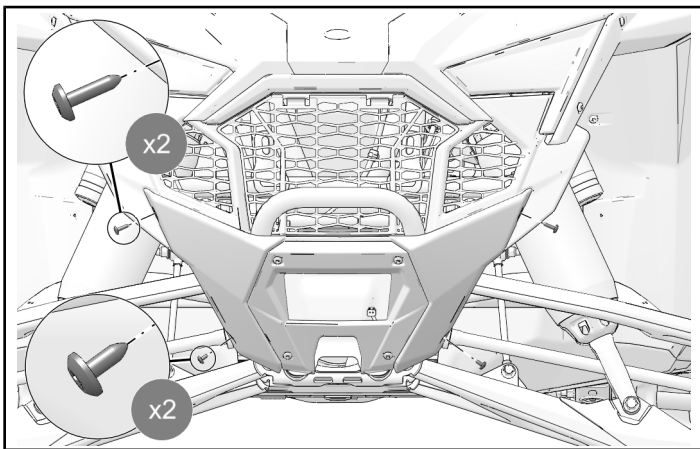


#### BUMPER REMOVAL

1. Remove two push-pin rivets from front fascia.

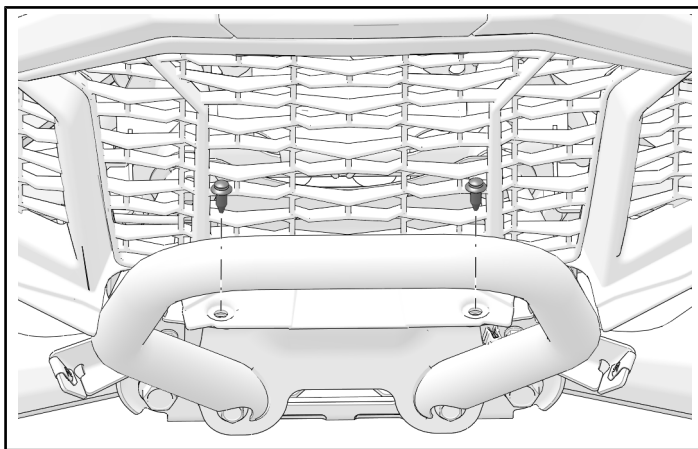


2. Remove four bumper fasteners to remove bumper assembly from chassis.

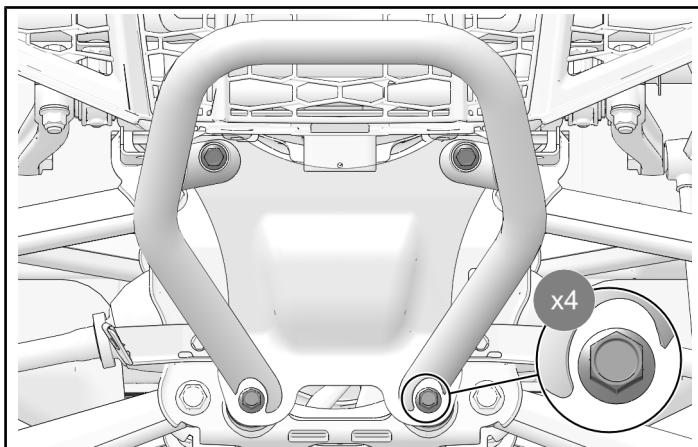

## ACCESSORY INSTALLATION

### ALL CONFIGURATIONS

1. Remove and discard two fasteners and two fascia brackets.

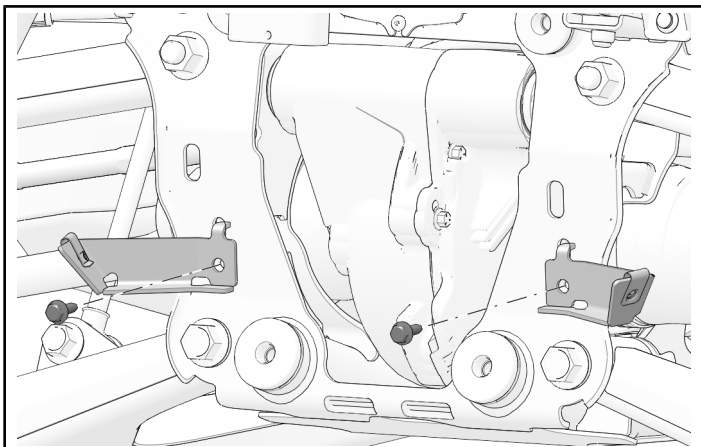


### BASE CONFIGURATION

Base configuration applies to vehicles equipped with or without the fascia 6" fascia light bar. Refer to step 3 of this section and fascia light bar instructions for installation.

1. Install bumper mount ② with two fasteners ⑧.

#### TORQUE


Bumper Mount Fasteners ⑧:  
**37 ft-lbs (50 N·m)**

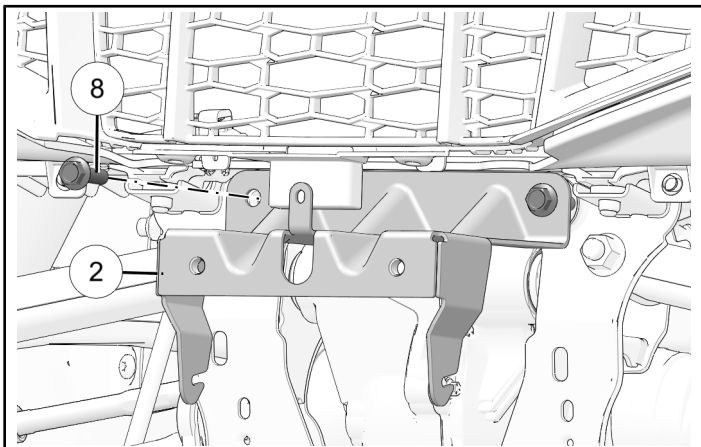


2. Install front fascia to bumper mount with one fastener ⑥.

#### TORQUE


Fascia Fastener ⑥:  
**30 in-lbs (3 N·m)**

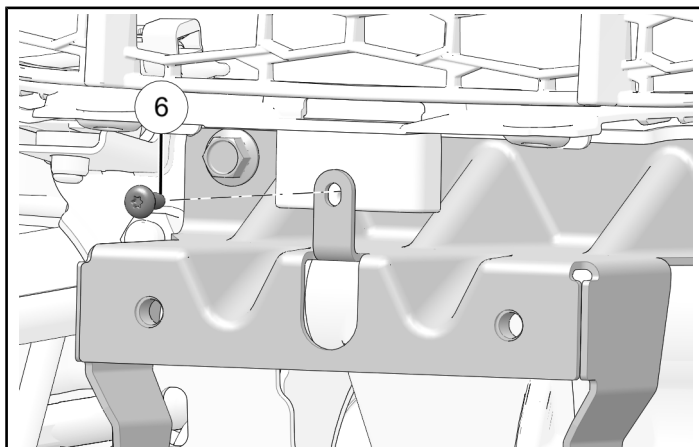


3. Optional: Proceed with installing 6" fascia light bar per light bar installation instructions.
4. With an assistant, align bumper ① with bumper mount.

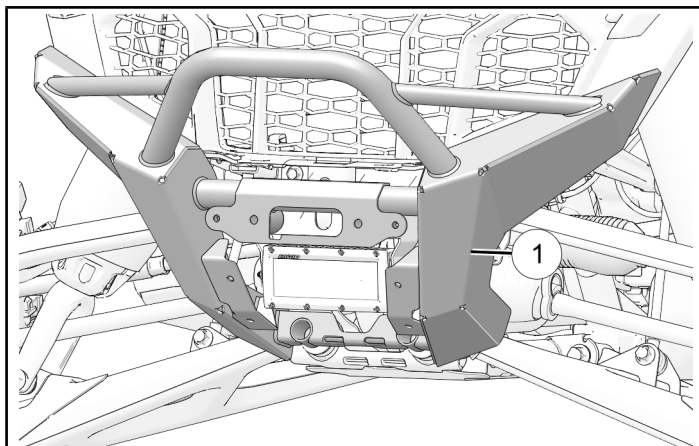

5. Install top of bumper with two fasteners ⑨.

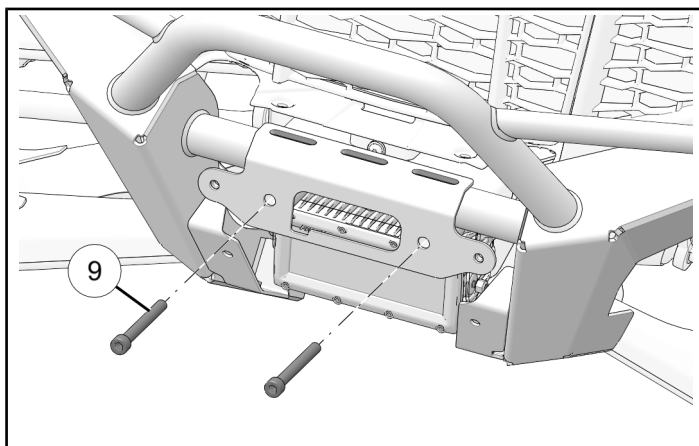

6. Install bottom of bumper with two fasteners ⑧.

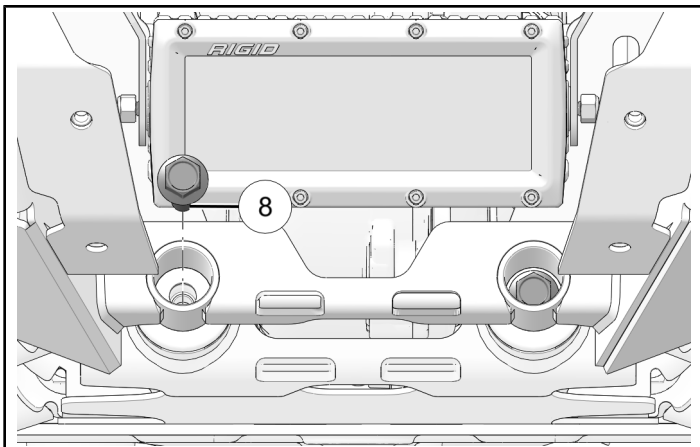


7. Torque bumper fasteners to specification.

**TORQUE**

Top Bumper Fasteners ⑨:  
**37 ft-lbs (50 N·m)**

**TORQUE**


Bottom Bumper Fasteners ⑧:  
**37 ft-lbs (50 N·m)**

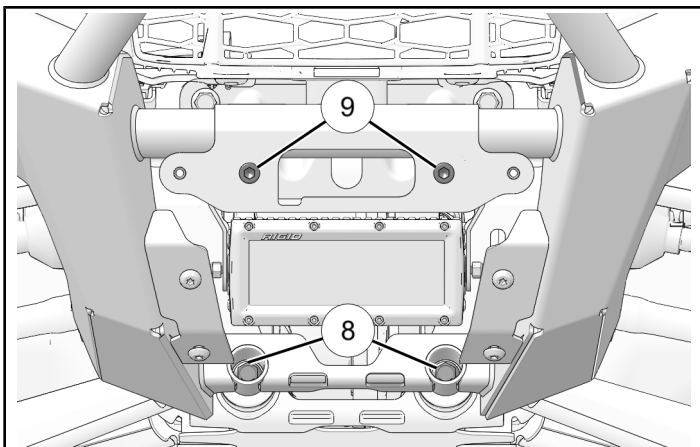


8. Install bumper plate ③ with four plate fasteners ⑦.

**NOTICE**

Bumper plate ④ not used with Base Configuration

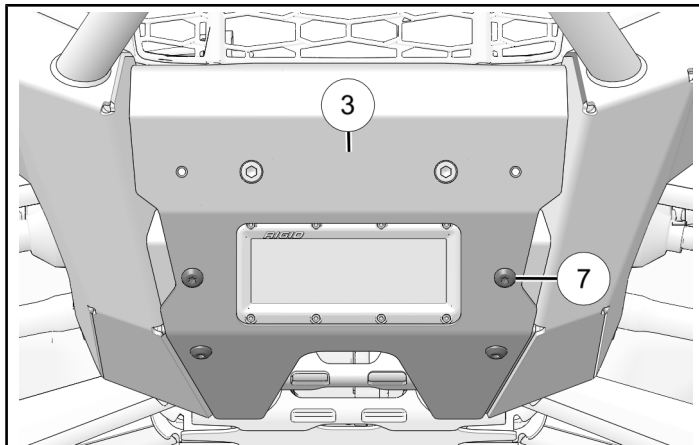

9. Install RZR name plate ⑤ with two fasteners ⑦.

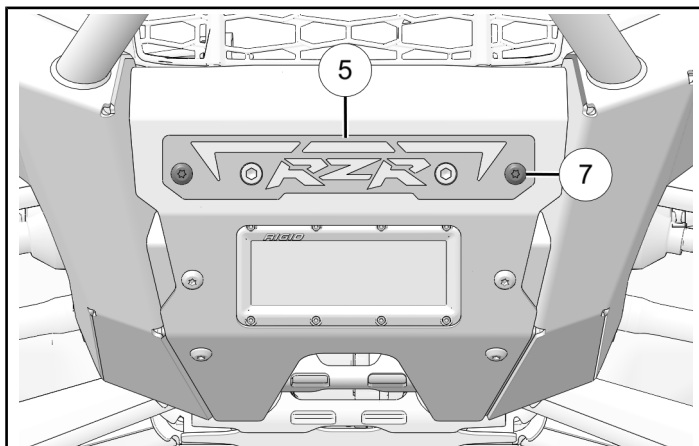


10. Torque bumper plate fasteners ⑦ to specification.

**TORQUE**


Bumper Plate Fasteners ⑦:  
**7 ft-lbs (10 N·m)**

## WINCH CONFIGURATION

1. Remove and discard two lower winch mount fasteners.

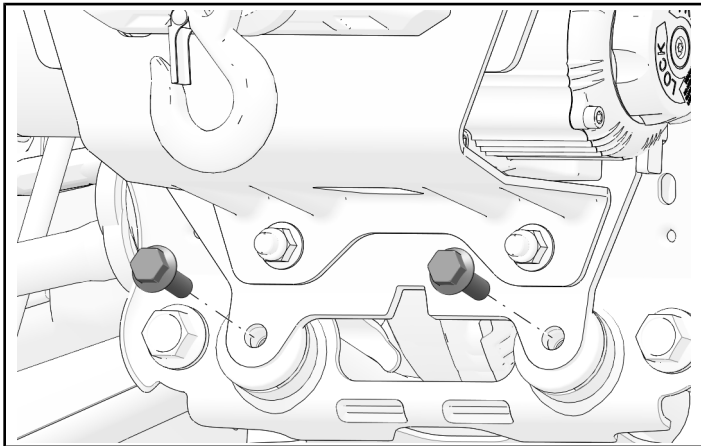


2. Remove and discard two fairlead fasteners.

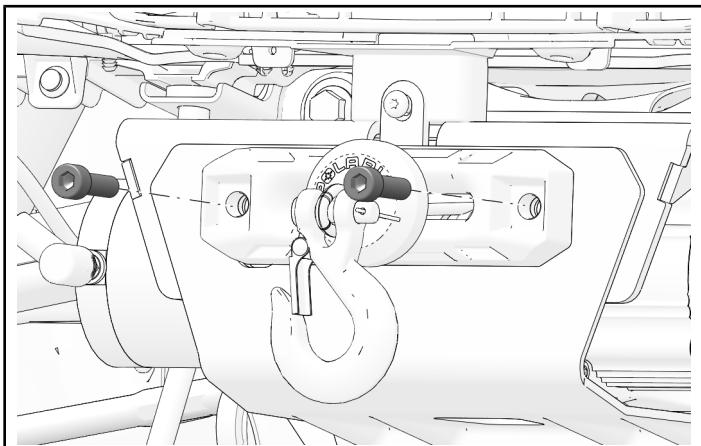


3. Turn winch lock to "FREE" to pull out winch cable. Put winch hook and fairlead through opening in bumper.


4. With an assistant, align bumper ① with winch mount.

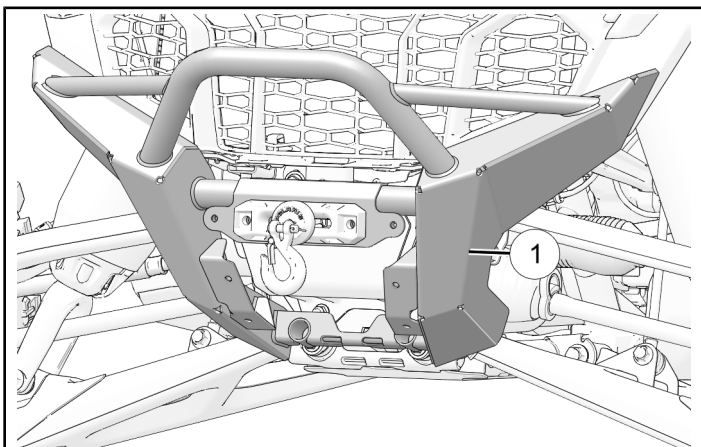

5. Put two fasteners ⑨ through fairlead and install top of bumper to winch mount.

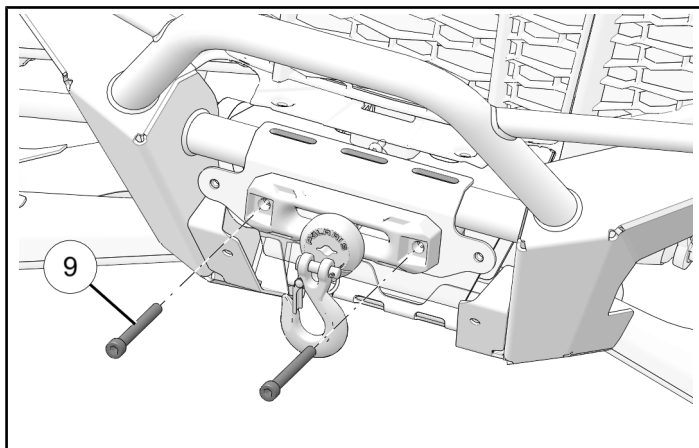

6. Install bottom of bumper with two fasteners ⑧.

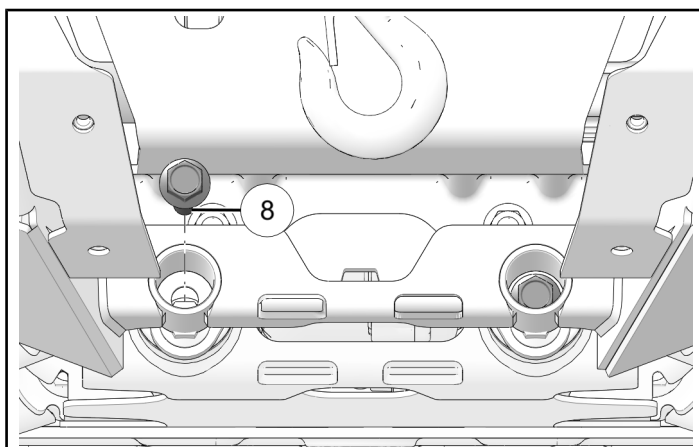


7. Torque bumper fasteners to specification.

### TORQUE

Top Bumper Fasteners ⑨:  
**37 ft-lbs (50 N·m)**

### TORQUE

Bottom Bumper Fasteners ⑧:  
**37 ft-lbs (50 N·m)**

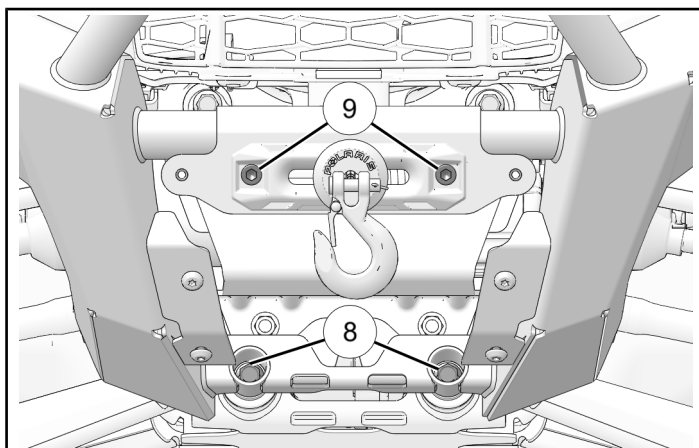


8. Install bumper plate ④ with six plate fasteners ⑦.

**NOTICE**

Bumper plate ③ not used with Winch Configuration

**TORQUE**

Bumper Plate Fasteners ⑦:  
**7 ft-lbs (10 N·m)**

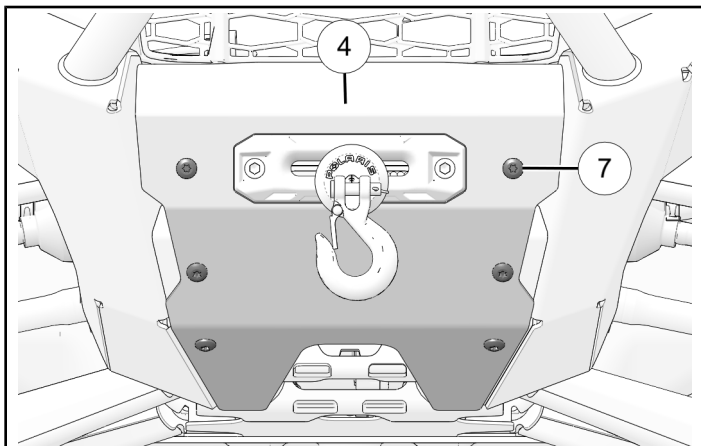

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

