

FULL WINDSHIELD KIT



P/N 2884757, 2884911

APPLICATION

Verify accessory fitment at www.polaris.com.


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

NOTICE

Full Windshield Kit, P/N 2884757 shown; others similar.

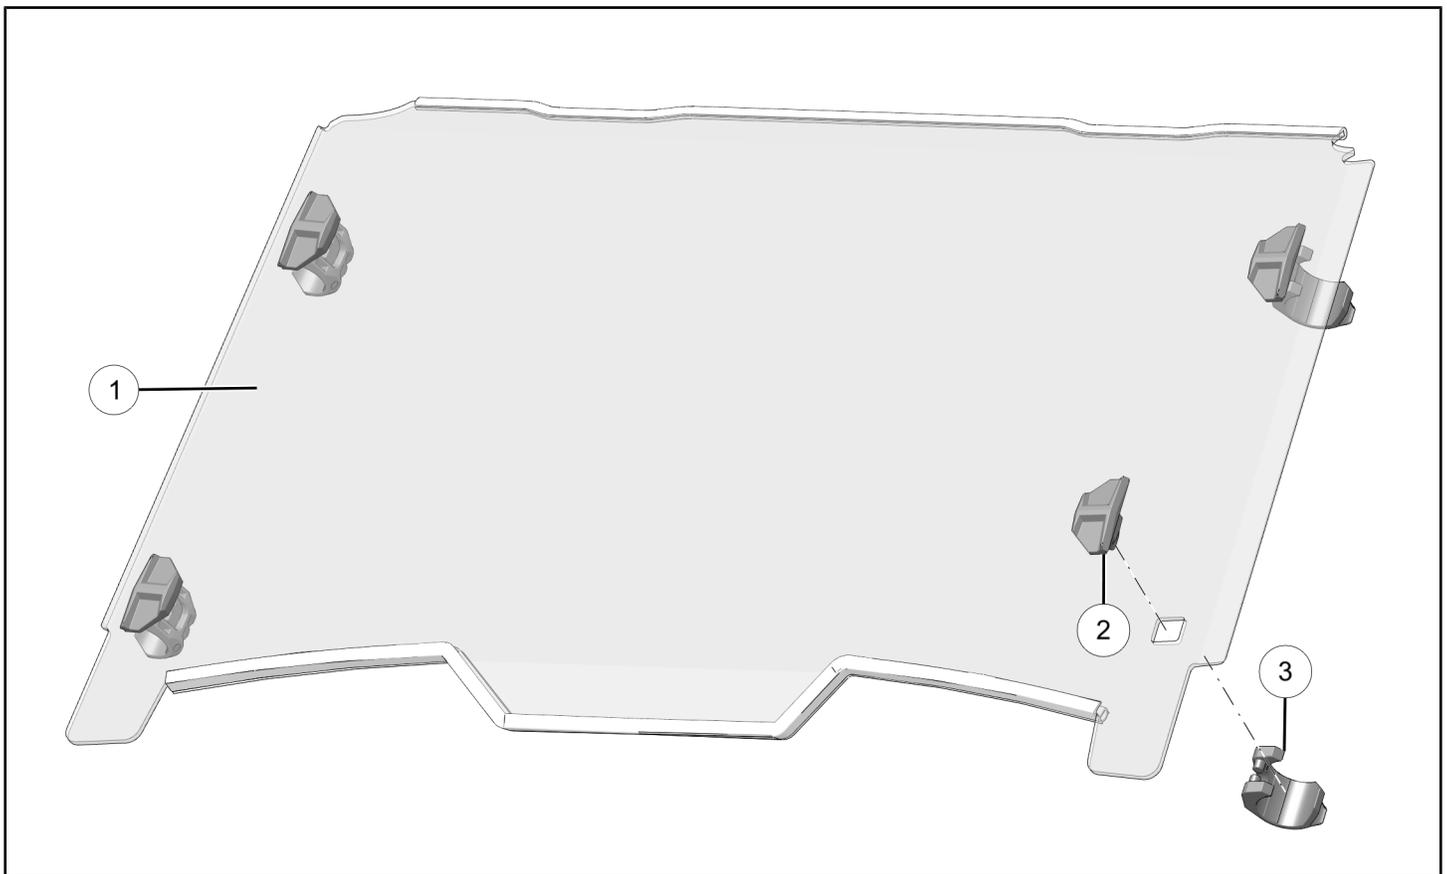

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly-Windshield, Full	n/a	n/a
2	2	Clamp-Lock & Ride®, Base	n/a	2207386
3	3	Clamp-Lock & Ride®, Lever	n/a	2207386

TOOLS REQUIRED

None

IMPORTANT

Your Full Windshield Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

ACCESSORY INSTALLATION


1. Place windshield on hood and lean against ROPS.

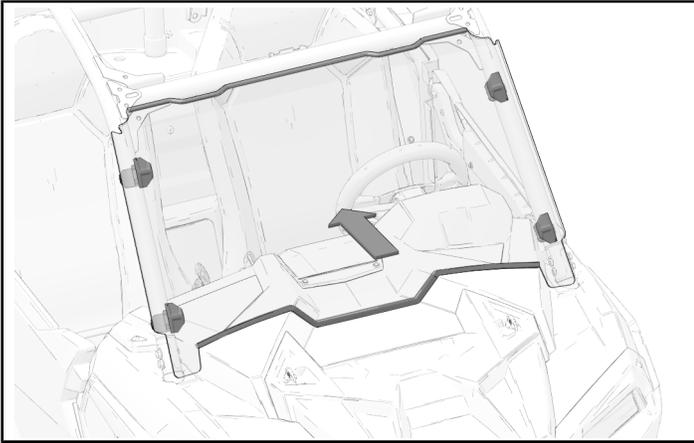


2. Ensure base of windshield aligns with hood.

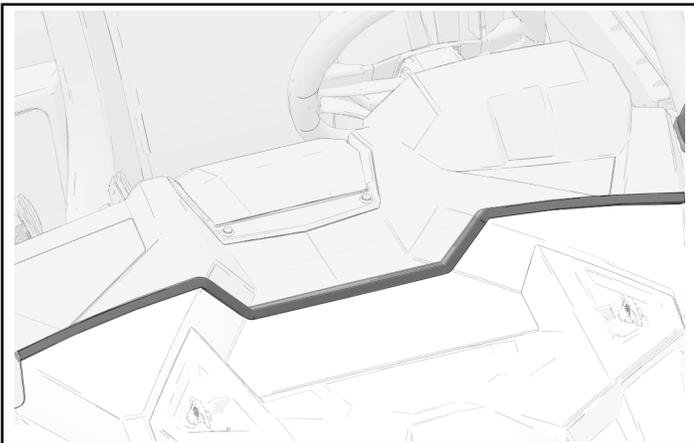

3. With windshield in correct position, secure to ROPS with four Lock & Ride® clamps.

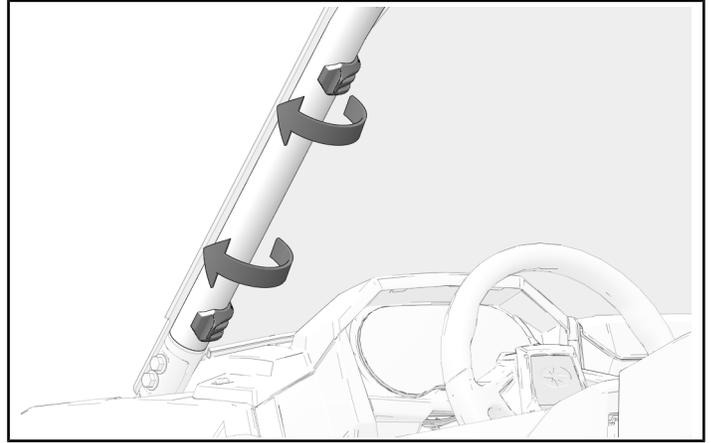

4. Windshield may need repositioning. If needed, release top clamps and slide windshield up along ROPS.

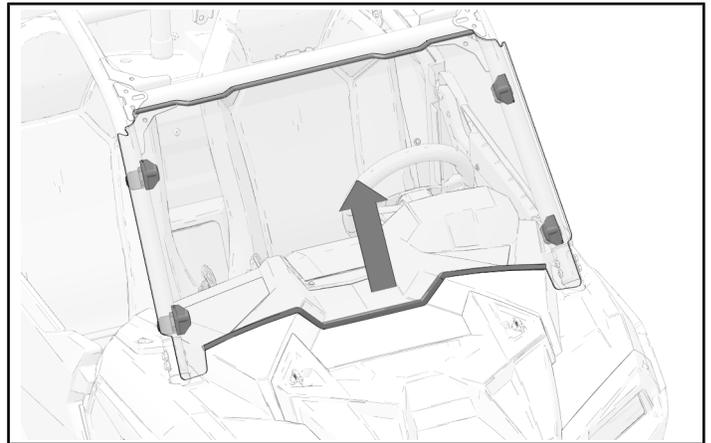

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

