

# POLY ROOF KIT



P/N 2884729


## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

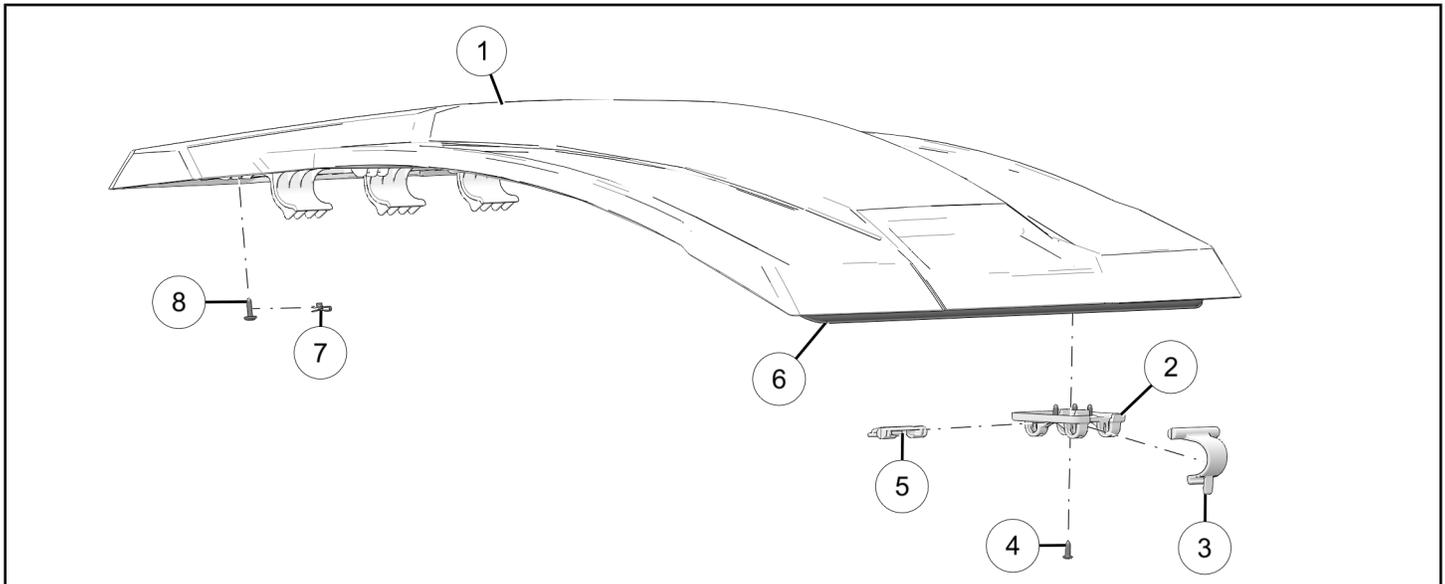

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Panel–Roof, Poly	5457311	n/a
2	2	Clamp–Base, Roof	n/a	2207824
3	2	Clamp–Hoop, Roof	n/a	2207824
4	8	Screw–Torx®, Truss head, #14 x 3/4 in x HI/LO	n/a	2208720
5	2	Clamp–Latch, Roof	n/a	2207824
6	1	Seal–Clip	n/a	2208720
7	2	Clip–U, Speed Nut	n/a	2208720
8	2	Screw–Torx® Truss head, M6 x 1.0 x 25	n/a	2208720

## TOOLS REQUIRED

- Safety Glasses
- Socket Set, Torx® Bit
- Torque Wrench

## IMPORTANT

Your Poly Roof Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

### VEHICLE PREPARATION


#### GENERAL

1. Shift vehicle transmission into PARK.
2. Turn ignition switch to OFF position and remove key.


### ACCESSORY INSTALLATION

#### CLAMP ASSEMBLY

1. Install clamp hoop ③ and clamp latch ⑤ into clamp base ②.

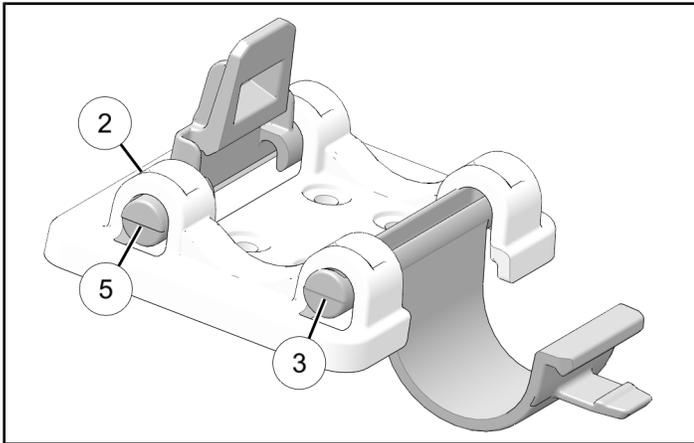

2. Test clamp hoop and clamp latch movement to make sure both are fully installed.

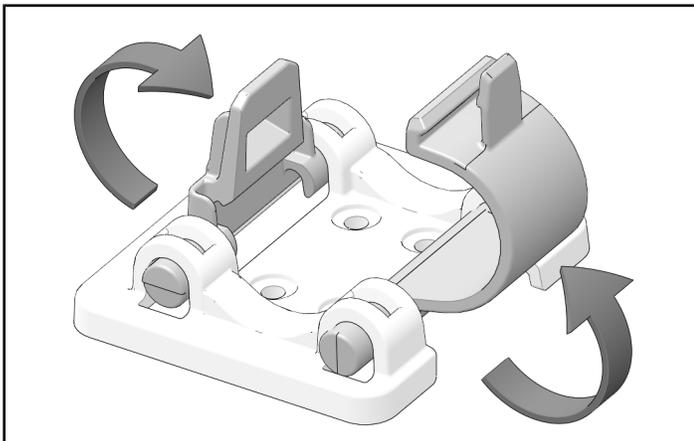


#### HARDWARE INSTALLATION


1. Install each clamp assembly onto roof panel with four clamp fasteners ④.

#### TORQUE


Clamp Fasteners ④:  
20 in-lbs (2 N·m)

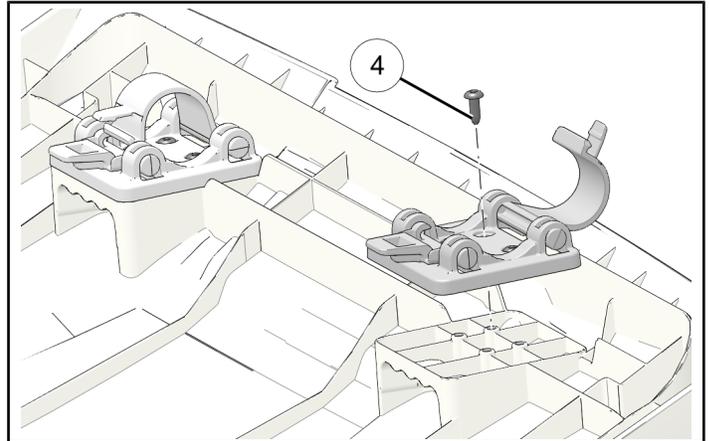


2. Install two U-clips ⑦ onto roof panel.

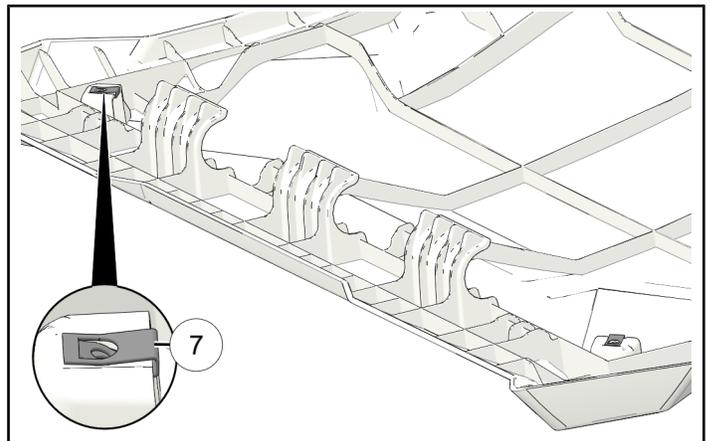

3. Windshield-equipped vehicles only:  
Install seal ⑥ onto front of roof panel.

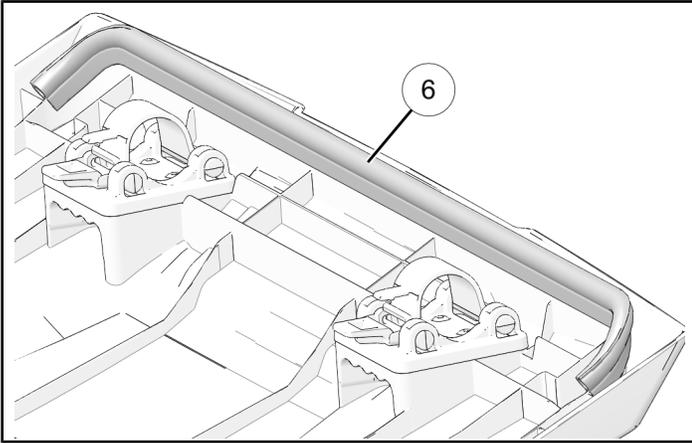


3. Wrap hoops around cross-beam and secure with latch.

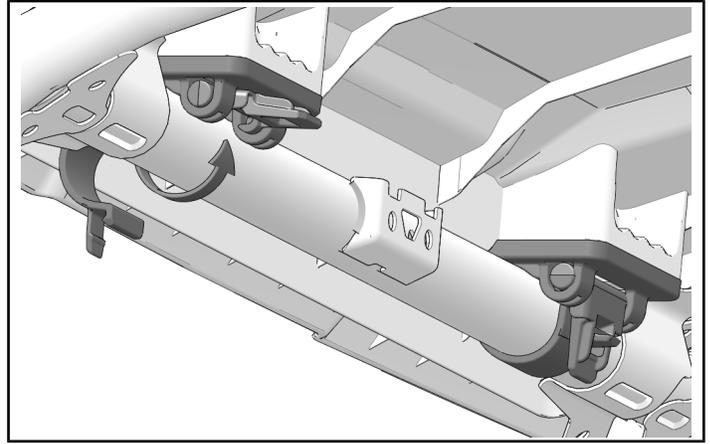


## ROOF INSTALLATION

1. Hook rear of roof panel onto rear ROPS cross-beam.

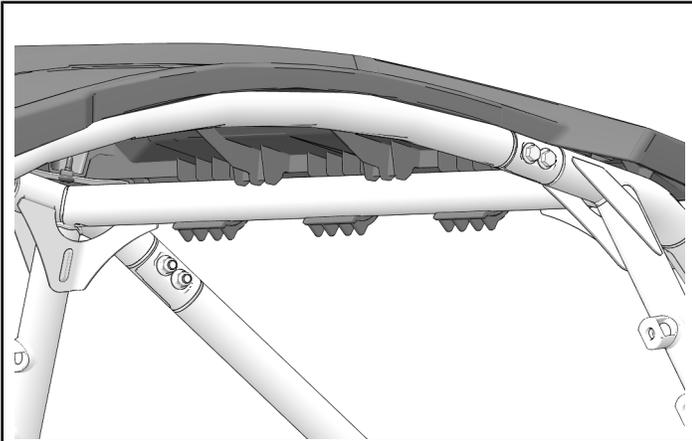


2. Rest clamp assemblies onto front ROPS cross-beam.

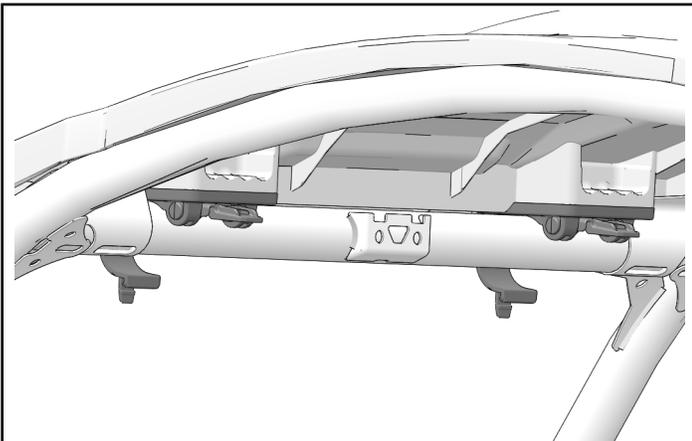

4. Install rear of roof panel with two roof fasteners ⑧.

### TORQUE

Rear Roof Fasteners ⑧:  
**96 in-lbs (11 N·m)**

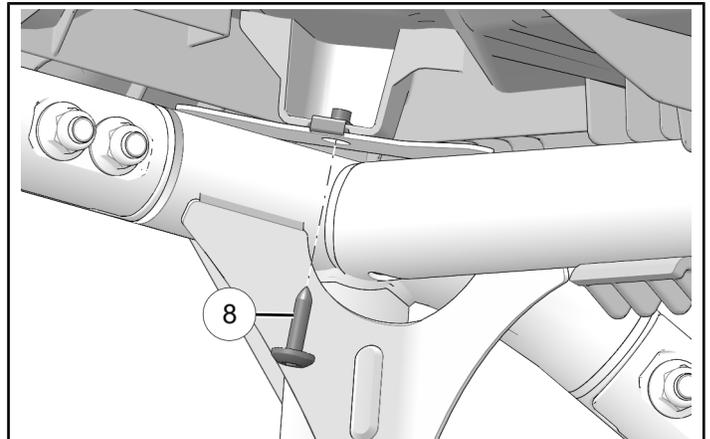

## INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

