

FULL VENTED WINDSHIELD KIT



P/N 2883756; 2884305; 2884747; 2884968

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION


Verify accessory fitment at www.polaris.com.

KIT CONTENTS

FULL VENTED WINDSHIELD P/N 2883756; 2884305; 2884968


NOTICE

Full Vented Windshield Kit, P/N 2884968 shown; others similar.

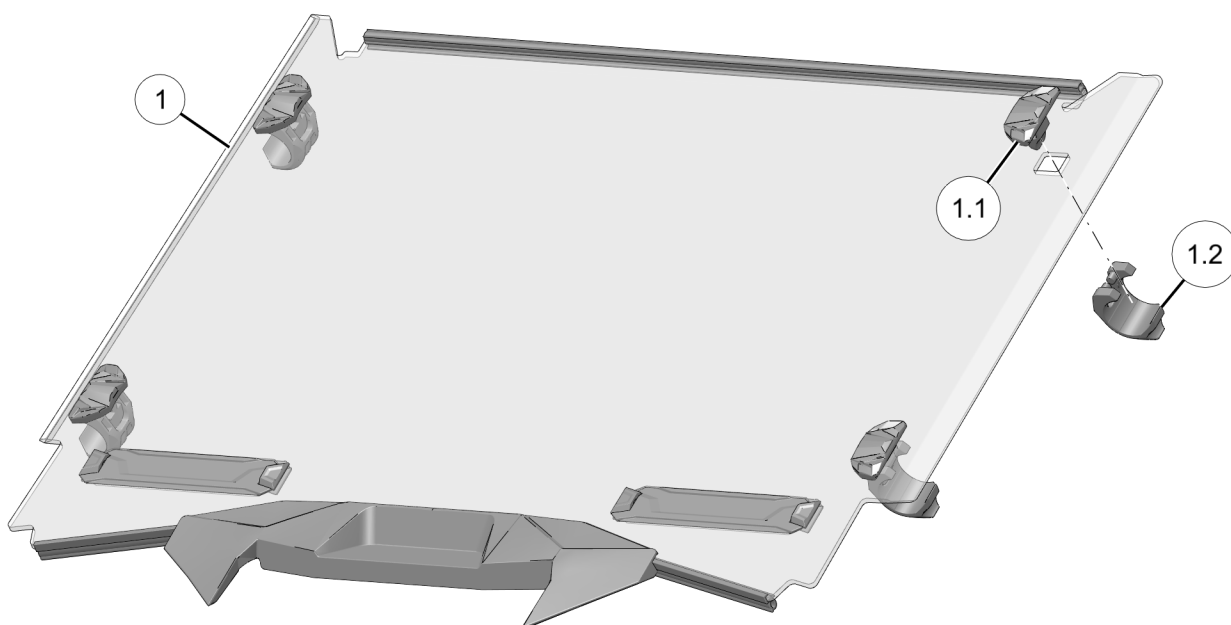

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly–Windshield, Full, Vented	n/a	n/a
2	4	- Clamp–Lock & Ride®, Base, 2 in	n/a	2207767
3	4	- Clamp–Lock & Ride®, Lever, 2 in	n/a	2207767

FULL VENTED WINDSHIELD P/N 2884747

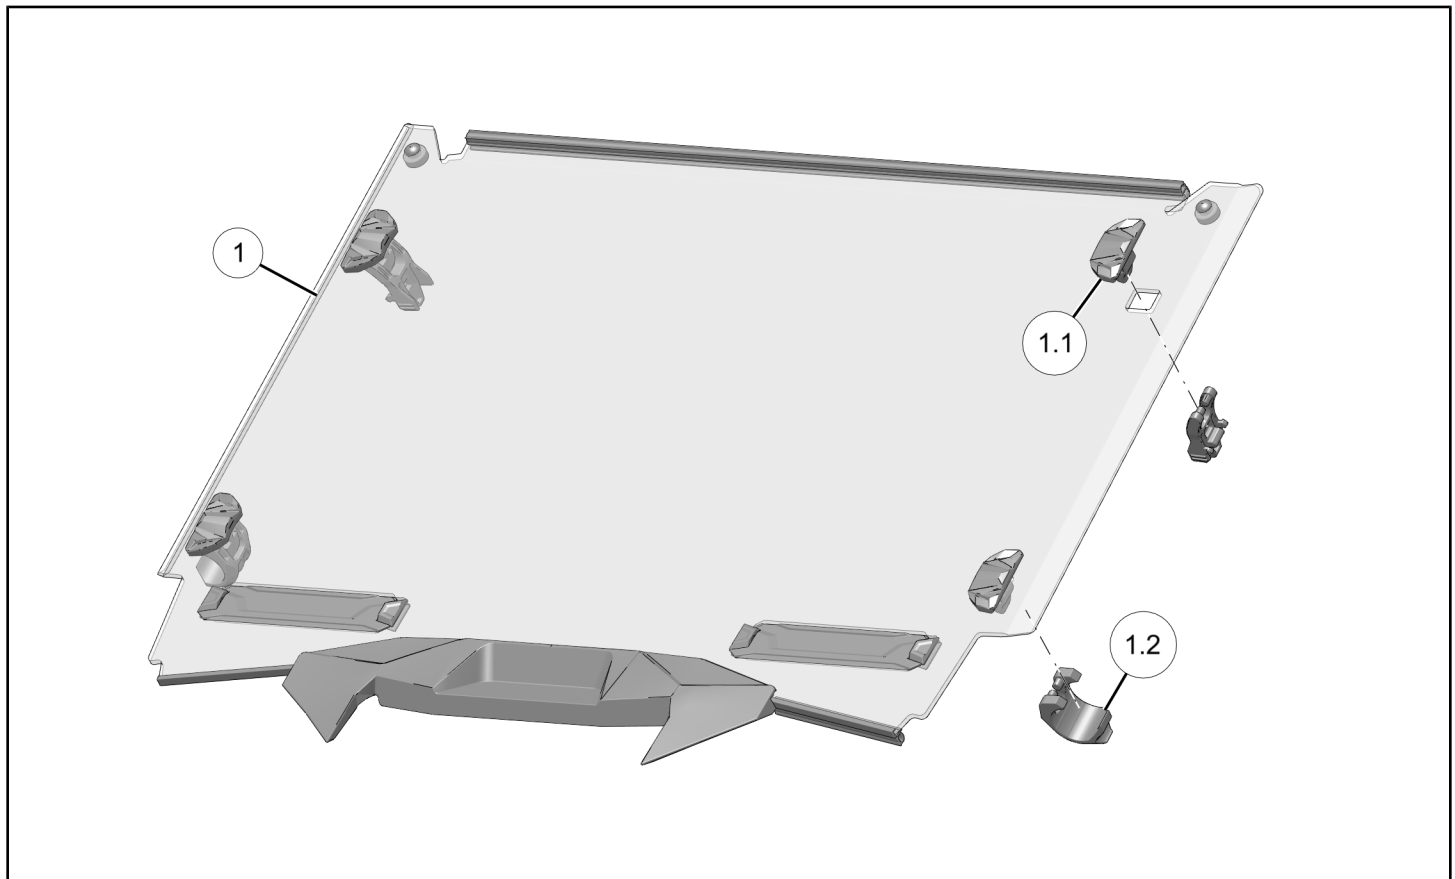

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly–Windshield, Full, Vented	n/a	n/a
2	4	- Clamp–Lock & Ride®, Base, 2 in	n/a	2207767
3	2	- Clamp–Lock & Ride®, Lever, 2 in	n/a	2207767

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Full Vented Windshield Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

⚠ WARNING

If transporting vehicle in non-enclosed trailer then vehicle must **FACE FORWARD**, or windshield must be removed.

Failure to comply may allow airflow, vibration, or other factors to separate windshield from vehicle and cause an accident, resulting in serious personal injury or death.

NOTICE

Two installers are recommended for this installation.

NOTICE

Full Vented Windshield Kit, P/N 2884968 shown; others similar.


VEHICLE PREPARATION

GENERAL

1. Shift vehicle transmission into PARK.
2. Turn key to OFF position and remove from vehicle.


HOOD REMOVAL

1. Remove and keep two hood fasteners. Move hood backwards to remove.

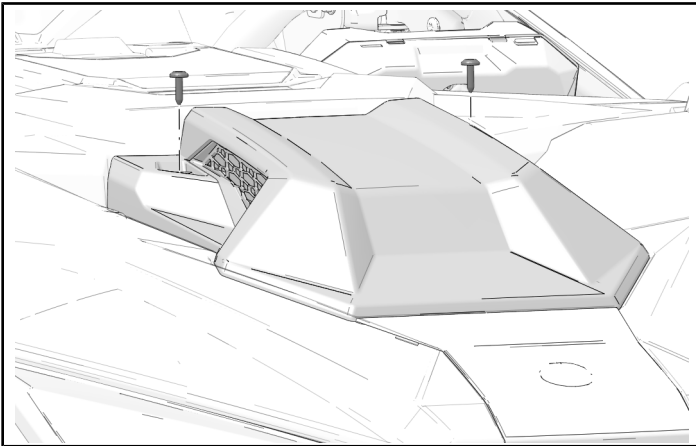


ACCESSORY INSTALLATION

1. Put windshield on top upper fenders and lean against roll-cage.

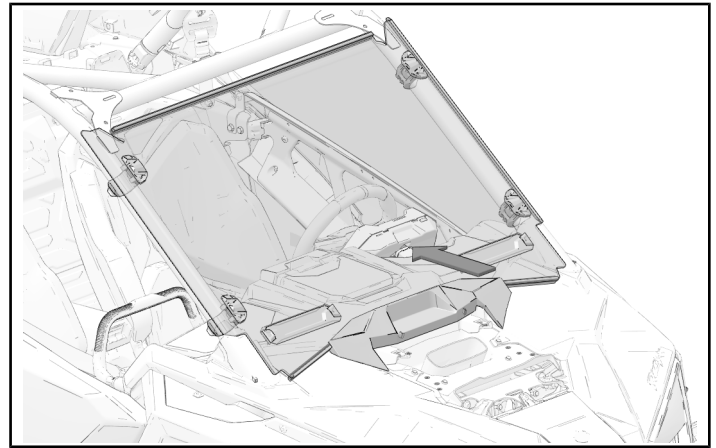


2. Make sure bottom of windshield aligns with upper fenders.

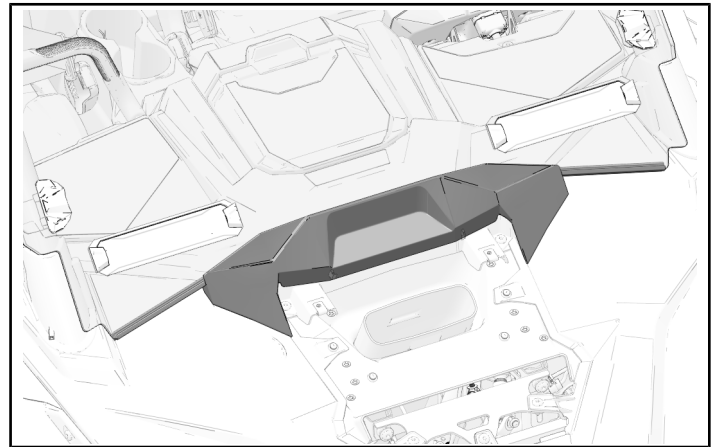


3. With windshield in correct position, lock Lock & Ride® clamps around roll-cage.


- P/N 2884747 Only
Push tabs in and insert clamp snaps into A-pillar support bracket slot. Make sure snaps are full engaged in bracket slots.

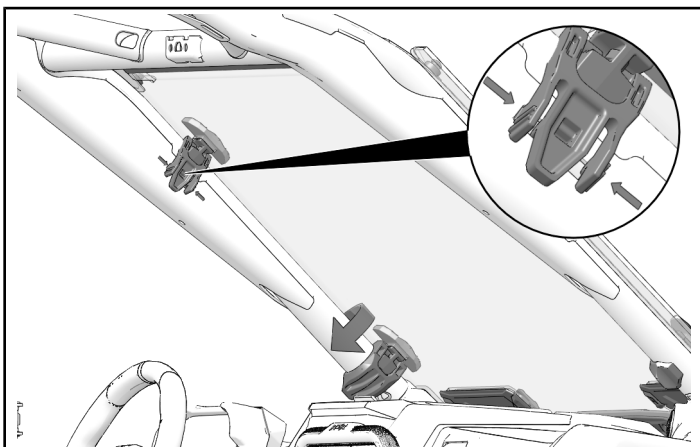

- Other Models

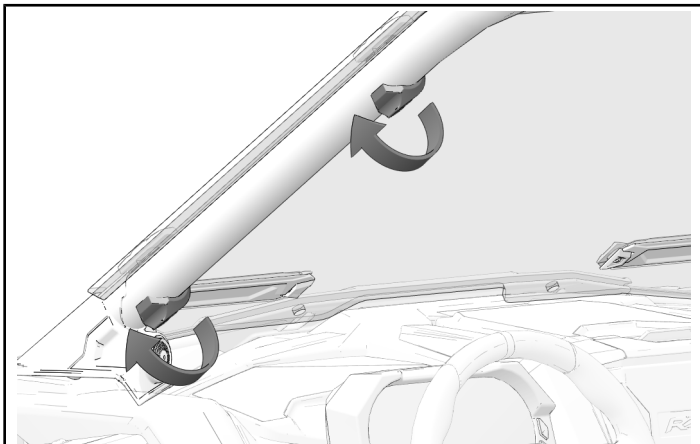

4. Windshield may need repositioning. If needed, release clamps and move windshield upwards along roll-cage.

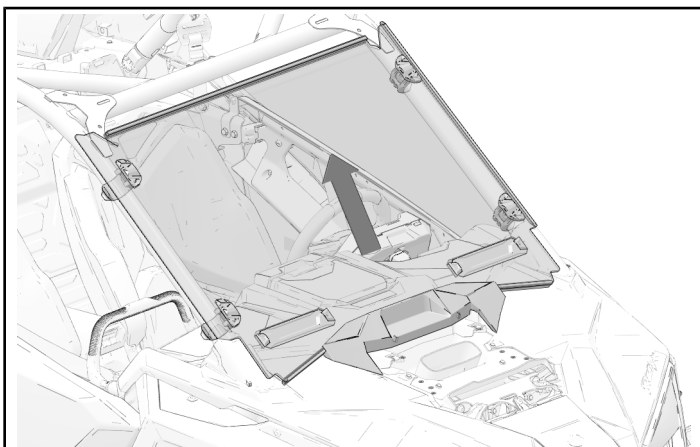


VEHICLE REASSEMBLY

HOOD INSTALLATION

1. Slide hood panel forward until tabs slide into front hood panel. Install with two retained hood fasteners.

TORQUE


Hood Fasteners:
88 in-lbs (10 N·m)

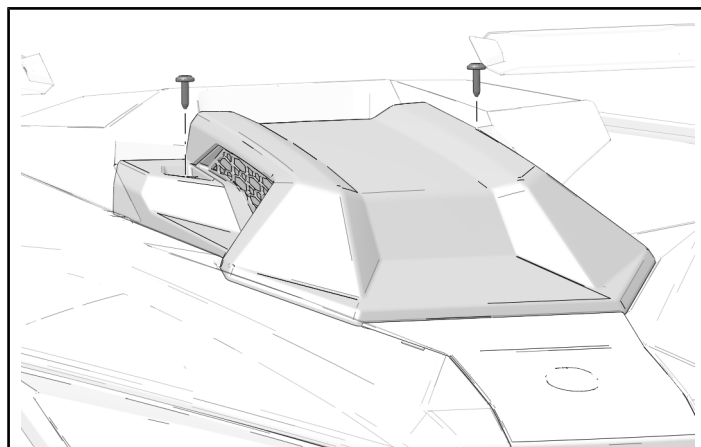

OPERATION


OPENING VENT

Push bottom of vent to open.

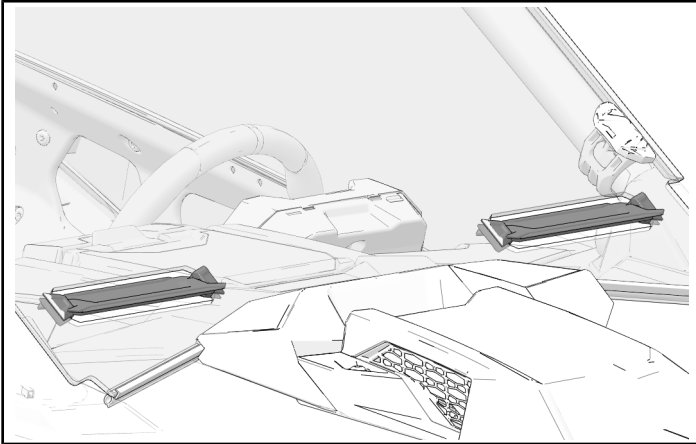

CLOSING VENT

Push top of vent to close.

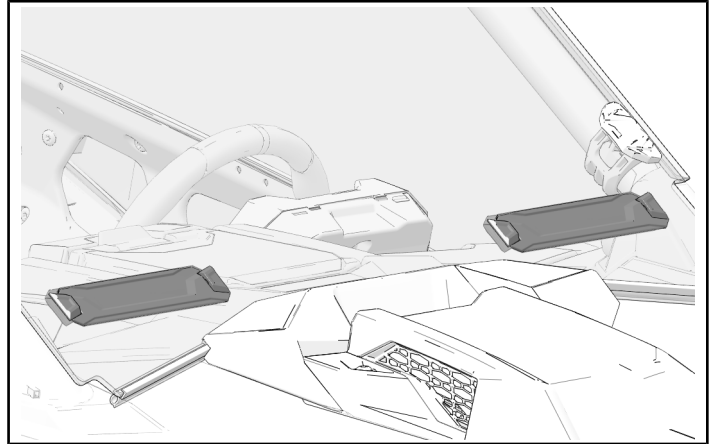

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

