ROOF LINER KIT

P/N 2885094

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

P&LARIS

ENGINEERED PARTS

APPLICATION


Verify accessory fitment at www.polaris.com.

REQUIRED SOLD SEPARATELY

Only parts for installation of the Roof Liner Kit are included. Prior installation of the following additional kits are also required (sold separately):

• Poly Roof Kit, P/N 2885078

KIT CONTENTS

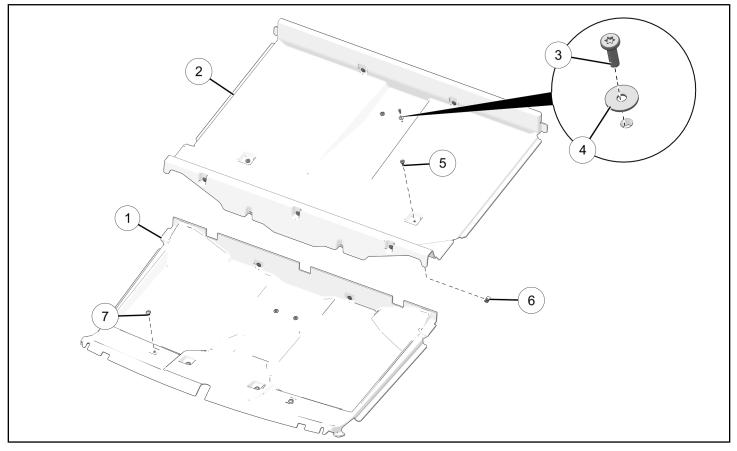

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Liner–Roof, Front	5815065
2	1	Liner–Roof, Rear	5815066
3	4	Screw–Torx® Pan Head, Hi/Lo, #10 x 5/8 in	7518238
4	4	Washer–0.20 x 0.67 x 0.048 in	7556034

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
5	2	Screw–Torx® Truss Head, M6 x 1.0 x 25 mm	7519650
6	2	Nut–U, Clip	7081305
7	11	Dart–Push, Plastic, Nylon	7670088

TOOLS REQUIRED

- Safety Glasses
- Hammer, Soft Face

- Socket Set, Torx[®] Bit
- Torque Wrench

IMPORTANT

Your Roof Liner Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS VEHICLE PREPARATION

GENERAL


- 1. Park vehicle on a flat surface.
- 2. Shift vehicle into PARK.
- 3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION


1. Install two U-nuts ⁽⁶⁾ onto rear roof panel, as shown.

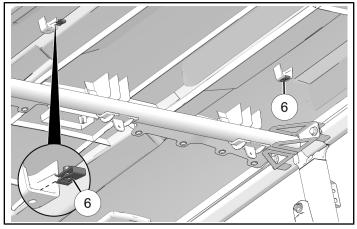


2. Attach rear roof liner (1) to front roof liner (1) with two push-darts (1).

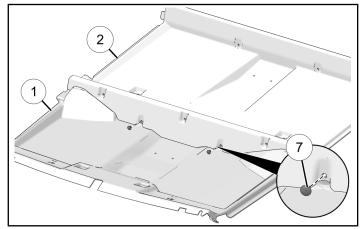


3. Put roof liner assembly in vehicle, through passenger side, and align with roof.

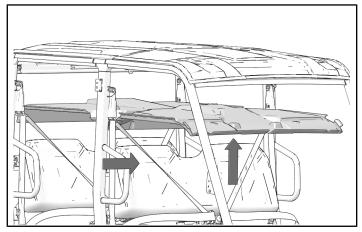


4. Put tabs of front roof liner between roof and roll cage.

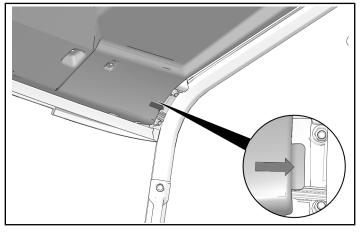


5. Make sure both sides of front roof liner are placed between roof and roll cage.

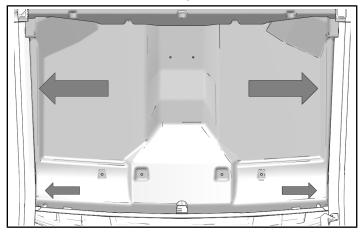


6. Put tabs of rear roof liner between roof and roll cage.

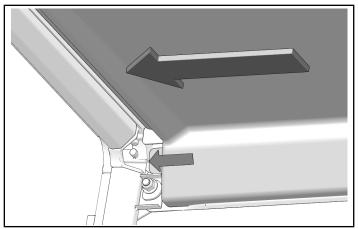


7. Make sure both sides of rear liner are placed between roof and roll cage.

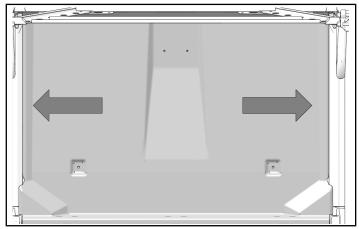

8. Install front of roof liner to windshield mounting plate with four push-darts \overline{O} .

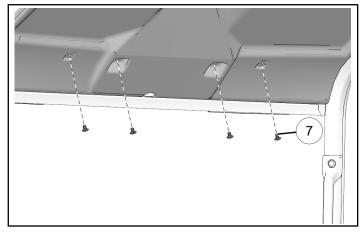


9. Install rear of roof liner to roll cage with two pushdarts $\widehat{\mathcal{T}}.$

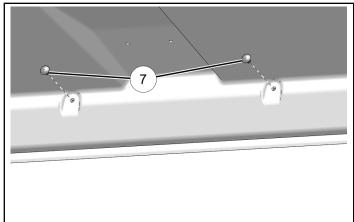


 Install middle of front roof liner to roof with two screws ③ and two washers ④. Torque screws to specification.

> TORQUE Roof Liner Screws ③: 42 in-Ibs (4.7 N·m)

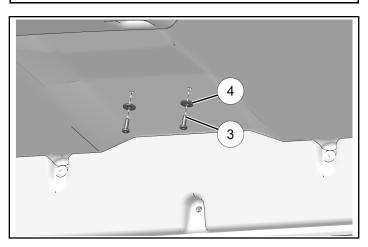

11. Install middle of rear roof liner to roof with two screws ③ and two washers ④. Torque screws to specification.


TORQUE Roof Liner Screws ③: 42 in-Ibs (4.7 N·m)

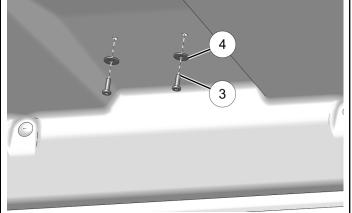


INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

12. Install rear roof liner to roof with two screws (5). Torque two screws to specification.

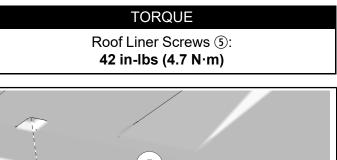

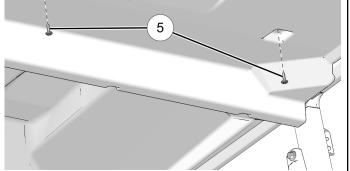

13. Install rear roof liner to roll cage with three pushdarts ⑦.

