

TIRE CHAINS KIT



P/N 2889242; 2889816


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

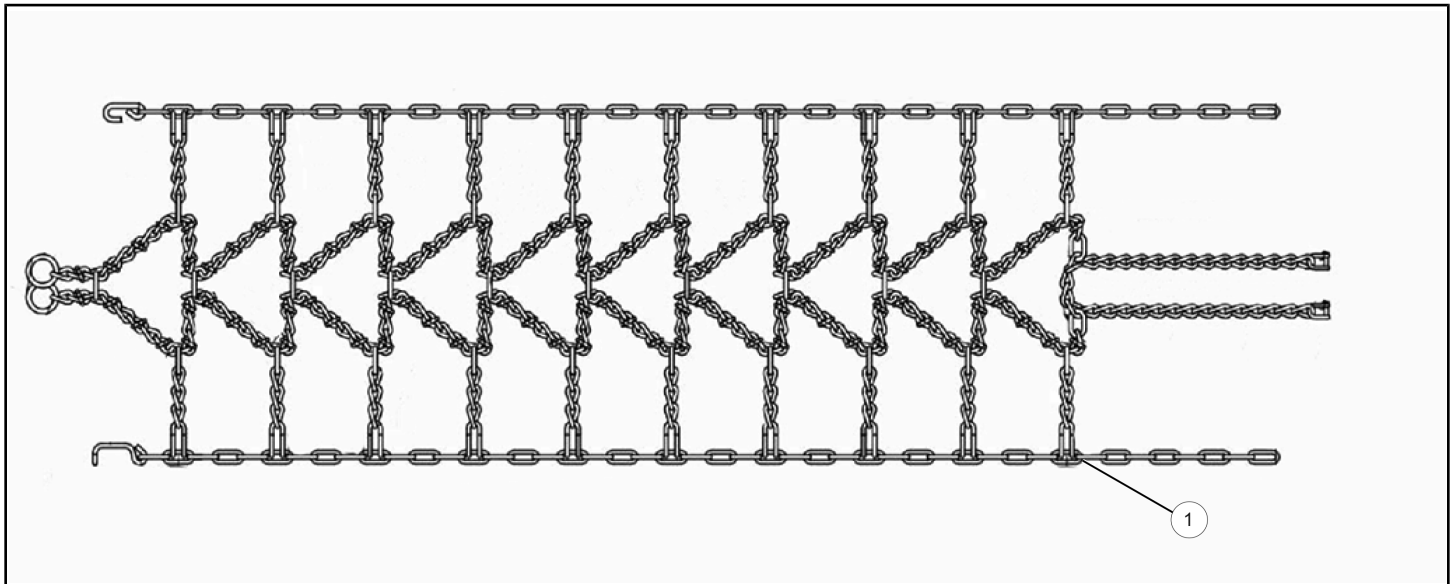

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Chains with Safety Wire, Tire	n/a

TOOLS REQUIRED

- Pliers, Needle Nose
- Vehicle Lift/Support Equipment

CONSUMABLES REQUIRED

- Cable Ties

IMPORTANT

Your Tire Chains Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Lift rear tires using vehicle lift/support equipment.
4. Remove air from rear tires.



NOTICE

Remove air until rear tires are almost flat.
--

5. Shift vehicle into NEUTRAL.
6. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION

1. Put the tire chains ① over the rear tires. Make sure cam hook ② is on the outside of the tire and plain hook ③ is on the inside of the tire.

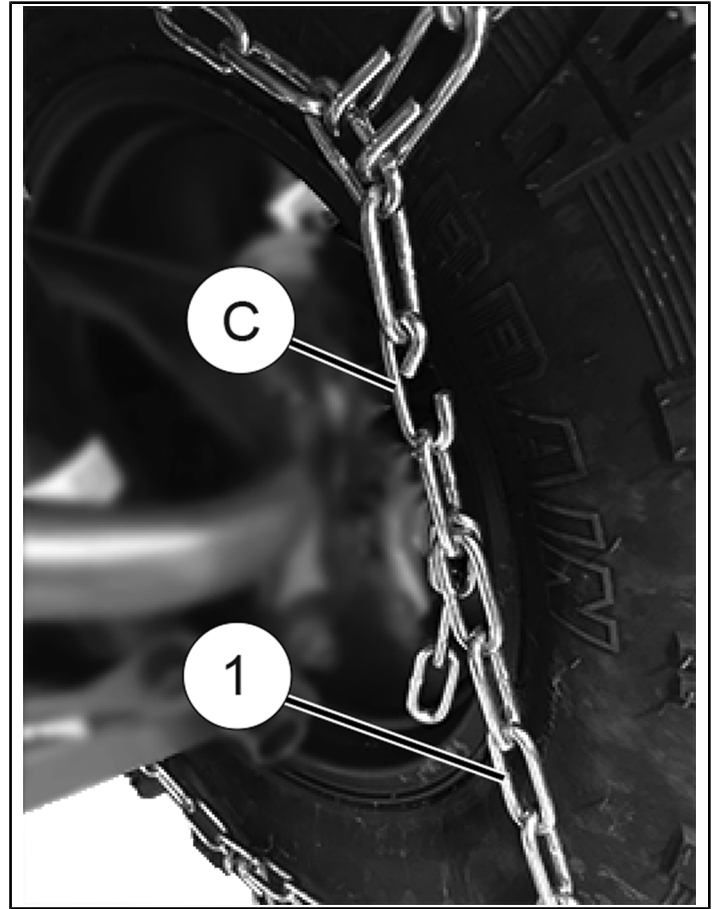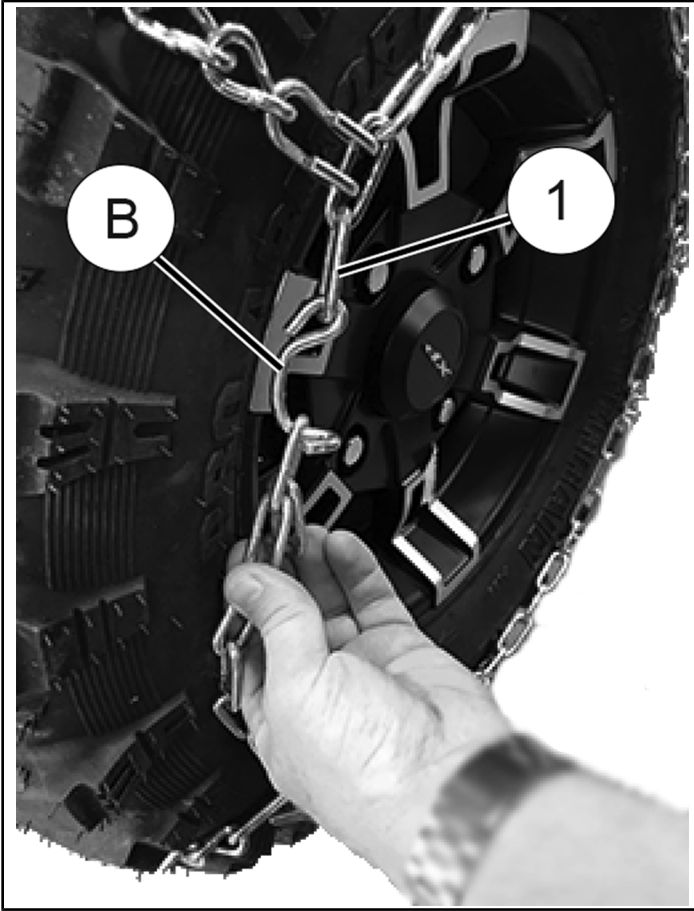

2. Adjust tire chains to fit between every other tire lug, as shown.

IMPORTANT

Make sure carbide teeth on tire chains are facing out.



3. Attach the plain hook (C) to a chain link that makes the tire chains install tight against the tire.

NOTICE

Make sure the plain hook is installed to the tightest possible chain link.



4. Attach the cam hook ② to a chain link that makes the tire chains install tight against the tire.

NOTICE


Make sure the cam hook is installed to the tightest possible chain link.



5. Turn cam over hook and attach to the next chain link.



6. Install the two center chains with shackles through the large rings ④.

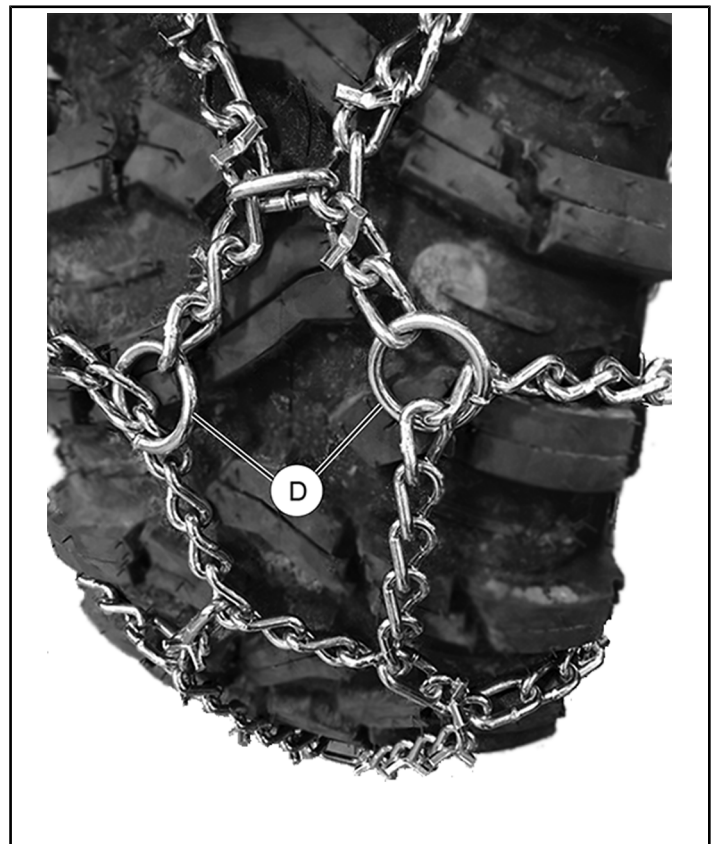

7. Attach each shackle to the closest side wall chain.



8. Install safety wire through the shackle screw head and the nearest chain link.

IMPORTANT

Safety wire is designed to prevent the shackle bolt from loosening and falling off.



9. Cut excess tire chain links or attach to tire chains with cable tie.

IMPORTANT

Make sure the excess chain links are cut or attached with a cable tie. Failure to move excess chain links out of the way could cause damage to the vehicle.



INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.



VEHICLE REASSEMBLY

GENERAL

1. Add air to rear tires. Make sure tire chains are laying flat against tires and adjust fitment as needed.

NOTICE

Fill tires to recommended PSI.

CAUTION

Maintain proper tire pressure. Refer to the warning tire pressure decal applied to vehicle. Failure to maintain proper tire pressure could cause an accident and/or damage to vehicle.

2. Shift vehicle into PARK.
3. Lower vehicle.