PLOW EXTENSION KIT



P/N 2889328

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION


Verify accessory fitment at www.polaris.com.

REQUIRED SOLD SEPARATELY

Only parts for installation of the Plow Extension Kit are included. Prior installation of the following additional kits are also required (sold separately):

• Glacier Pro Plow Blade, P/N 2879317, 2879874

KIT CONTENTS

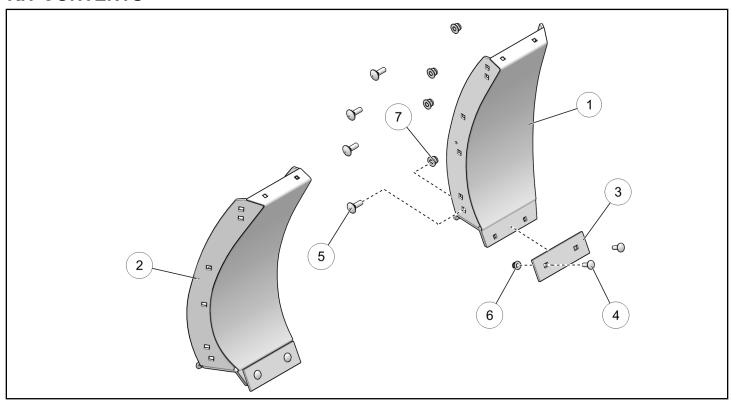

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATELY | AVAILABLE SERVICE KIT |
|-----|-----|----------------------------------|-----------------------------|--------------------------|
| 1 | 1 | Plow Extension, Left | N/A | |
| 2 | 1 | Plow Extension, Right | N/A | |
| 3 | 2 | Plate, 6.0 x 2.0 x 0.18 mm | N/A | 2209348 |
| 4 | 4 | Carriage Bolt, M8 x 1.25 x 25 mm | N/A | 2209348 |
| 5 | 8 | Carriage Bolt, M10 x 1.5 x 30 mm | N/A | |
| 6 | 4 | Nut, M8 x 1.25 mm | 7547317 | 2209348 |
| 7 | 8 | Nut, M10 x 1.5 mm | 7547423 | |

TOOLS REQUIRED

- · Socket Set, Metric
- · Torque Wrench
- · Wrench Set, Metric

IMPORTANT

Your Plow Extension Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION


GENERAL

- 1. Park vehicle on a flat surface.
- 2. Shift vehicle into PARK.
- 3. Turn key to OFF position and remove key.


ACCESSORY INSTALLATION

NOTICE


Plow bar extensions can be installed in straight or scoop mode. The following instructions depict straight mode. To assemble the scoop configuration, install the plow extensions on the opposite sides of the plow. See below for a top-down view.

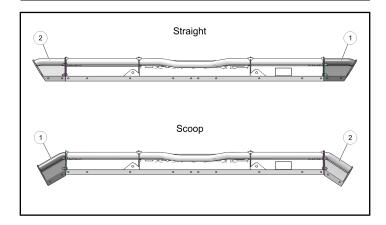


1. Align holes on the left-hand plow extension ① with corresponding holes on the plow. Assemble fasteners as shown and tighten with fingers.

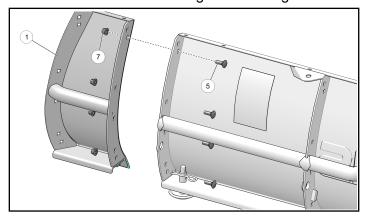

2. Repeat step one with right-hand plow extension

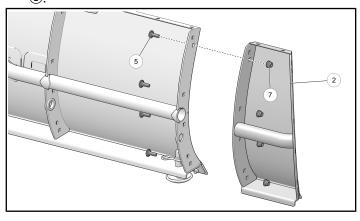


3. Attach the small plates at the bottom of both extensions with four bolts and four nuts.

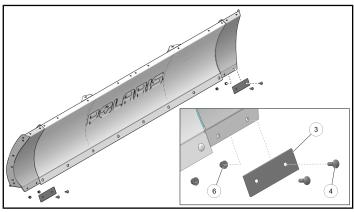

4. Torque all bolts to specification.

TORQUE Plate Fasteners: 18 ft-lbs (24 N·m)



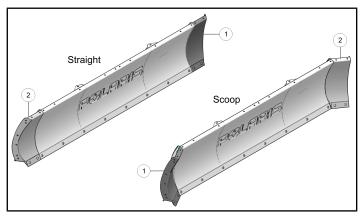

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

