# **GLACIER PLOW BACK DRAG BAR KIT**



# P/N 2889329

## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

#### **APPLICATION**


Verify accessory fitment at www.polaris.com.

#### REQUIRED SOLD SEPARATELY

Only parts for installation of the Glacier Plow Back Drag Bar Kit are included. Prior installation of the following additional kits are also required (sold separately):

• Glacier 72" Pro HD plow blade, P/N 2879317, 2879874, 3880002, 3880003, 3880004

#### KIT CONTENTS

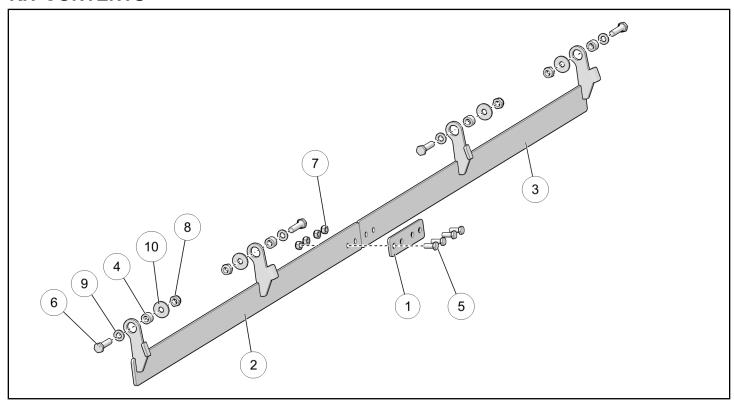

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Plate 134 x 35 x 4.0 mm	N/A	
2	1	Weld, Wear Bar, Left	N/A	
3	1	Weld, Wear Bar, Right	N/A	
4	4	Bushing, 10.5 x 18.5 x 11 mm	N/A	2209349
5	4	Screw, Hex Socket Head, M8 x 1.25 x 20 mm	7516714	2209349
6	4	Screw, Hex Socket Head, M10 x 1.5 x 40 mm	7517993	2209349
7	4	Nut, Hex, M8 x 1.25 mm	7546804	2209349
8	4	Nut, Hex, M10 x 1.5 mm	7547268	2209349
9	4	Washer, 10.5 x 20 x 2.0 mm	7556123	2209349
10	4	Washer, Flat M10 x 30 mm	7556277	2209349

# **TOOLS REQUIRED**

- · Socket Set, Metric
- · Torque Wrench
- · Wrench Set, Metric

### **IMPORTANT**

Your Glacier Plow Back Drag Bar Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

#### INSTALLATION INSTRUCTIONS


#### **VEHICLE PREPARATION**

#### **GENERAL**


- 1. Park vehicle on a flat surface.
- 2. Shift vehicle into PARK.
- 3. Turn key to OFF position and remove key.

#### **ACCESSORY INSTALLATION**


1. Align holes on the left-hand drag bar with corresponding holes on the plow. Assemble fasteners as shown and tighten with fingers.

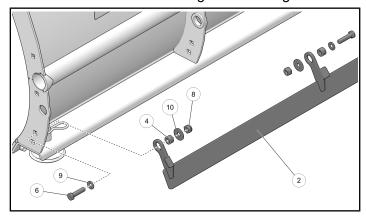

2. Repeat step one with right-hand drag bar.

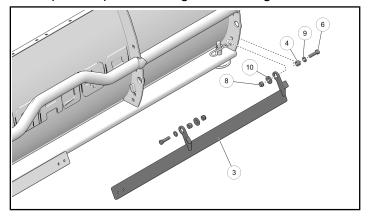

3. Attach the small plate that connects both drag bars with four screws and four nuts.

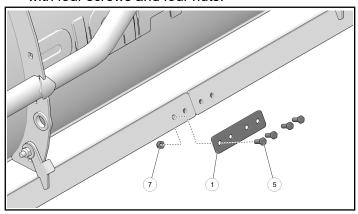


4. Torque all bolts to specification.

# TORQUE Connecting Plate Fasteners: 18 ft-lbs (24 N·m)

TORQUE

Drag Bar Fasteners:

35 ft-lbs (48 N·m)

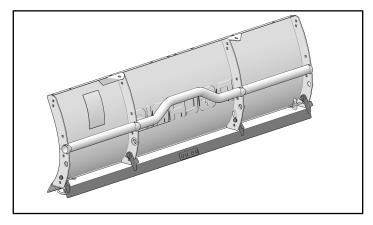

#### INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

