# **MATRYX® COVER KIT**

P\*LARS

ENGINEERED PARTS

ACCESSORIES & APPAREL

P/N 2889348; 2889914; 2890074


# **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

#### **APPLICATION**

Verify accessory fitment at www.polaris.com.

## KIT CONTENTS

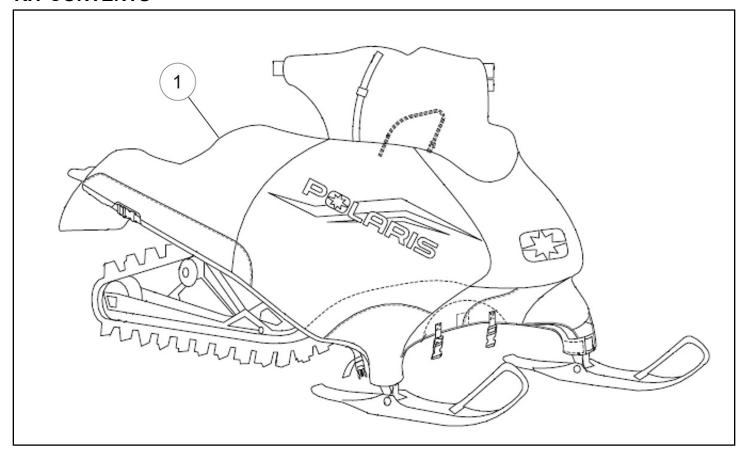

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Matryx Cinch Strap Cover	n/a

## **TOOLS REQUIRED**

None

#### **IMPORTANT**

Your Matryx® Cover Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

# **INSTALLATION INSTRUCTIONS**

## **VEHICLE PREPARATION**

#### **GENERAL**

- 1. Park vehicle on a flat surface.
- 2. Push engine stop switch to OFF position.
- 3. Turn key to OFF position and remove key.

# **ACCESSORY INSTALLATION**

## NOTICE

RMK installation shown, other models similar.


1. Put the cover over the top of the snowmobile, fitting it over the windshield and around the handlebars.



2. Put cover over front of snowmobile. Line up seam with the front bumper.

#### TIP

Use the Polaris® logo to help locate the cover on the snowmobile.

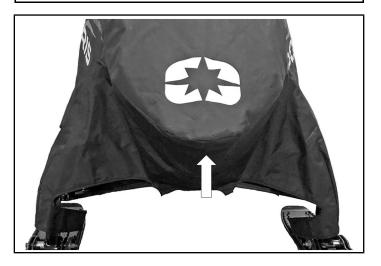


3. Put hook and loop fastener around the suspension spindles, just above the ski.



4. Connect the straps under the lower suspension arms.



5. Connect the right rear strap to the left corner of the rear bumper. Then connect the left rear strap to the right corner of the rear bumper. The straps will cross under the tunnel.

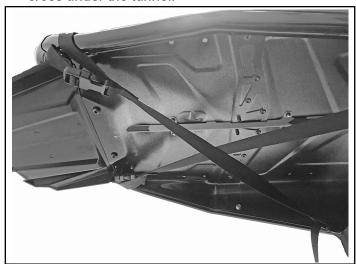

6. Pull the straps tight.



7. Make sure the cover is placed evenly on the snowmobile. Adjust windshield straps as needed.



## INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

