

RIDE COMMAND+ CONNECTED VEHICLE PLUG-IN INSTALL KIT



P/N 2889535

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION


Verify accessory fitment at www.polaris.com.

REQUIRED SOLD SEPARATELY

Only parts for installation of the Ride Command+ Connected Vehicle Plug-In Install Kit are included. For complete installation, the following additional kit is required (sold separately):

- *Plug In*, P/N 2890038

KIT CONTENTS

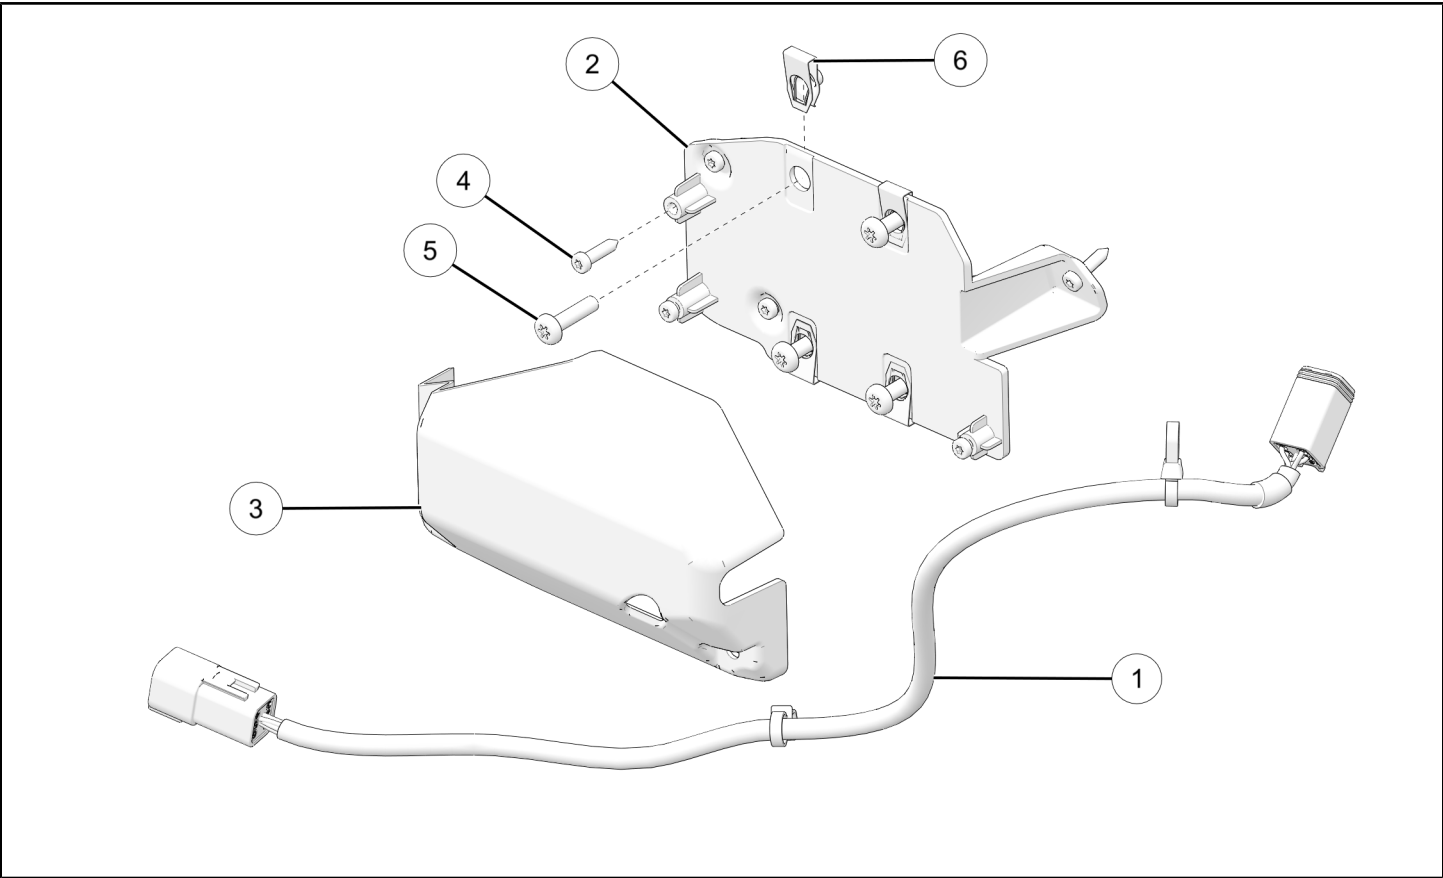

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Harness – Jumper, Plug-In, XP	2416388
2	1	Bracket – Plug-In	5459585
3	1	Cover – Plug-In	5459586
4	6	Screw – Torx®, #10 x 3/4 in	7517790

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
5	4	Screw – Torx®, Pan Head, M6 x 1.0 x 25 mm	7518535
6	4	Clip – U, M6 x 1.0 mm	7547366

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Torx® Bit

IMPORTANT

Your Ride Command+ Connected Vehicle Plug-In Install Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Park vehicle on a flat surface.
2. Push engine stop switch to OFF position.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION


1. Install four U-clips ⑥ onto plug-in bracket ②.

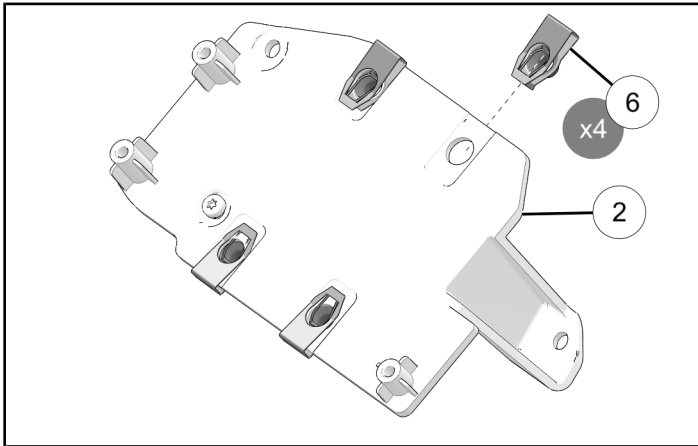

2. Locate three mounting bosses inside front left bumper on ATV.

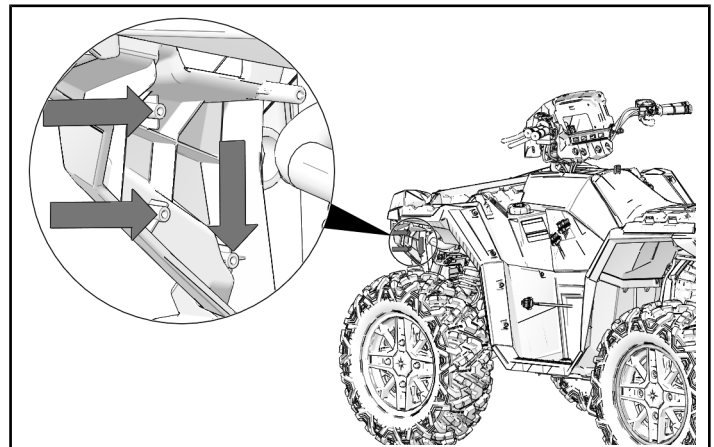



3. Install plug-in bracket ② using three screws ④. Tighten until fully seated.

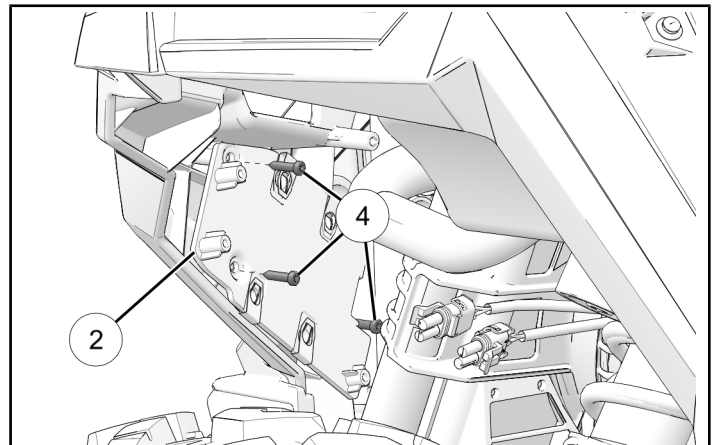


4. Install plug in ① on plug in bracket ② using four screws ⑤. Tighten until fully seated.

NOTICE


Plug-In P/N 2890038 sold separately.

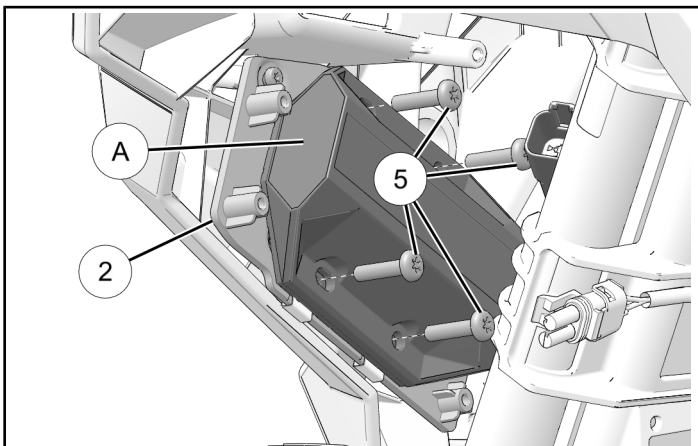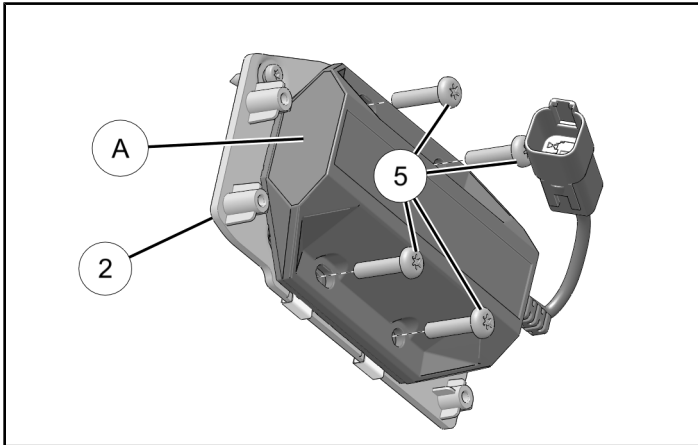

5. Install plug-in cover ③ using three screws ④. Tighten until fully seated.

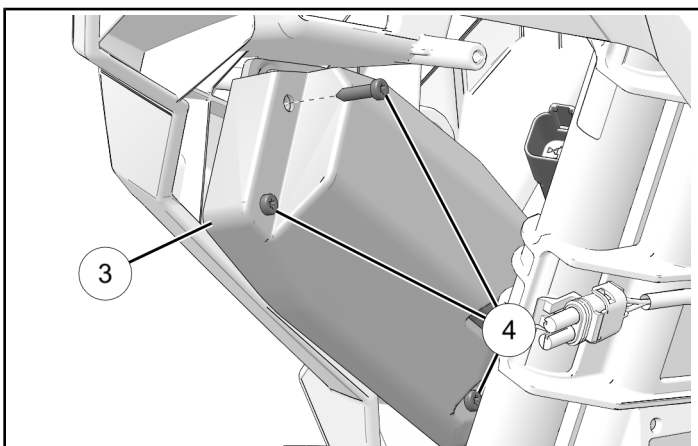



6. Connect harness ① to plug-in.

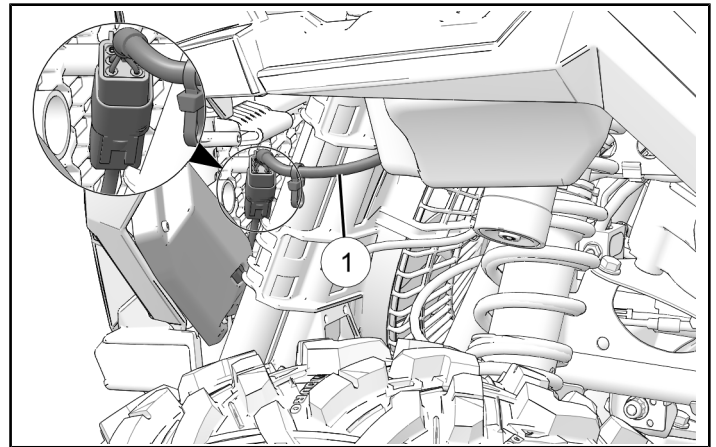

7. Route harness along existing wiring. Connect to Ride Command located under headlight area. Attach harness to existing wiring using straps.

NOTICE

Some parts hidden for clarity.

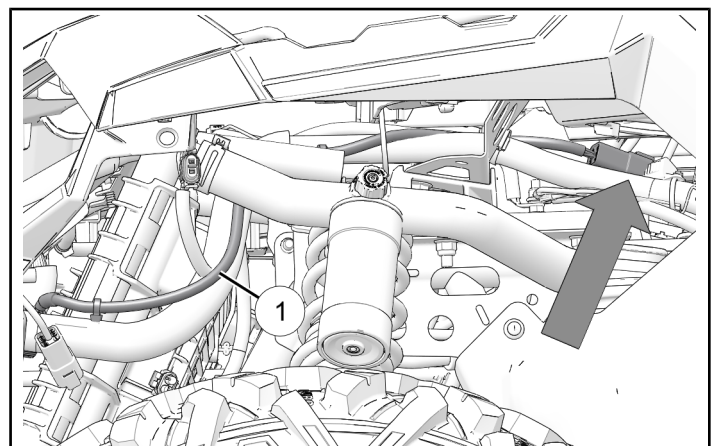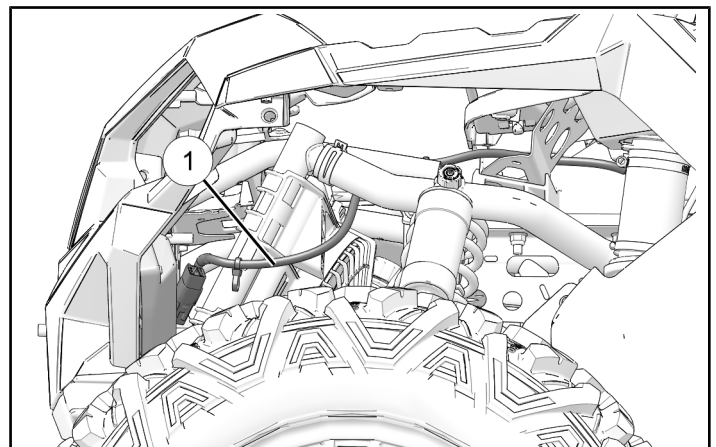

OPERATION

POLARIS® APP

Download the Polaris® App for the Apple or Android device that will be used with the connected plug in. Follow the setup procedure in the App.



INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR Code® or by clicking [HERE](#) if viewing on a PC.

