

# FRONT RECEIVER KIT



P/N 2889657


## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## KIT CONTENTS

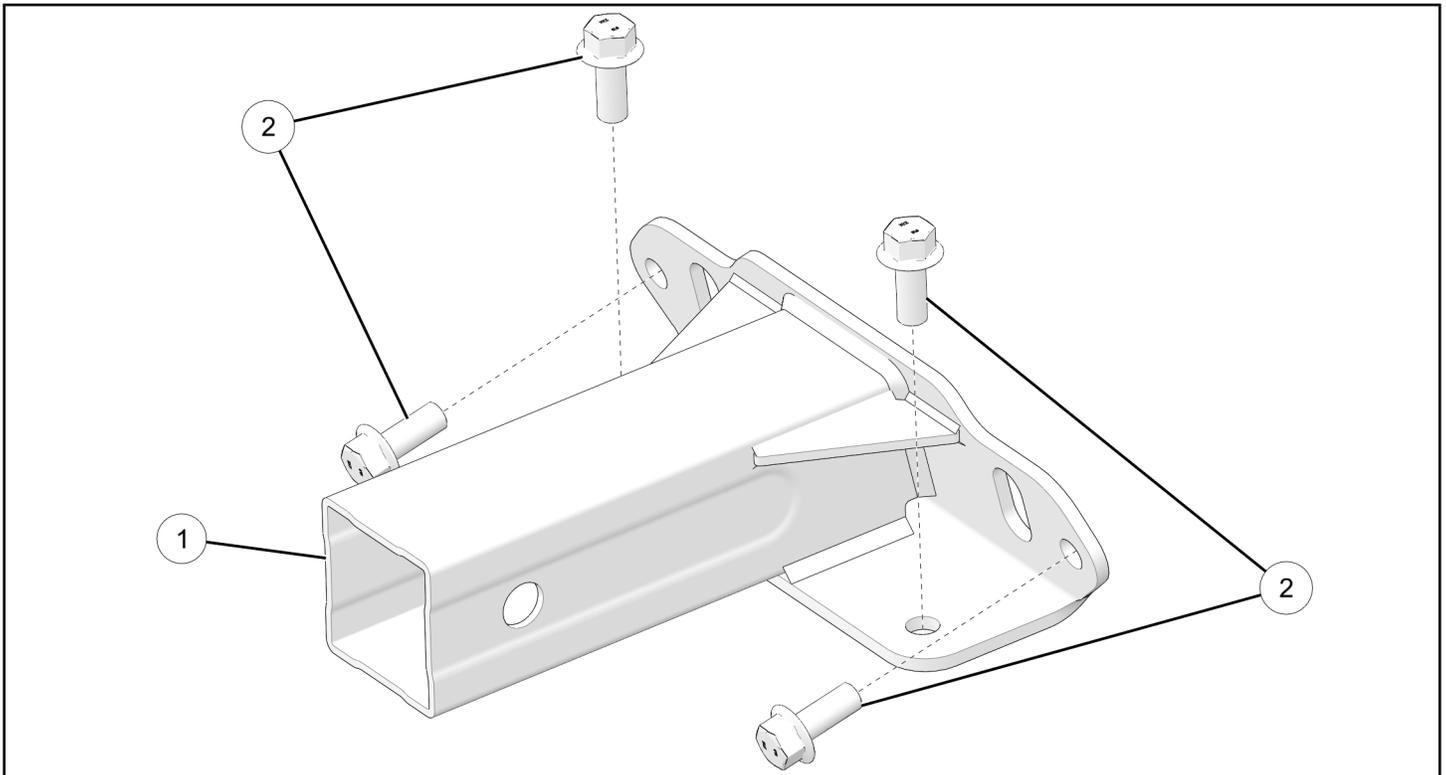

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Receiver	1027628	n/a
2	4	Screw, Hex Flange M10 x 1.5 x 25 mm	7521333-25	2209576

## TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Tap
  - M10 x 1.5 mm
- Torque Wrench

## IMPORTANT

Your Front Receiver Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

# INSTALLATION INSTRUCTIONS

## VEHICLE PREPARATION

### GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.
4. If vehicle is equipped with winch, front bumper must be removed to install front receiver. If no winch is installed, receiver can be mounted with front bumper installed.

### FRONT BUMPER REMOVAL


1. Support weight of bumper before removing screws. Remove and keep four screws from behind bumper.

#### NOTICE


Right side shown, left side similar.

#### NOTICE

Right front wheel hidden for clarity.

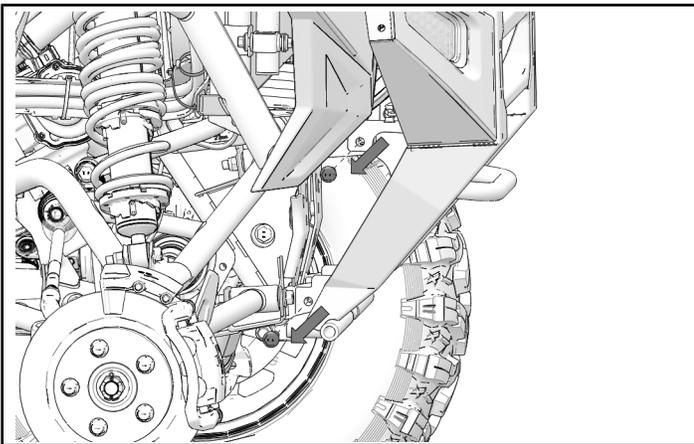

2. Pull forward to remove front bumper from vehicle.

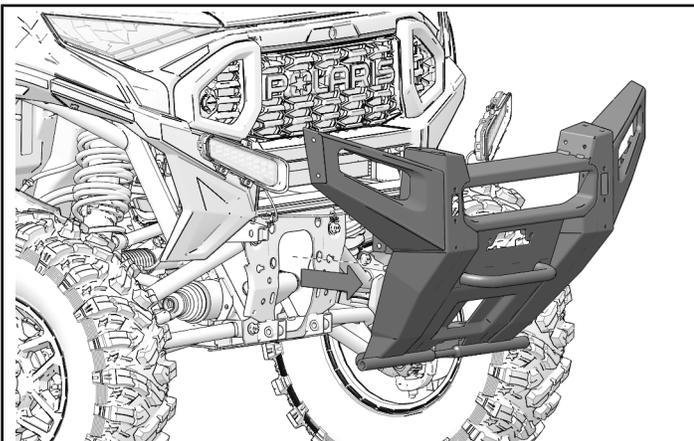

## ACCESSORY INSTALLATION


### NOTICE

Installation shown with front bumper installed, installation with front bumper removed similar.



### TIP

Check chassis holes where front receiver will be mounted. If there is paint in the holes, use M10 tap to clean holes.

1. Rotate receiver ① to fit clearance between front bumper and chassis. Insert receiver through clearance.

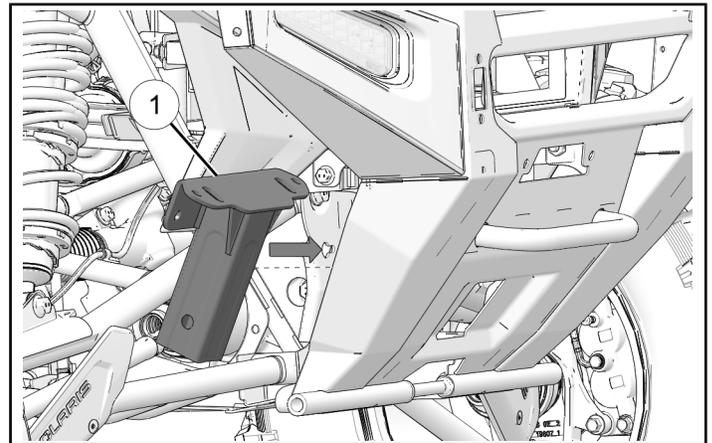

2. Rotate receiver into proper position through front bumper hole.

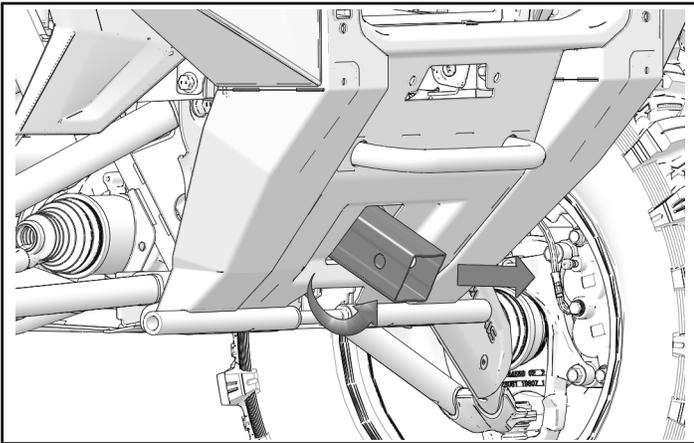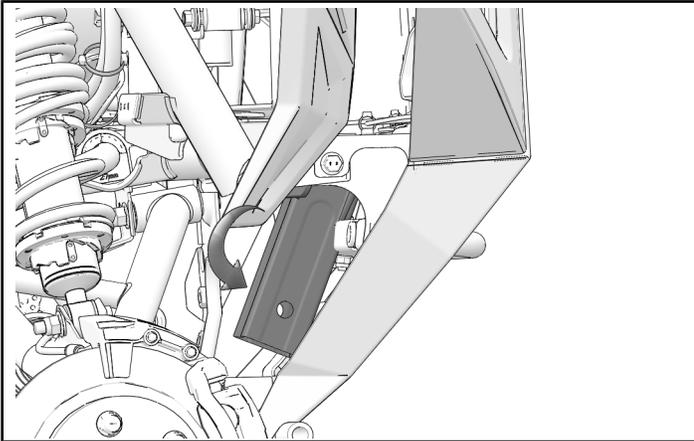


3. Loosely install two screws ② in lower holes of receiver.

DO NOT torque fasteners at this time.

**NOTICE**

Right side shown, left side similar.

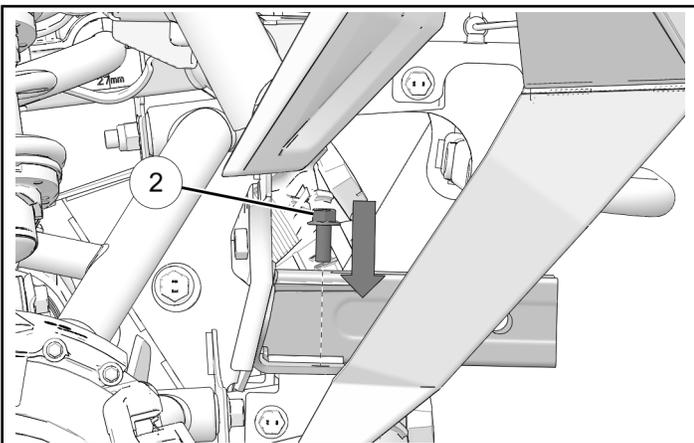


4. Loosely install two screws ② in upper holes of receiver.

DO NOT torque fasteners at this time.

**NOTICE**

Right side shown, left side similar.

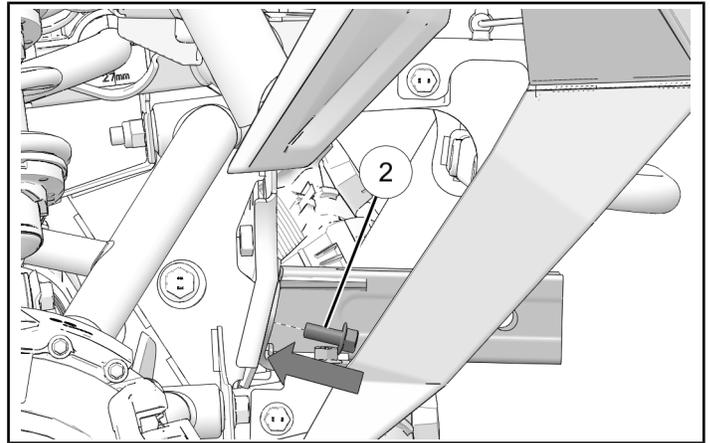

5. Tighten four screws ② to specification.


**TORQUE**

Screws ②:  
16 ft-lbs (22 N·m)

**VEHICLE REASSEMBLY**

**FRONT BUMPER INSTALL**

1. Install front bumper on vehicle.

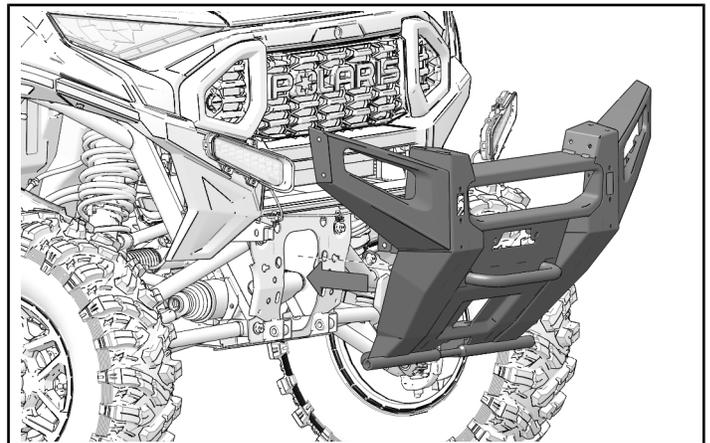

2. Support weight of bumper while installing screws. Install four screws. After all four screws are installed, torque screws to specification.

**NOTICE**


Right side shown, left side similar.

**NOTICE**

Right front wheel hidden for clarity.

**TORQUE**

Bumper Screws:  
**33 ft-lbs (45 N·m)**

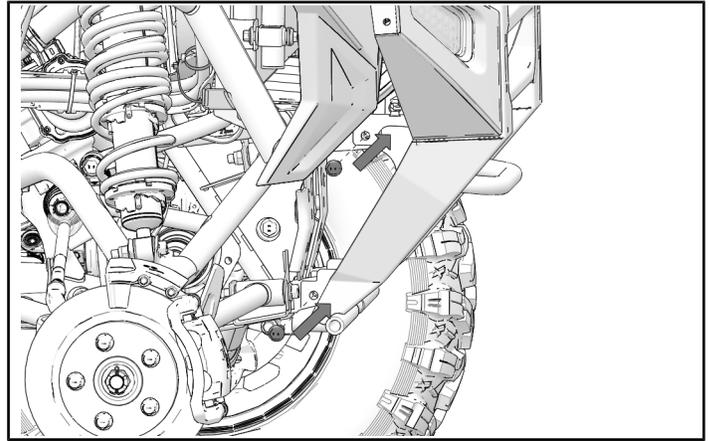

## INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR Code® or by clicking [HERE](#) if viewing on a PC.

