

PLOW EXTENSION



P/N 2889748

MISSING OR DAMAGED PARTS

Before beginning assembly, inspect the kit and its component(s) to be sure all parts and tools are accounted for and not damaged. If missing parts or parts are damaged, please contact your Selling Dealer for assistance.

If your accessory was purchased online, please contact POLARIS® customer service at **1-800-POLARIS** (US & Canada only).

APPLICATION

Verify accessory fitment at www.polaris.com.

IMPORTANT

This kit is not compatible with Kit P/N 2889749

REQUIRED SOLD SEPARATELY


Only parts for installation of the Plow Extension are included. For complete installation, the following additional kit is required (sold separately):

- *Straight Blade Kit*, P/N 2889111
- *Plow Frame Kit*, P/N 2889112

The following additional kit is optional (sold separately):

- *Heavy Duty Snow Plow Deflector 72 Kit*™, P/N 2884160

KIT CONTENTS

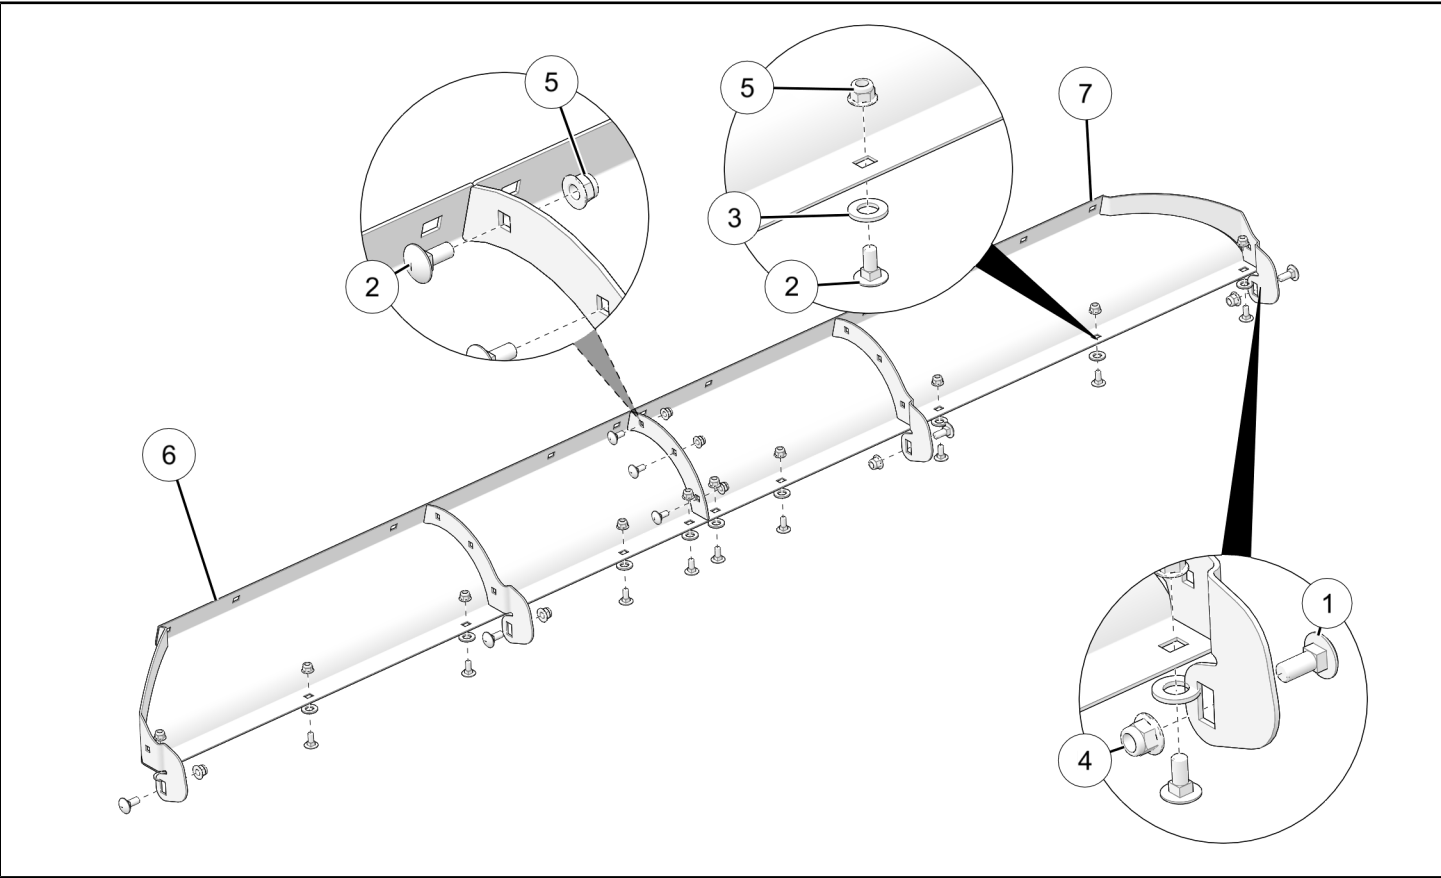

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	4	Carriage Bolt M10 x 1.5 x 25 mm	n/a	2209945
2	13	Carriage Bolt M8 x 1.25 x 20 mm	n/a	2209945
3	10	Flat Washer M12	n/a	2209945
4	4	Hex Nylon Flange Nut M10 x 1.5 mm	n/a	2209945
5	13	Hex Nylon Flange Nut M8 x 1.25 mm	n/a	2209945
6	1	Welded Curved Snow Deflector Left	n/a	n/a
7	1	Welded Curved Snow Deflector Right	n/a	n/a

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Torque Wrench

IMPORTANT

Your Plow Extension is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION


GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION


1. Loosely install both left and right snow deflectors ⑥ and ⑦ onto straight blade (Kit P/N 2889111) with four carriage bolts ① and four nuts ④.

DO NOT torque fasteners at this time.

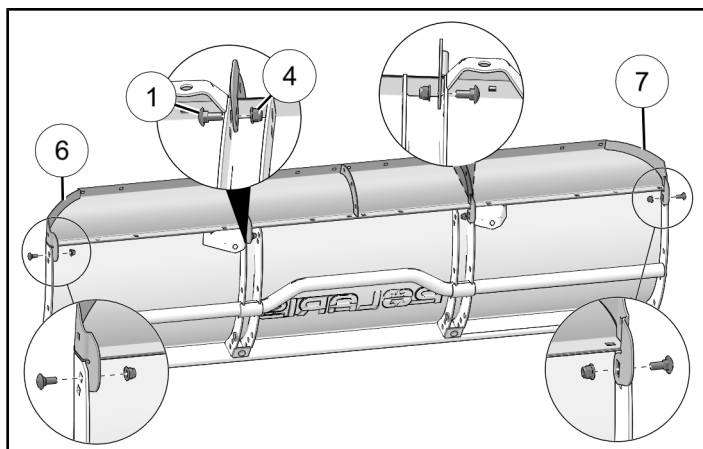


2. Loosely install ten carriage bolts ②, ten washers ③ and ten nuts ⑤.

DO NOT torque fasteners at this time.

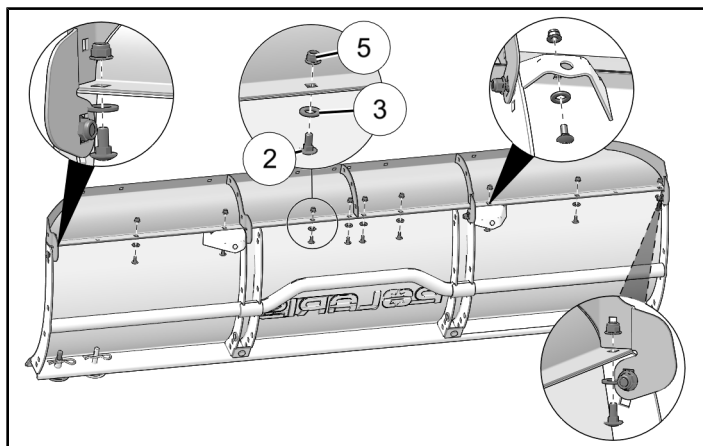

3. Attach left and right snow deflector ⑥ and ⑦ together loosely with three carriage bolts ② and three nuts ⑤.

DO NOT torque fasteners at this time.

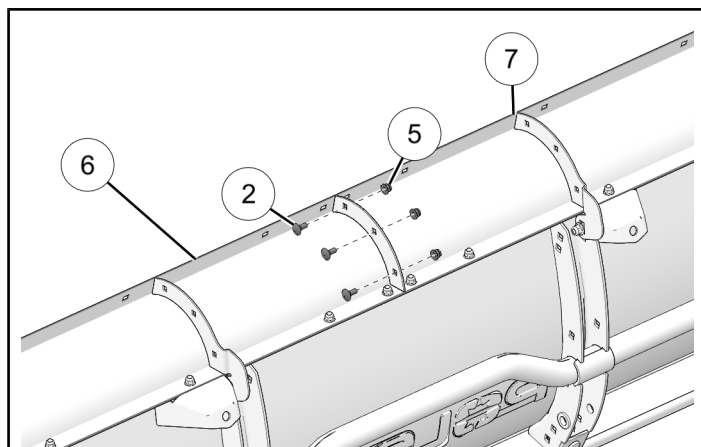

4. Torque all nuts ④ and ⑤ to specification.

TORQUE

Nuts ④ ⑤:
25 ft-lbs (18 N·m)