

BED TRIM KIT



P/N 2891542; 2891684

BEFORE YOU BEGIN


Before beginning assembly, inspect the kit and its component(s) to be sure all parts and tools are accounted for and not damaged. If missing parts or parts are damaged, please contact your Selling Dealer for assistance.

If your accessory was purchased online, please contact POLARIS customer service at **1-800-POLARIS** (US & Canada only).

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

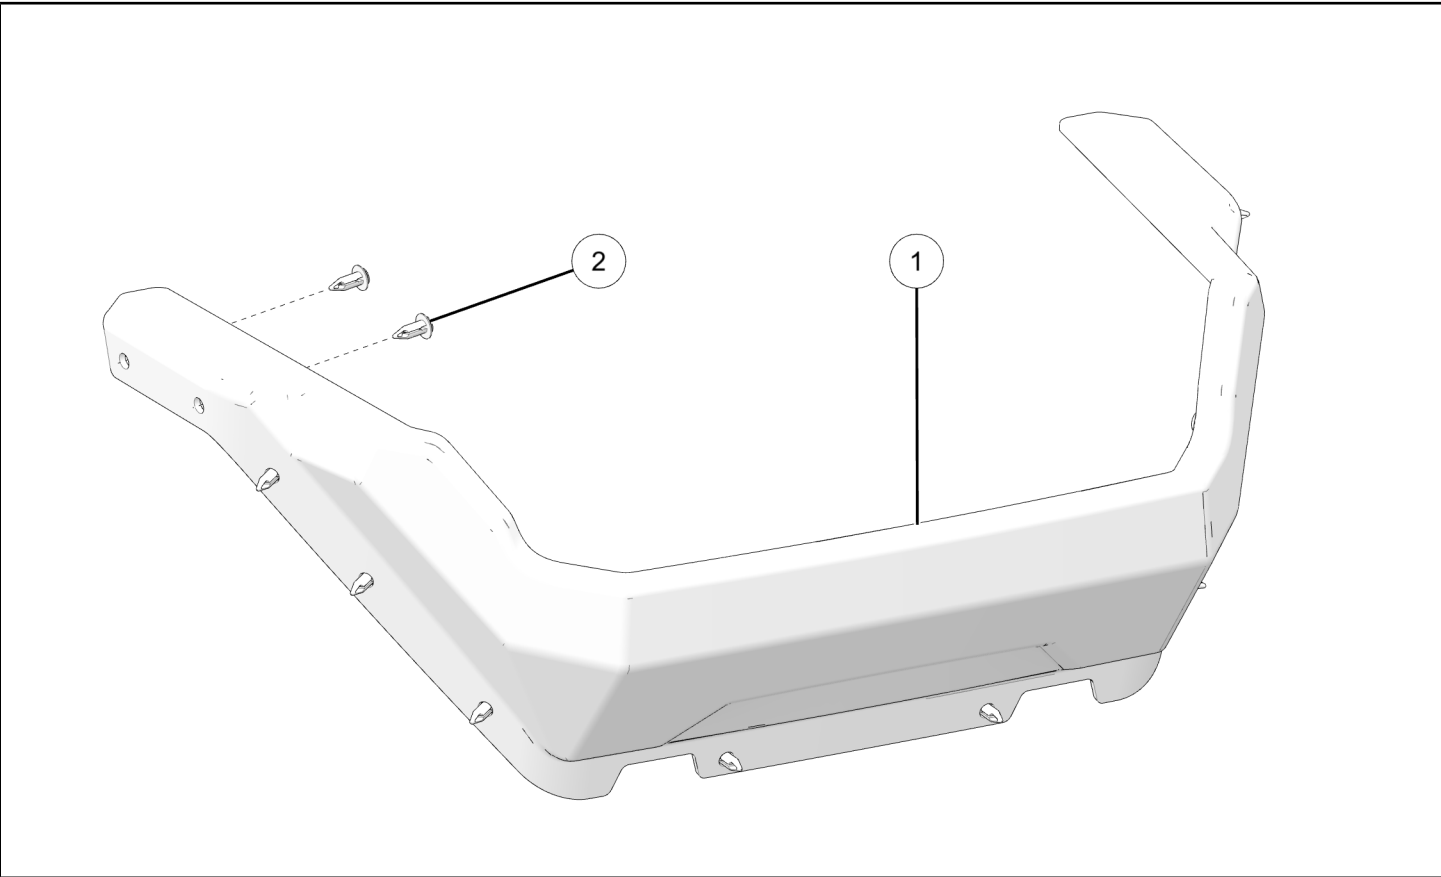

NOTICE
P/N 2891684 shown; P/N 2891542 similar.

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Assembly, Bed Trim	n/a
2	12	Rivet, Push-Pin	7661855

TOOLS REQUIRED

- Safety Glasses
- Drill
- Drill Bit:
 - 5/16 in (8 mm)
- Socket Set, Hex Bit, Metric
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Bed Trim Kit is exclusively designed for your vehicle. Please read the installation instructions completely before beginning. Installation is simpler if the vehicle is clean and free of debris. For your safety, and to encourage a successful installation, do all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION


NOTICE

P/N 2891684 shown; P/N 2891542 similar.

NOTICE

Parts of vehicle have been hidden for clarity.

1. Put bed trim ① in cargo bed at rear of vehicle.
Make sure slots on rear of bed trim assembly align with indents on rear of cargo bed.

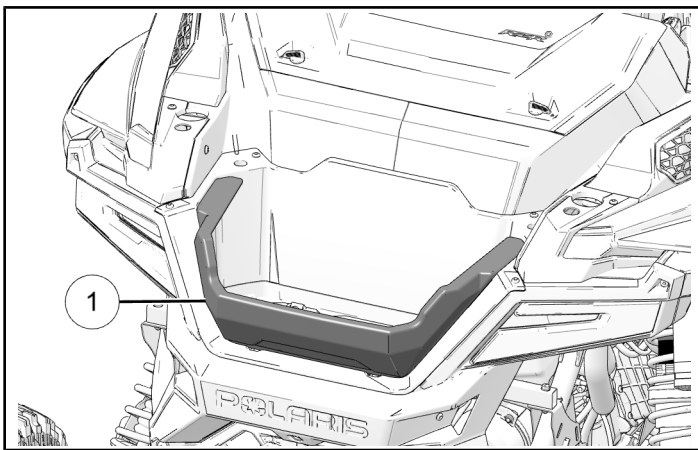




- Using bed trim assembly as a guide, locate and drill twelve holes in vehicle frame in locations shown.

NOTICE

Parts of vehicle have been hidden for clarity.

MEASUREMENT

Drill Bit Size: **5/16 in (8 mm)**

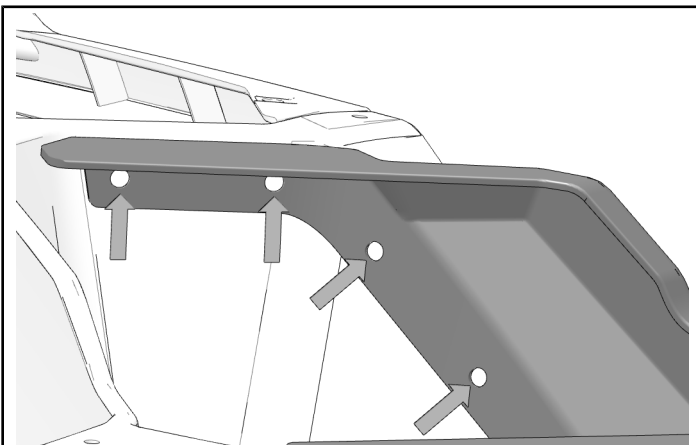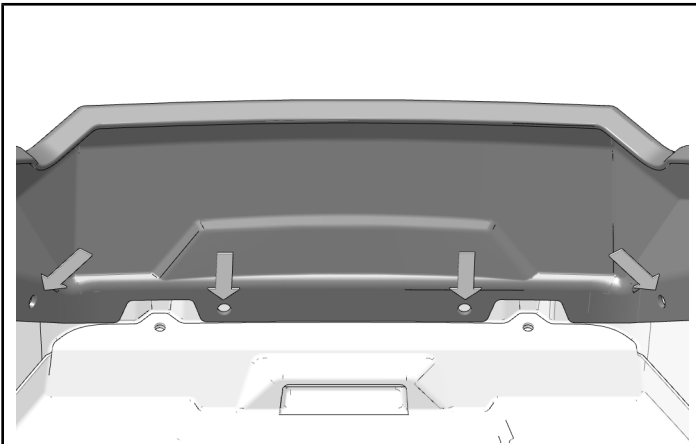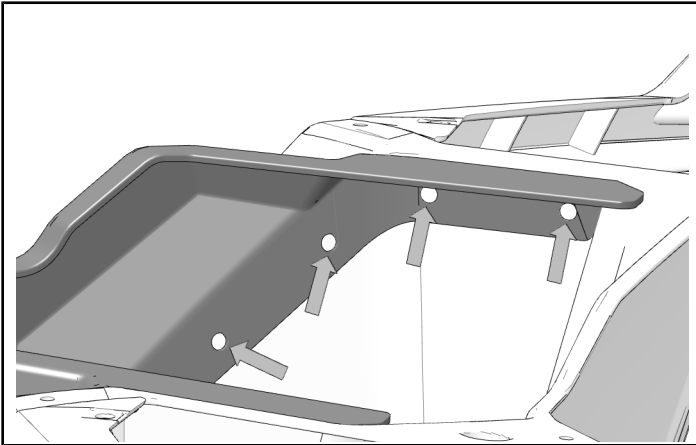

- Install twelve push-pin rivets ② in previously drilled locations.

NOTICE

Parts of vehicle have been hidden for clarity.

